

HF2211

Serial Server Device User Manual

V 1.1



Overview of Characteristic

- ✧ **MIPS MCU with 4MB Flash and 8MB SRAM. Run on eCos**
- ✧ **Support TCP/IP/Telnet /Modbus TCP Protocol**
- ✧ **Support RS232/RS422/RS485 to Ethernet/Wi-Fi Conversion, Serial Speed Upto 460800 bps**
- ✧ **Support STA/AP/AP+STA Mode**
- ✧ **Support Router or Bridge Network Working Mode.**
- ✧ **Support 10/100M Ethernet Auto-Negotiation**
- ✧ **Support Easy Configuration Through a Web Interface or PC IOTService Tool**
- ✧ **Support Security Protocol Such As SSL/AES/DES3**
- ✧ **Support Web OTA Wireless Upgrade**
- ✧ **Wide DC Input 5~36VDC or 9~50VDC**
- ✧ **Size: 95 x 65 x 25 mm (L x W x H)**
- ✧ **FCC/CE/RoHS Certificated**

TABLE OF CONTENTS TABLE OF CONTENTS

TABLE OF CONTENTS	TABLE OF CONTENTS	2
LIST OF FIGURES		5
LIST OF TABLES		7
HISTORY		7
1. PRODUCT OVERVIEW		8
1.1. General Description		8
1.2. Device Features		8
1.3. Device Parameters		9
1.4. Key Application		10
2. HARDWARE INTRODUCTION		11
2.1. Pins Definition		12
2.2. RS232 Interface		14
2.3. RS485 Interface		14
2.4. RS422 Interface		14
2.5. RJ45 Interface		15
2.6. Mechanical Size		15
2.7. Rail Mounting		16
2.8. Order Information		16
2.9. Package Information		17
3. FUNCTIONAL DESCRIPTION		18
3.1. Basic Network Protocol		18
3.2. Wireless Network		18
3.2.1. AP Network		19
3.2.2. STA Wireless Network		20
3.2.3. AP+STA Wireless Network		20
3.2.5. IOTService Software		22
3.2.6. Webpage Configuration		22
3.3. Ethernet Interface Function		23
3.3.1. Ethernet Port with Wi-Fi		23
3.3.2. Ethernet Interface Function(Router)		25
3.3.3. Ethernet Port Function(Bridge)		26
3.4. Working Mode		27
3.4.1. Transparent Transmission Mode		27
3.4.2. TCP Server		28
3.4.3. HTTP Mode		29
3.4.4. Telnetd Mode		31
3.5. AES/DES3/TLS Data Encryption		32
3.6. Keepalive		33
3.7. Timeout		33
3.8. Route Setup		34

3.9. UART Frame Scheme	35
3.9.1. UART Free-Frame	35
3.9.2. UART Auto-Frame	35
3.9.3. Tag Function	36
3.10. Modbus Protocol	36
3.11. Cli Command	37
3.12. UART Flow Control and RS485 Function	37
3.13. Firmware Upgrade	38
3.14. Web Page Function	39
3.15. Auto-IP Function	39
3.16. NTP Function	39
3.17. Heartbeat Function	40
3.18. UART Fast Config	40
3.19. Other Function	40
4. CLI COMMAND NOTES	42
 4.1. Working Mode	42
4.1.1. Switch Transparent Transmission Mode to Cli Command Mode	42
 4.2. Cli Command Overview	43
4.2.1. Cli Command Format	46
4.2.1.1. Show Command	46
4.2.1.2. SYS Directory	47
4.2.1.3. SYS/Auth Directory	47
4.2.1.4. SYS/Auth/User Command	47
4.2.1.5. SYS/Auth/Password Command	48
4.2.1.6. SYS/Network Directory	48
4.2.1.7. SYS/Network>Show Command	48
4.2.1.8. SYS/Network/DHCP Command	48
4.2.1.9. SYS/Network/DNS Command	48
4.2.1.10. SYS/Network/Mode Command	49
4.2.1.11. SYS/Network/Hostname Instruction	49
4.2.1.12. SYS/Telnet Instruction	49
4.2.1.13. SYS/Web Instruction	50
4.2.1.14. SYS/MAC Instruction	50
4.2.1.15. SYS/JCMD Instruction	50
4.2.1.16. SYS/NTP Instruction	50
4.2.1.17. UART Directory	51
4.2.1.18. UART>Show Instruction	51
4.2.1.19. UART>Baudrate Instruction	51
4.2.1.20. UART>Databits Instruction	51
4.2.1.21. UART>Stopbits Instruction	52
4.2.1.22. UART>Parity Instruction	52
4.2.1.23. UART>Buf Directory	52
4.2.1.24. UART>Buf/Bufsize Instruction	52
4.2.1.25. UART>Buf/GapTime Instruction	53

4.2.1.26. UART/Buf/FlowCtrl Command.....	53
4.2.1.27. UART/Buf/SWFlowCtrl Command.....	53
4.2.1.28. UART/Cli-Getin Command	54
4.2.1.29. UART/Cli-WaitTime Command.....	54
4.2.1.30. UART/Proto command	54
4.2.1.31. UART/Frame Directory	55
4.2.1.32. UART/Frame/FrameLen Command	55
4.2.1.33. UART/Frame/FrameTime Command	55
4.2.1.34. UART/Frame/Tag Command.....	55
4.2.1.35. UART/Edit Command	56
4.2.1.36. UART/Clean Command.....	56
4.2.1.37. SOCK Directory	56
4.2.1.38. SOCK>Show Command.....	56
4.2.1.39. SOCK/New Command.....	56
4.2.1.40. SOCK/netp directory.....	58
4.2.1.41. SOCK/netp/clean Command	58
4.2.1.42. DATA Directory.....	59
4.2.1.43. Restart Command	59
4.2.1.44. Reload Instruction.....	59
4.2.1.45. WIFI Catalog.....	59
4.2.1.46. WIFI>Show Command	59
4.2.1.47. WIFI/Mode Command	60
4.2.1.48. WIFI>Status Command	60
4.2.1.49. WIFI/Scan Command	60
4.2.1.50. Exit Command	61
4.2.1.51. Quit Command	61
4.2.1.52. FwUpgrade Instruction	61
APPENDIX A:REFERENCES	62
A.1. Test Tools	62
A.2. Quick Start Manual	62
APPENDIX B:TELNET COMMUNICATION FUNCTION	63
B.1. Telnet Use Scene:	63
B.2. Telnet Features:	63
B.3. Telnet Usage:.....	63
APPENDIX C: CONTACT INFORMATION	67

LIST OF FIGURES

Figure 1. HF2211 Appearance	11
Figure 2. HF2211 Interface.....	12
Figure 3. HF2211 Side View.....	13
Figure 4. RS232 Pin Defination(Male/Needle Type).....	14
Figure 5. HF2211 RS422 Connection.....	15
Figure 6. RJ45 Pin Defination.....	15
Figure 7. HF2211 Mechanical Dimension.....	16
Figure 8. HF2211 Rail	16
Figure 9. HF2211 Product Order Information	17
Figure 10. HF2211 Software Protocol Structure	18
Figure 11. HF2211 Function Structure	19
Figure 12. General AP Network.....	19
Figure 13. STA Application.....	20
Figure 14. AP+STA Wireless Network.....	21
Figure 16. Configure Wi-Fi Parameter.....	22
Figure 17. STA Scan Parameter.....	22
Figure 18. Configure the Wi-Fi Parameter.....	23
Figure 19. STA Scan	23
Figure 20. Ethernet Interface Function	24
Figure 21. Ethernet Interface Function(Router)	25
Figure 22. Ethernet Port Function(Bridge)	26
Figure 23. Transparent data transmission example.....	28
Figure 24. TCP Server data transmission example	28
Figure 25. Multi Socket data transmission example	28
Figure 26. Webpage set up multi Socket channel	29
Figure 27. IOT Manager Software Configure.....	29
Figure 28. Web Page Configure	30
Figure 29. HTTP transmit example.....	30
Figure 30. IOTService Software Configure Protocol.....	31
Figure 31. Web page configure protocol.....	31
Figure 32. Telnet details example.....	32
Figure 33. IOTService Software Configure Encryption	32
Figure 34. Web Page Configure Encryption	33
Figure 35. Web Page Config Keepalive.....	33
Figure 36. Web Page Configure Timeout	34
Figure 37. Route function setup example	34
Figure 38. Route Function Data Flow Example	35
Figure 39. UART free-frame function.....	35
Figure 40. UART Auto-Frame Function	36
Figure 41. UART Auto-Frame Function	36
Figure 42. UART Auto-Frame Tag Function	36
Figure 43. UART Modbus Function	37
Figure 44. Cli Command Setting.....	37

Figure 45. UART Flow Control.....	37
Figure 46. UART Half Duplex Function	38
Figure 47. External web page.....	38
Figure 48. Internal web page	38
Figure 49. Web Page Function Setting.....	39
Figure 50. AUTO-IP Connection.....	39
Figure 51. IOTService Tools NTP Setting	40
Figure 52. Cli Command NTP Setting and Query.....	40
Figure 53. Heartbeat Function	40
Figure 54. Other Function.....	41
Figure 55. HF2211 Default: UART Parameters	42
Figure 56. Switch Transparent Transmission Mode to Cli Command Mode	43
Figure 57. Cli Command Root Directory	43
Figure 58. Cli Command SYS Tree	44
Figure 59. Cli Command UART Tree.....	44
Figure 60. Cli Command SOCK Tree	45
Figure 61. Cli Other Command.....	46

LIST OF TABLES

Table 1. HF2211 Technical Specifications	9
Table 2. HF2211 Interface Definition	13
Table 3. RS232 Interface.....	14
Table 4. RJ45 Interface	15

HISTORY

Ed. V1.0 08-03-2017

First Version

Ed. V1.1 06-07-2017

Update to 1.09j version. IOTService Update to 2.07e.

1. PRODUCT OVERVIEW

1.1. General Description

The HF2211 provides RS232/RS485/RS422 interface to Ethernet/Wi-Fi connectivity to web enable any device. The HF2211 integrate TCP/IP controller, memory, 10/100M Ethernet transceiver, high-speed serial port and integrates a fully developed TCP/IP network stack and ECos OS. The HF2211 also includes an embedded web server used to remotely configure, monitor, or troubleshoot the attached device.

The HF2211 using highly integrated hardware and software platform, It has been optimized for all kinds of applications in the industrial control, smart grid , personal medical application and remote control that have lower data rates, and transmit or receive data on an infrequent basis.

The HF2211 integrates all serial to Ethernet functionality with 95 x 65 x 25mm size..

1.2. Device Features

- MIPS MCU with 4MB Flash and 8MB SRAM
- Support ECos Operation System
- Support TCP/IP、UDP、DHCP、DNS、HTTP Server/Client、ARP、BOOTP、AutoIP、ICMP、Telnet、FTP、TFTP、uPNP、NTP、ModbusTCP Protocol
- Support Serial to 10/100M Ethernet Conversion, Serial Speed Upto 460800 bps
- Support 10/100M Ethernet Auto-Negotiation
- Support STA/AP/AP+STA Wireless Working Mode
- Support Easy Configuration Through a Web Interface
- Support Security Protocol Such As SSL/AES/DES3
- Support Web Wireless Upgrade
- Wide 5~36VDC or 9~50VDC Power Supply
- Size: 95 x 65 x 25mm (L x W x H)
- FCC/CE/RoHS Certificated

1.3. Device Parameters

Table 1. HF2211 Technical Specifications

Item	Parameters
System Information	
Processor/Frequency	MIPS/320MHz
Flash/SDRAM	4MB/8MB
Operating System	ECos
Ethernet Port	
Port Number	1 RJ45
Interface Standard	10/100 Base-T Auto-Negotiation
Protection	8KV Isolation
Transformer	Integrated
Network Protocol	IP, TCP, UDP, DHCP, DNS, HTTP Server/Client, ARP, BOOTP, AutoIP, ICMP, Web socket, Telnet, FTP,TFTP, uPNP, NTP, SNMP,Modbus TCP
Security Protocol	SSL v3 AES 128Bit DES3
IPV6 Support	Plan to Support
Wi-Fi Interface	
Standard	802.11 b/g/n
Frequency	2.412GHz-2.484GHz
Network Mode	STA/AP/STA+AP
Security	WEP/WPA-PSK/WPA2-PSK
Encryption	WEP64/WEP128/TKIP/ AES
Tx Power	802.11b: +20dBm(Max.) 802.11g: +18dBm(Max.) 802.11n: +15dBm(Max.)
Rx Sensitive	802.11b: -89dBm 802.11g: -81dBm 802.11n: -71dBm
Antenna	3dBi Stick Antenna
Serial Port	
Port Number	1 RS232/RS485/RS422
Interface Standard	RS232: DB9 RS485/RS422: 5.08mm connector Support one channel of RS232/RS422/RS485.
Data Bits	8
Stop Bit	1,2
Check Bit	None,Even,Odd,Space,Mark
Baud Rate	TTL: 600 bps~460800 bps
Flow Control	No Flow control Hardware RTS/CTS、 DSR/DTR Software Xon/ Xoff flow control
Software	

Web Pages	Http Web Configuration Customization of HTTP Web Pages
Configuration	Web CLI XML import Telnet IOTService PC Software
Firmware Upgrade	Web
SDK For Dev.	Plan to Provide
Basic Parameter	
Size	95 x 65 x 25 mm
Operating Temp.	-45 ~ 70°C
Storage Temp.	-45 ~ 105°C, 5 ~ 95% RH (no condensation)
Input Voltage	5~36VDC or 9~50VDC
Working Current	~200mA
Power	<700mW
Other Information	
Certificate	CE, FCC, RoHS

1.4. Key Application

The HF2211 device connects serial device to Ethernet networks using the TCP/IP protocol:

- Remote equipment monitoring
- Asset tracking and telemetry
- Security Application
- Industrial sensors and controls
- Medical devices
- ATM machines
- Data collection devices
- Universal Power Supply (UPS) management units
- Telecommunications equipment
- Data display devices
- Handheld instruments
- Modems
- Time/attendance clocks and terminals

2. HARDWARE INTRODUCTION

The HF2211 unit is a complete solution for serial port device connecting to network. This powerful device supports a 10/100BASE-T Ethernet connection, a reliable and proven operating system stored in flash memory, an embedded web server, a full TCP/IP protocol stack, and standards-based (AES) encryption.

Through Ethernet cable connect router with HF2211 serial server for data transfer, which makes the data transformation very simple. HF2211 meet EMC Class B security level, It can pass every countries relevant certification test



Figure 1. HF2211 Appearance

2.1. Pins Definition

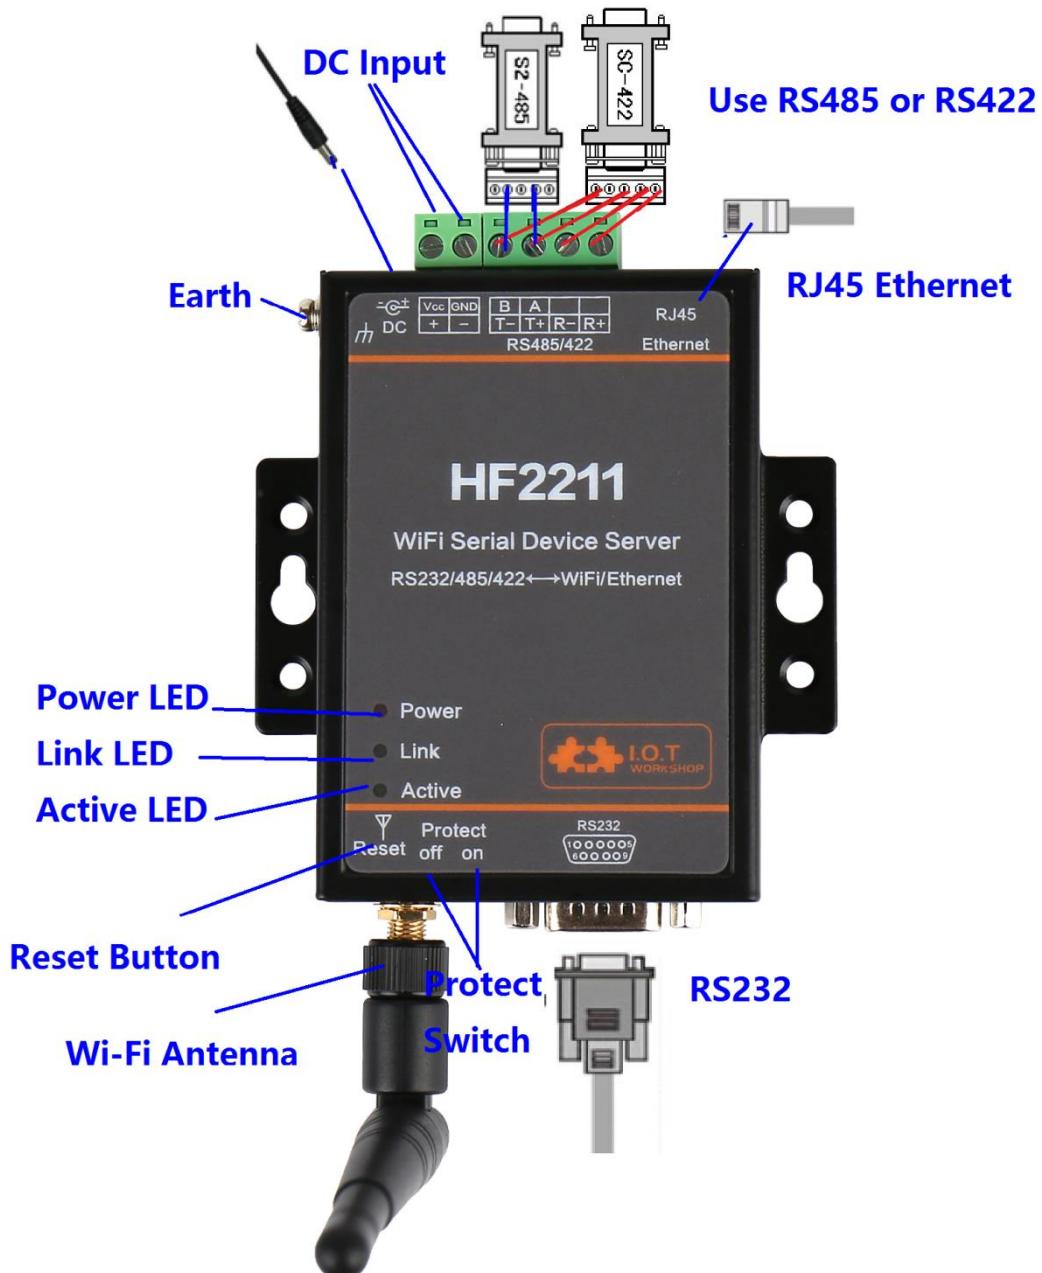


Figure 2. HF2211 Interface

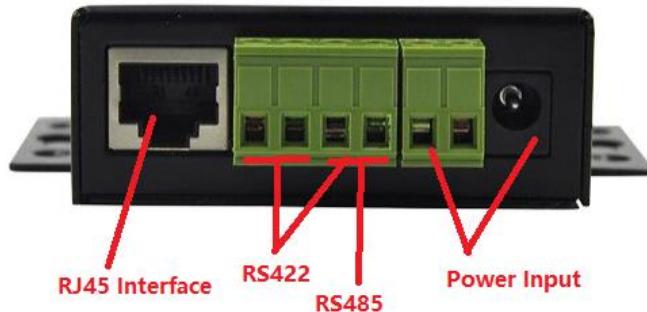


Figure 3. HF2211 Side View

Table 2. HF2211 Interface Definition

Function	Name	Description
External Interface	RJ45 Ethernet	10/100M Ethernet
	SMA	Antenna SMA Interface
	RS232	RS232 Communication
	RS485/RS422	RS485/RS422 Communicaton
	Earth	Protect Earth
	DC Input	DC Power 5~36V Input or 9~50VDC
LED Indicator	Power	Internal Power Supply Indicator On : Power is OK Off : Power is NG
	Link	Connection Indicator On: Ethernet connection or Wi-Fi STA connection is OK Off: No Ethernet connection
	Active	Data transfer Indicator On : Data is transferring. Off : No data transfer
Button	Reset	Restore to factory setting Long press this button for 3seconds and loose it to restore parameters to factory setting. Note : This button of early product is just restart. The hardware has been modified to factory setting now.
Switch	Protect	Device parameter protect On: Enable protect, working parameter can not be modified. Off: Disable protect.

2.2. RS232 Interface

Device serial port is male(needle), RS232 voltage level(can connect to PC directly), Pin Order is consistent with PC COM port. Use cross Cable connected with PC(2-3 cross, 7-8 cross, 5-5 direct, 7-8 no connection), see the following table for pin definition.



Figure 4. RS232 Pin Definition(Male/Needle Type)

Table 3. RS232 Interface

Pin Number	Name	Description
2	RXD	Receive Data
3	TXD	Send Data
5	GND	GND
7	RTS	Request to Send
8	CTS	Clear to Send

2.3. RS485 Interface

RS485 use two wire links, A(DATA+), B(DATA-). Connect A(+) to A(+), B(-) to B(-) for communication.

The RS485 interface support maximum 32 485 device, special hardware version can support max 255 device. The cable maximum length is 1200 meters. Need to add 120Ohm terminal resistor for over 300 meters.

2.4. RS422 Interface

RS422 interface use T+/T-/R+/R-, cross connect to device as the following picture.

Name	Description
TX+	Transfer Data+
TX-	Transfer Data-
RX+	Receive Data+
RX-	Receive Data-

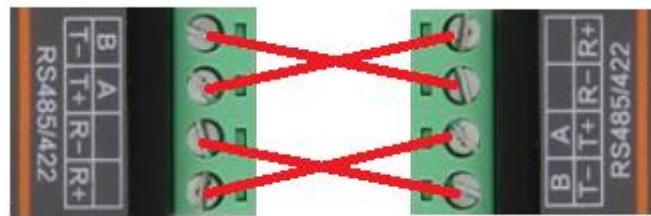


Figure 5. HF2211 RS422 Connection

2.5. RJ45 Interface

Ethernet port is 10M/100M adaptive, support AUTO MDI/MDIX which means it support direct connecting to PC with Ethernet cable.

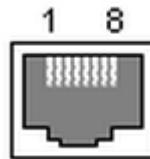


Figure 6. RJ45 Pin Definition

Table 4. RJ45 Interface

Pin Number	Name	Description
1	TX+	Transfer Data+
2	TX-	Transfer Data-
3	RX+	Receive Data+
4	PHY-VCC	Transformer Tap Voltage
5	PHY-VCC	Transformer Tap Voltage
6	RX-	Receive Data-
7	N.C.	None Connect
8	N.C.	None Connect

2.6. Mechanical Size

The dimensions of HF2211 are defined as following picture (mm):



Figure 7. HF2211 Mechanical Dimension

2.7. Rail Mounting

We support to provide rail for mounting as the following picture.

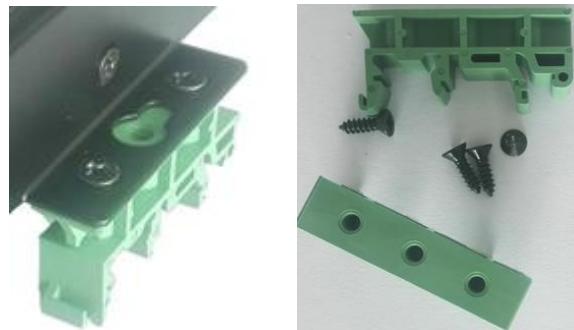


Figure 8. HF2211 Rail

2.8. Order Information

Base on customer detailed requirement, HF2211 provide different configuration version, Details as below:

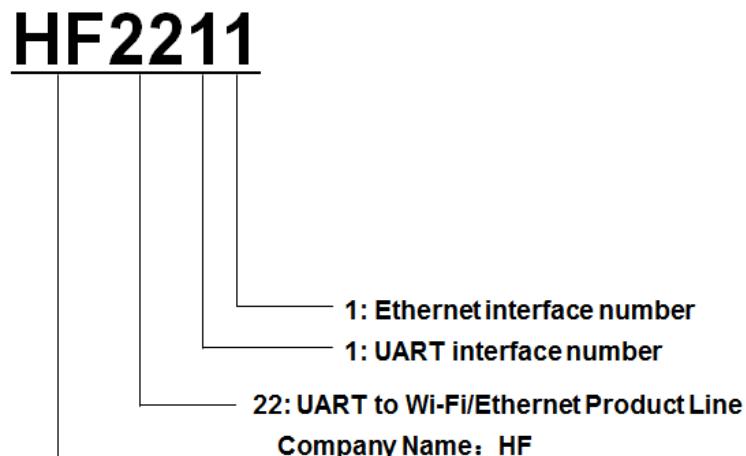


Figure 9. HF2211 Product Order Information

2.9. Package Information

1 * HF2211

1 * 12V/1A DC adapter

1 * RS232 cable

1 * Ethernet cable

1 * SMA Antenna

3. FUNCTIONAL DESCRIPTION

The HF2211 has the following feature:

- Connect customer's device with PC or server via TCP/UDP/Telnet.
- Contain a HTTP web server allow user to configure through browser with PC or phone.
- Have multi-programmable I/O pins used to monitor or control device directly.

3.1. Basic Network Protocol

The HF2211 device uses the IP address for network communications. It uses the TCP to assure that no data is lost or duplicated. If use UDP to assure that data can be fast and effective to Destination address.

Supported protocols include:

- ARP, UDP, TCP, ICMP, DHCP, Telnet, DHCP, HTTP Server/Client Web socket
- Telnet command configuration, Web server configuration
- Security Protocol: TLS, AES, DES3 encryption

HF2211				
Application Programming Interface	Protocols		Security	Configuration
	DHCP IGMP WebSocket	DNS/DDNS TCP/IP HTTP	SSL/TLS AES DES	Web CLI Telnet Log
	TCP/UDP			
	IP/ICMP			
	Ethernet			
	FreeRTOS OS		Drivers	
Cortex-M3 MCU				

Figure 10. HF2211 Software Protocol Structure

3.2. Wireless Network

HF2211 can be set as a wireless STA and AP as well. And logically, it supports two wireless interfaces, one is used as STA and the other is AP. Other STA devices can join into the wireless network through AP interface. So the it can provide flexible networking method and network topology. Functions is as follow:

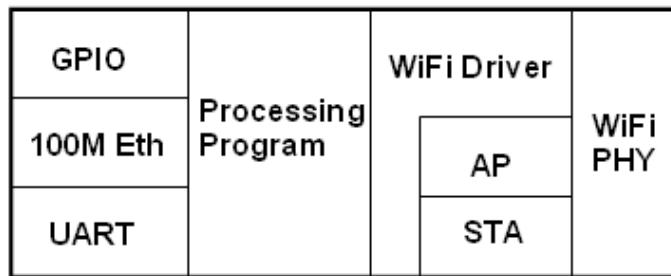


Figure 11. HF2211 Function Structure

<Introductions>

AP: Wireless access point which is the central joint. Usually, wireless router is a AP, other STA devices can connect with AP to join the network.

STA: Wireless station which is terminal of a wireless network. Such as laptop and pad etc.

3.2.1. AP Network

HF2211 can construct a wireless network as AP. All the STA devices will consider the AP as the centre of the wireless network. The mutual communication can be transponded by AP, shown as follow:



Figure 12. General AP Network

3.2.2. STA Wireless Network

Take the following picture as example. When router works in AP mode, HF2211 connects to the user's devices by RS232/RS485 interface. In this topology, the whole wireless network can be easily stretched.



Figure 13. STA Application

3.2.3. AP+STA Wireless Network

HF2211 can support AP+STA method. It can support AP and STA interface at the same time. Shown as follow:



Figure 14. AP+STA Wireless Network

In this picture, HF2211 open the AP+STA function and the STA interface can be connected to the remote server by the router. Similarly, the AP interface can also be used. Phone/PAD can be connected to the AP interface and to control the serial devices or set itself.

Through AP+STA function, it is convenient to use Phone/PAD to monitor the user's devices and not change its original settings.

Through AP+STA function, it is convenient to configure the product. And it solves the problem that the formal product can only configure by serial port.

Notes that:

When the AP+STA function is opened, the STA interface needs to connect to other router. Otherwise, STA interface will endlessly scan the router information nearby. When it is scanning, it will bring bad effects to the AP interface, like losing data etc.

AP and STA parts must set to the different sub-network for the product working as APSTA mode.

3.2.5. IOTService Software

Open the IOTService after connect to the AP hotspot generated by HF2211 or connect to Product Ethernet port to PC, then configure the parameter.

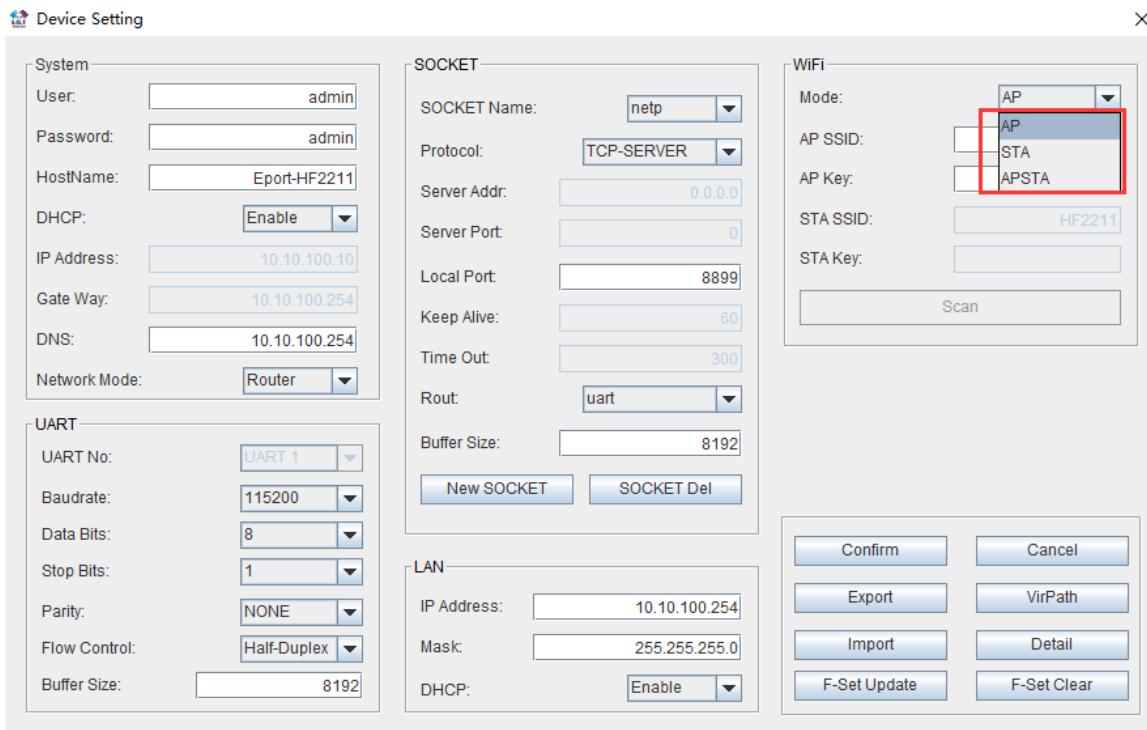


Figure 16. Configure Wi-Fi Parameter

Select	Channel	SSID	MAC Address	RSSI	Has Key
<input type="radio"/>	11	Sam401	D4:EE:07:2D:14:1E	100	Yes
<input type="radio"/>	10	ChinaNet-yRMx	38:E3:C5:A2:87:D5	100	Yes
<input type="radio"/>	11	UPGRADE-AP	20:DC:E6:48:35:9E	39	Yes
<input type="radio"/>	6	xiaoheizi	B0:95:8E:06:CB:16	29	Yes
<input type="radio"/>	11	Caoyu	78:96:82:A2:C6:A2	0	Yes
<input type="radio"/>	0	Caoyu		0	Yes

Figure 17. STA Scan Parameter

3.2.6. Webpage Configuration

Use PC to connect with HF2211 through its AP hotspot or Ethernet connection. Input the default IP(10.10.100.254, default username and password: admin/admin) to login the webpage to configure the parameter.


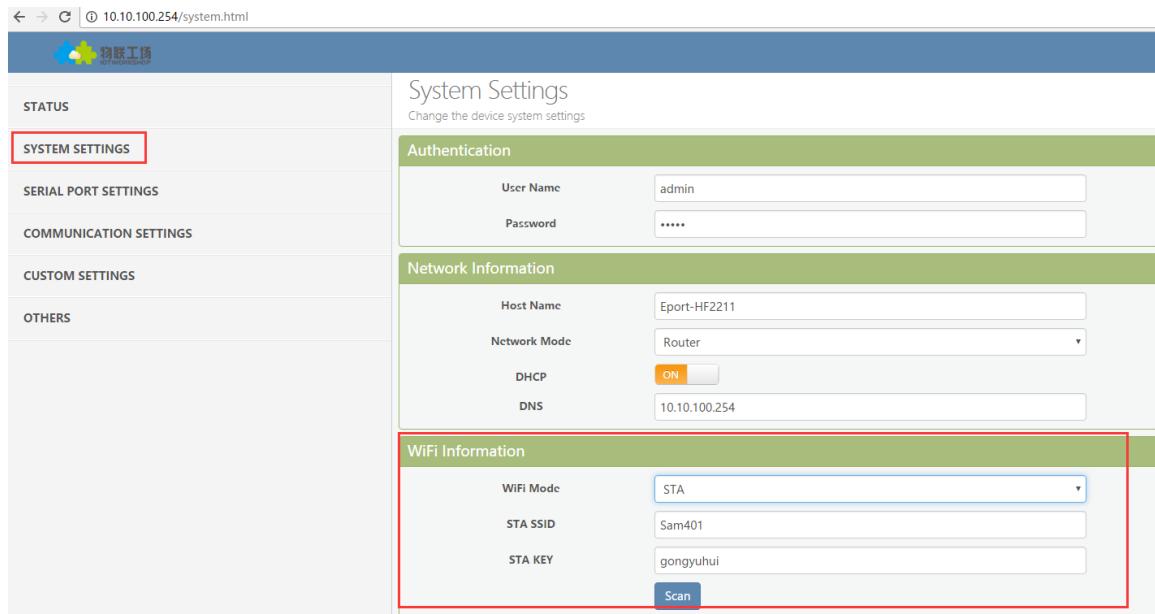


Figure 18. Configure the Wi-Fi Parameter

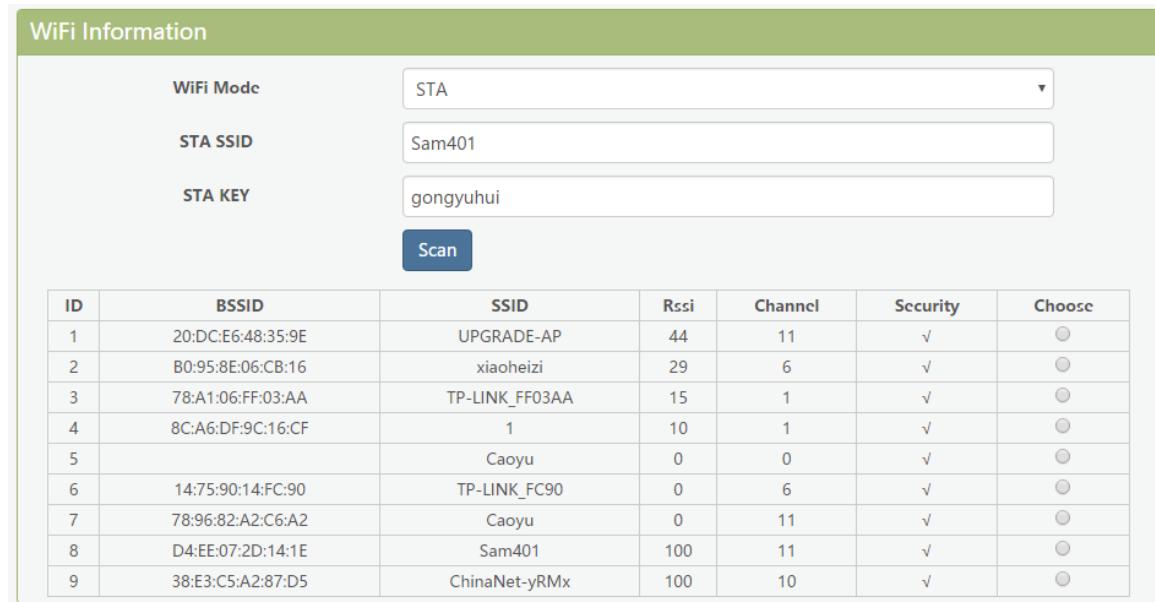

This screenshot shows the 'WiFi Information' configuration page. At the top, it displays the current WiFi settings: WiFi Mode (STA), STA SSID (Sam401), and STA KEY (gongyuhui). Below this is a 'Scan' button. The main part of the page is a table listing available WiFi networks (BSSIDs) along with their SSID, RSSI, Channel, Security, and a 'Choose' column. The table data is as follows:

ID	BSSID	SSID	Rssi	Channel	Security	Choose
1	20:DC:E6:48:35:9E	UPGRADE-AP	44	11	✓	<input type="radio"/>
2	B0:95:8E:06:CB:16	xiaoheizi	29	6	✓	<input type="radio"/>
3	78:A1:06:FF:03:AA	TP-LINK_FF03AA	15	1	✓	<input type="radio"/>
4	8C:A6:DF:9C:16:CF	1	10	1	✓	<input type="radio"/>
5		Caoyu	0	0	✓	<input type="radio"/>
6	14:75:90:14:FC:90	TP-LINK_FC90	0	6	✓	<input type="radio"/>
7	78:96:82:A2:C6:A2	Caoyu	0	11	✓	<input type="radio"/>
8	D4:EE:07:2D:14:1E	Sam401	100	11	✓	<input type="radio"/>
9	38:E3:C5:A2:87:D5	ChinaNet-yRMx	100	10	✓	<input type="radio"/>

Figure 19. STA Scan

3.3. Ethernet Interface Function

HF2211 provides with a 100M Ethernet interface. Through the 100M Ethernet interface, user can achieve the connection among WiFi, serial port and Ethernet port.

3.3.1. Ethernet Port with Wi-Fi

DTU Device APSTA Mode



Figure 20. Ethernet Interface Function

HF2211 servers as APSTA and generate a central network. The IP addresses of all the devices and module's are in the same network segment.

Note:

If product works in AP mode, then the Ethernet is working as WANN mode, PC will use Auto-IP to set its IP when connect via Ethernet. Better to change via Wi-Fi, then the PC and other devices are all in same subnetwork.(10.10.100.xxx)

SN	DevType	MAC Address	HostName	IP	Position	VirPath	State	SW Ver
1HF2211	F0FE6B5373...	Eport-HF2211		169.254.173.207	local		Online	1.09j

cmd C:\WINDOWS\system32\cmd.exe

Windows IP 配置

以太网适配器 以太网：


连接特定的 DNS 后缀
本地链接 IPv6 地址 fe80::b873:7689::f33e:5775%2
自动配置 IPv4 地址 169.254.87.117
连接到本地环回接口


3.3.2. Ethernet Interface Function(Router)



Figure 21. Ethernet Interface Function(Router)

The HF2211 device Ethernet interface work in router mode. When connect to router, it will get IP address from router(as picture 192.168.1.100). The product itself generate a subnet(10.10.100.254 default). The device from the Ethernet interface is assigned with IP address by module (10.10.100.101).Then the device and the PC1 are in the same subnet for network communication. A connection fro PC1 to PC2, but PC2 cannot actively connect to PC1.

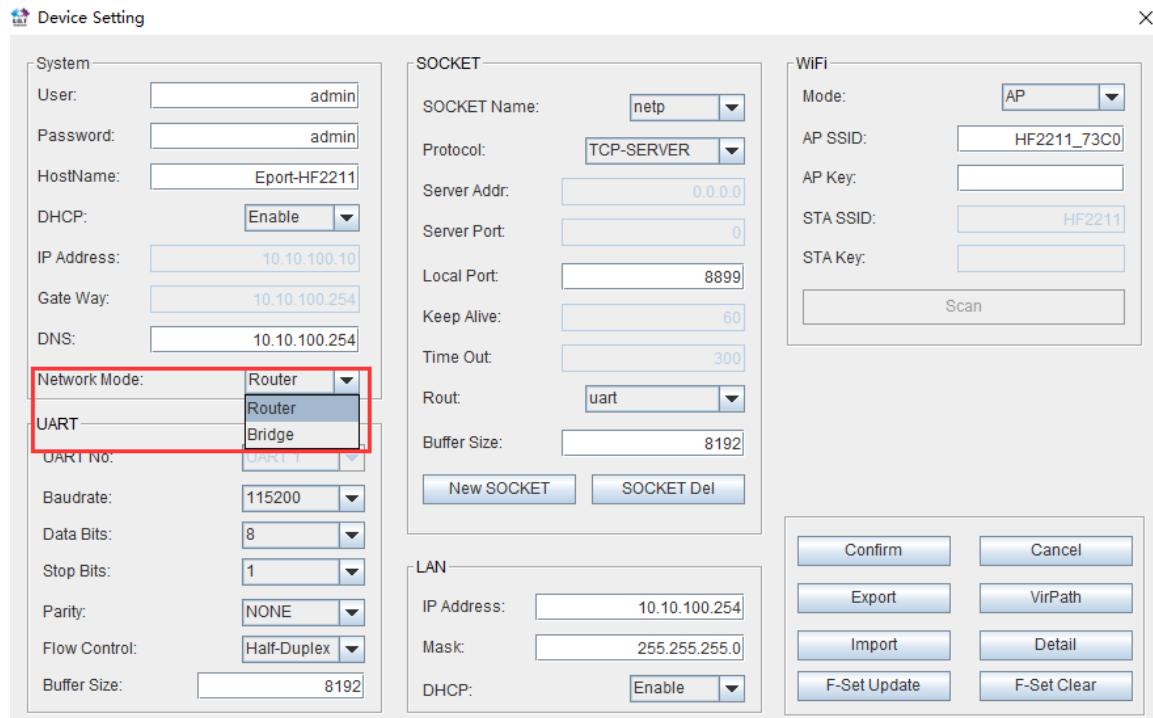

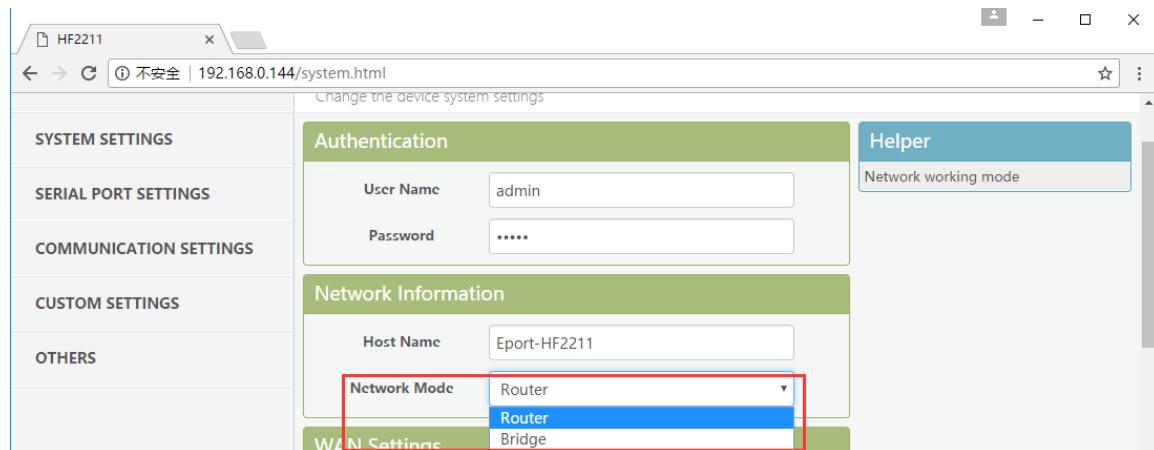

3.3.3. Ethernet Port Function(Bridge)

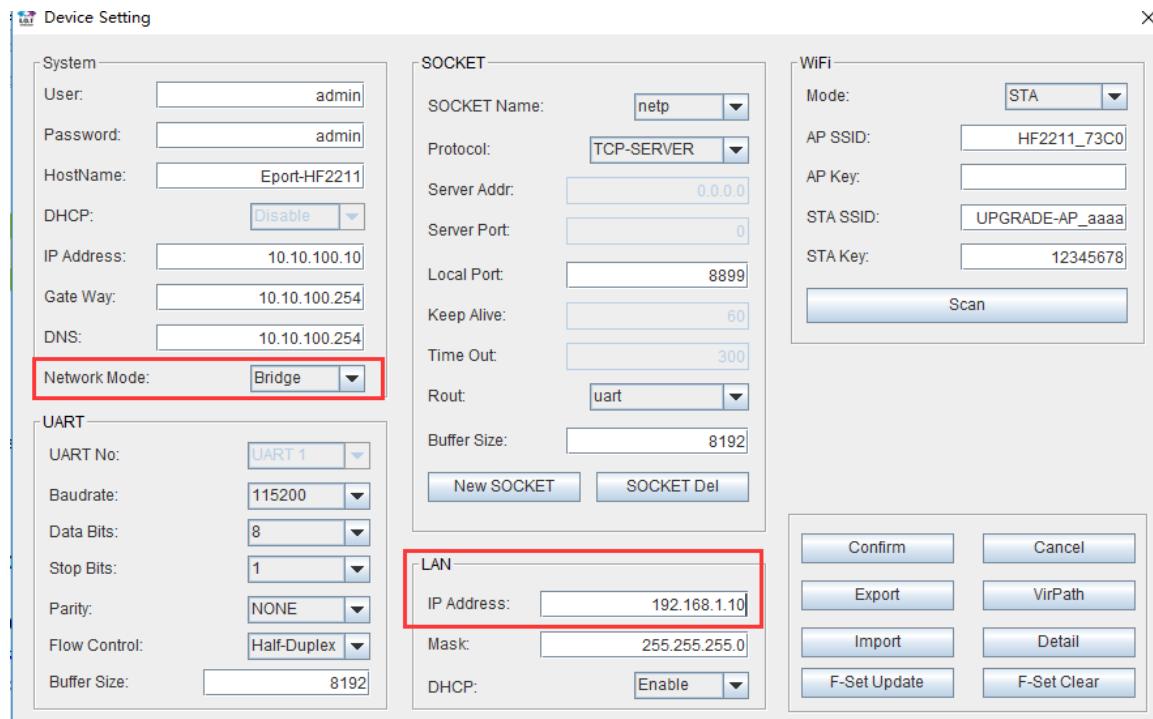


Figure 22. Ethernet Port Function(Bridge)

The HF2211 device Ethernet interface work in router mode. When connect to router, it will get IP address from router(as picture 192.168.1.101). AT the whole network, the product is like an invisible device. PC1 ad PC2 can communicated mutually without any constraint. But if product needs to connect with other devices, it needs set LAN IP address(192.168.1.10 as picture)

Notes:

Webpage, IOTService, or Cli command to set working mode, by default is router mode. **It need reboot when change its working mode.**



3.4. Working Mode

3.4.1. Transparent Transmission Mode

The HF2211 Device support transparent transmission mode of serial interface, In this mode, User only need to set some necessary parameter(network communication parameter). After power on, the device can auto connect to default socket setting(TCP/UDP). Use web page or PC IOTService software to set commucation parameter.

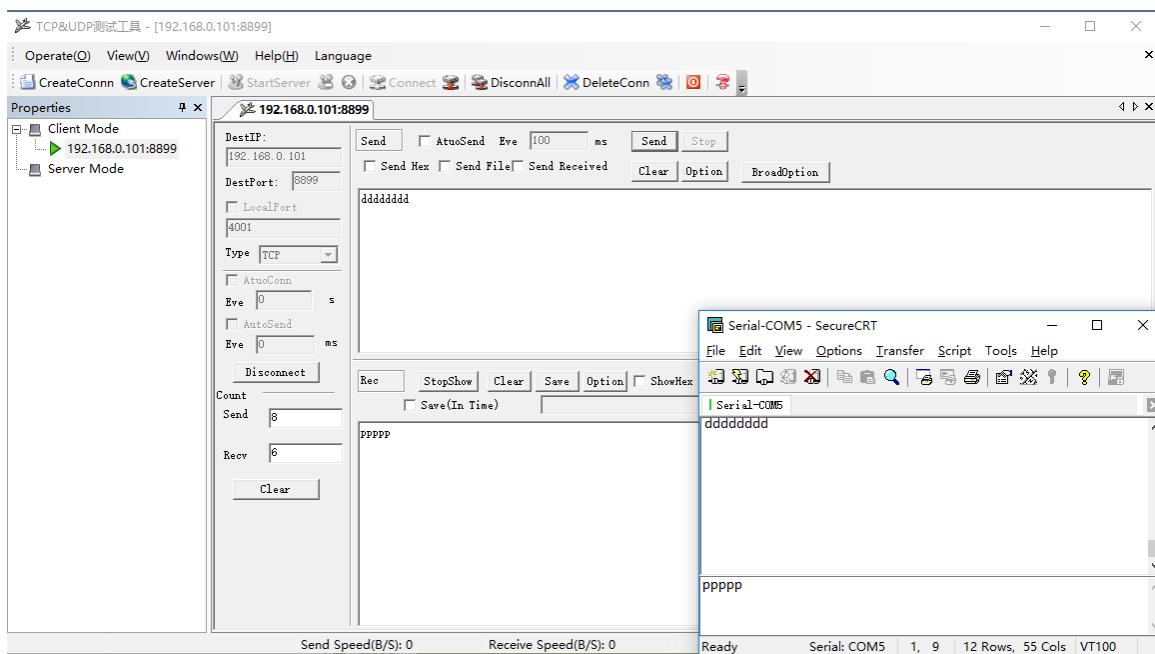


Figure 23. Transparent data transmission example

3.4.2. TCP Server

Transparent transmission mode support TCP Server、TCP Client、UDP Server、UDP Client communication application, UDP Server is special function, Details see following Cli instruction. There is a default tcp server socket created. The Socket can be modified to work at one of the above working mode. When Socket works as TCP server, It will support multiple TCP connection(max 5 TCP client). Multiple TCP connection will work in below structure:

Upload data flow: All the different TCP connection or the Client's data will be continuously transmitter to UART.

Download data flow: All data received from UART will be copied and broadcast to every TCP client.

Detailed multiple TCP connection structure drawing as below:

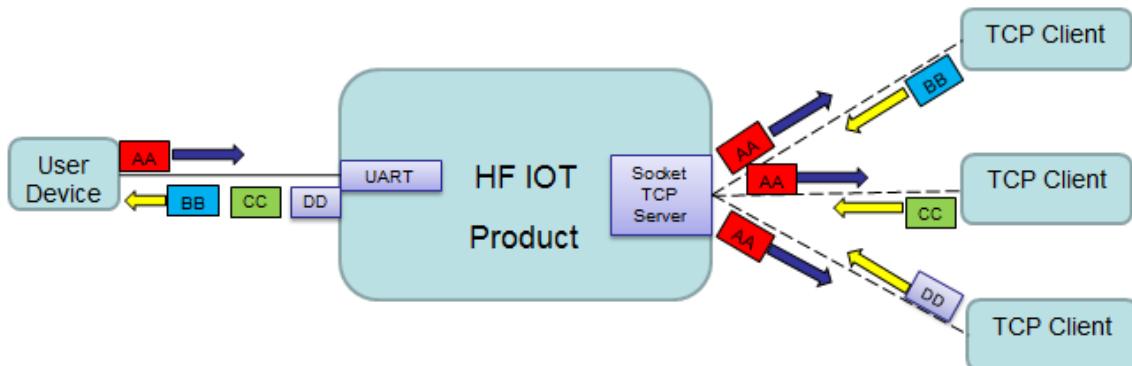


Figure 24. TCP Server data transmission example

The device support max 5 Socket channel, each socket can work individual at TCP/UDP, Multi Socket simultaneous communication of data stream is as following.

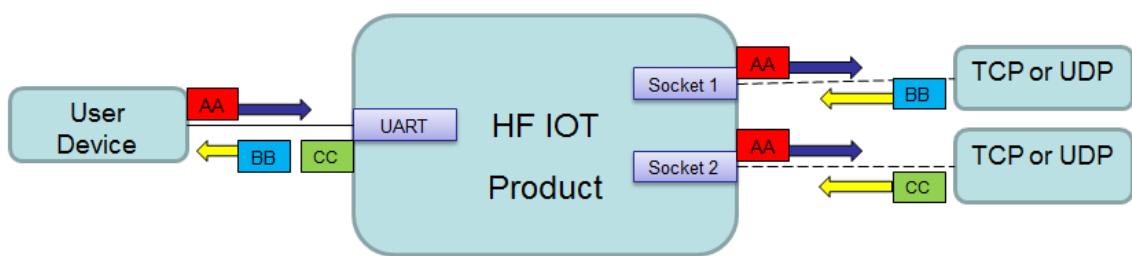


Figure 25. Multi Socket data transmission example

Multi Socket can be created through software configure or webpage configure. The below set up 3 socket channel.

Communication Settings

change the device socket settings



Figure 26. Webpage set up multi Socket channel

3.4.3. HTTP Mode

HF2211 device support sending data in HTTP format to HTTP server(Set product working mode by IOTService software or webpage). When device socket works in HTTP mode, All received UART data will automatically transform to HTTP format(add HTTP header) and transmit to HTTP server. For the received HTTP data from HTTP server, will automatically remove HTTP header and only output the data packet to UART.

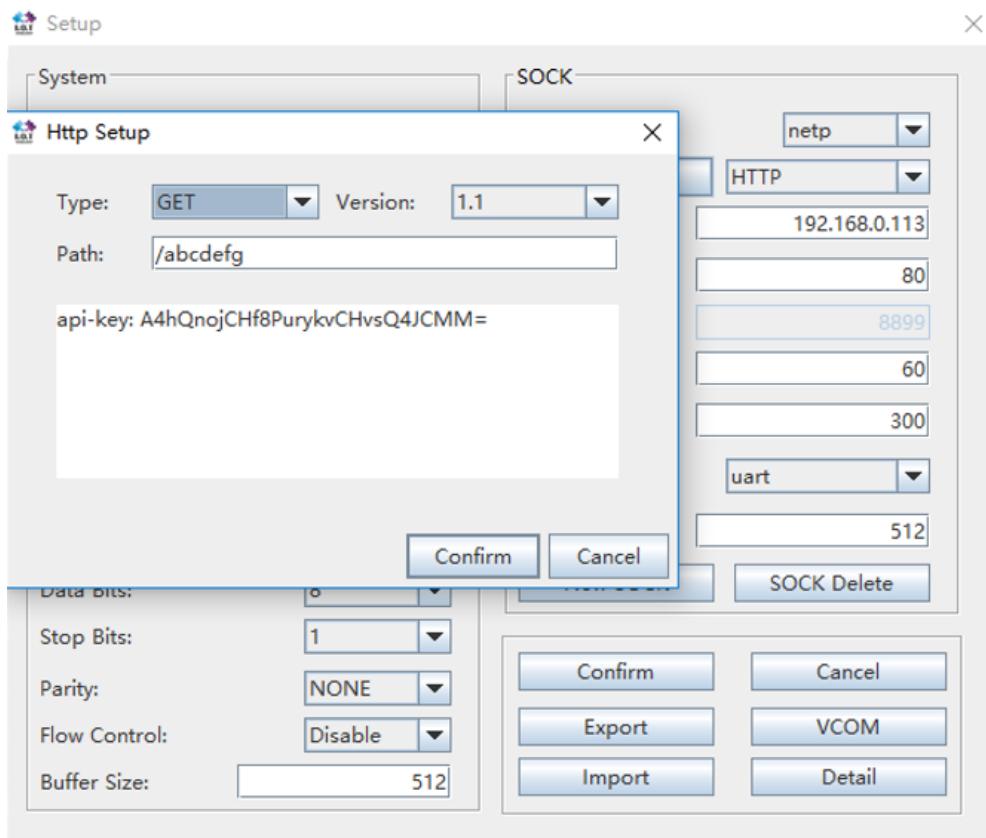


Figure 27. IOT Manager Software Configure

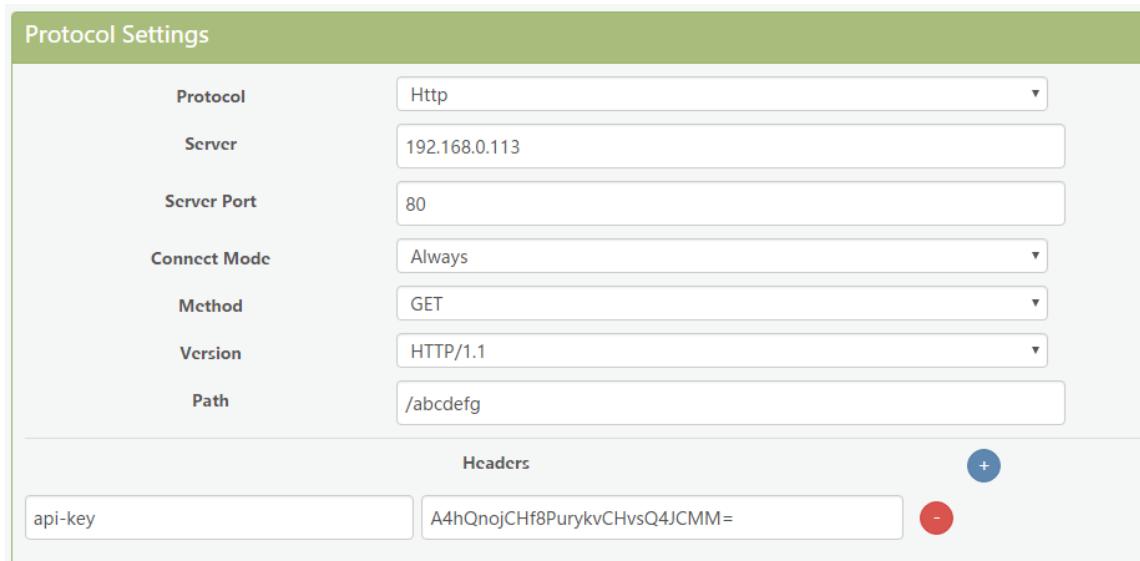


Figure 28. Web Page Configure

HF2211 UART received "pppp" data, send below data to HTTP Server.

GET /abcdefg HTTP/1.1

api-key: A4hQnojCHf8PurykvCHvsQ4JCMM=

pppp

HTTP Server send below data, HF2211 serial output "abcde"

GET /abcdefg HTTP/1.1

api-key: A4hQnojCHf8PurykvCHvsQ4JCMM=

abcde

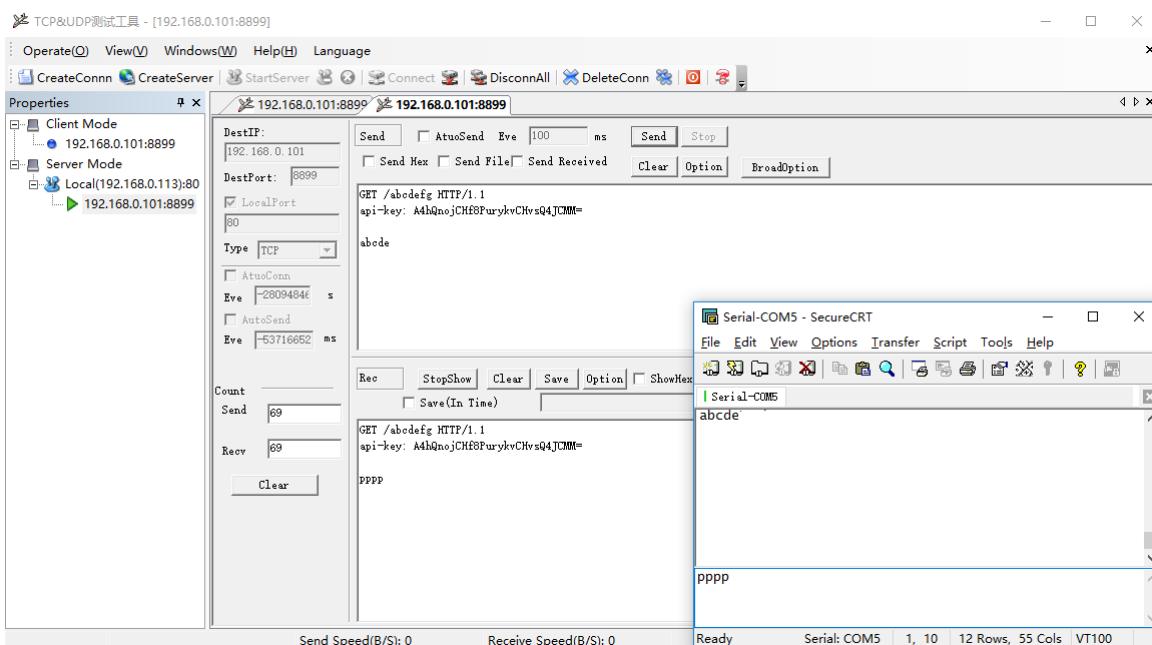


Figure 29. HTTP transmit example

3.4.4. Telnetd Mode

When device work in Telnetd mode, UART port can connect to user device console port(some gateway and switch device may have this console port to set parameters of its working mode). May use HF2211 to config user device via Telnetd mode.

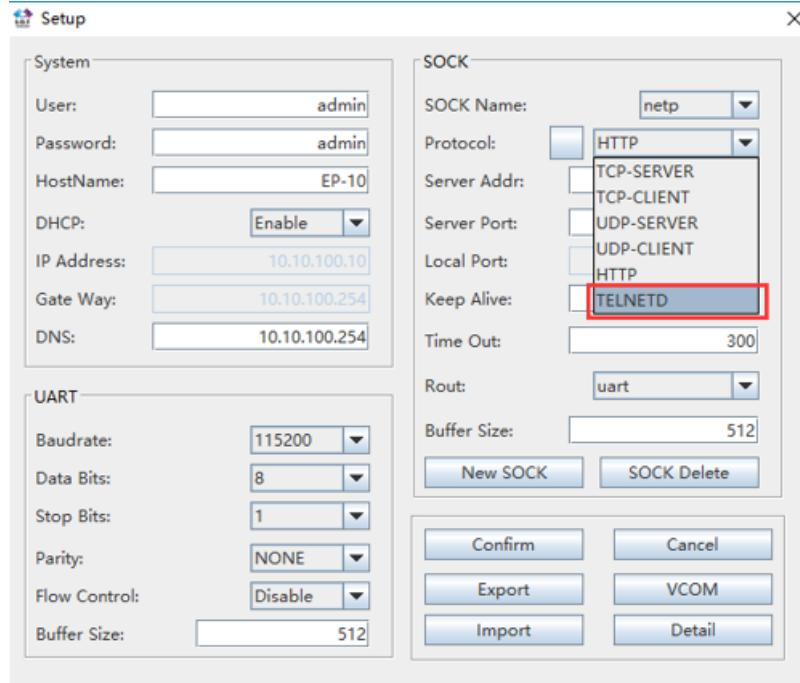


Figure 30. IOTService Software Configure Protocol

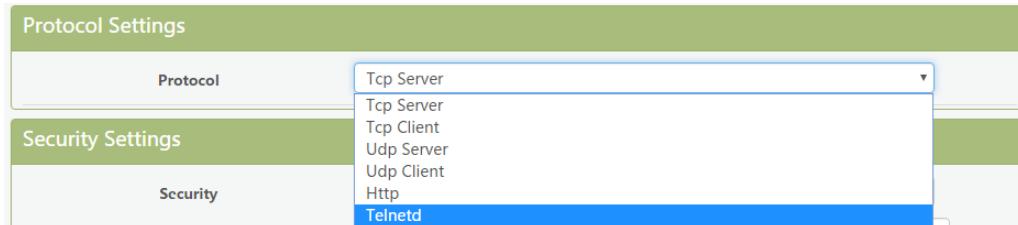


Figure 31. Web page configure protocol

Connect device UART to user device console port(The example use NC916) and create Telnet connection. Then It can directly config user device.

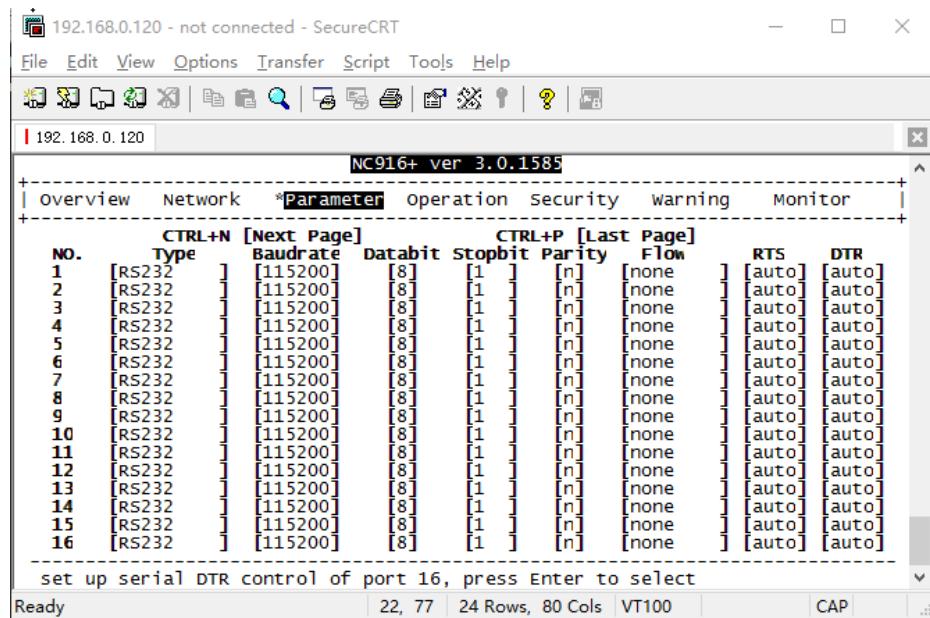


Figure 32. Telnet details example

3.5. AES/DES3/TLS Data Encryption

To improve device security and ensure the data won't be cracked and illegal used, The HF2211 device can do encryption to UART data before transmit to network.

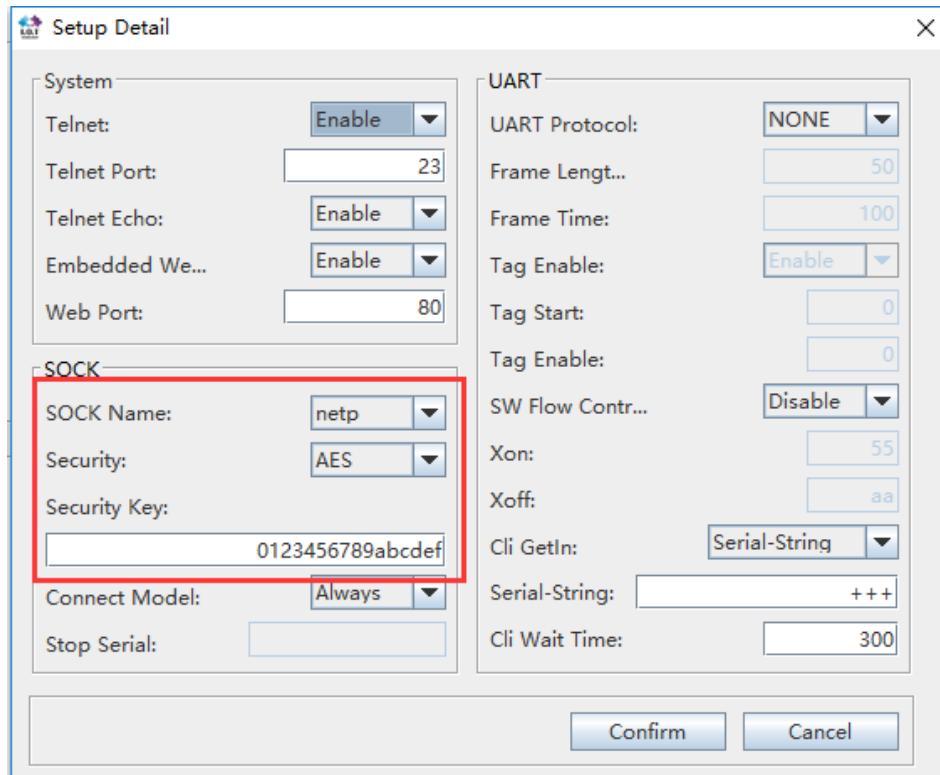


Figure 33. IOTService Software Configure Encryption



Figure 34. Web Page Configure Encryption

3.6. Keepalive

When TCP connection between device and server became abnormal. The device will check the abnormal status and reconnect to server (when the device working in TCP Client Mode), When the device working in TCP Server, It will break the TCP client and wait for next connection.

Communication Settings

change the device socket settings



Figure 35. Web Page Config Keepalive

3.7. Timeout

The device will break the TCP connection after some time(default is 300 seconds and it can be modified)if there is no data packet received from Destination TCP target . It will reconnect to server(When device works in TCP Client mode). When device working in TCP Server, It will disconnect with TCP Client. This mechanism can effectively restore TCP abnormal connection.If set it to "0", this function will be close.

Basic Settings

Name	netp
Local Port	8899
Buffer Size	512
Keep Alive (s)	10
Timeout (s)	300

Figure 36. Web Page Configure Timeout

3.8. Route Setup

The data received from Socket channel can be set to another socket channel. (Default: socket Destination channel is UART, It also can be other Socket channel, Or take the Socket as log print usage)

The below example shows the default netp Socket channel route setting to Socket1, Socket1 configure as TCP Server mode and route setting to UART. So the netp Socket channel received UART data will output to Socket1, and Socket1 channel will output to serial output.

Basic Settings	
Name	netp
Local Port	8899
Buffer Size	512
Keep Alive (s)	10
Timeout (s)	300

Protocol Settings	
Protocol	Tcp Server

Security Settings	
Security	Disable

Route Settings	
Route	Socket1

Figure 37. Route function setup example

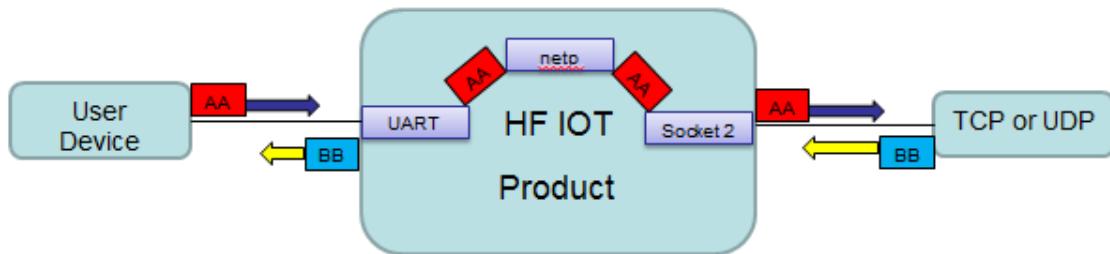


Figure 38. Route Function Data Flow Example

3.9. UART Frame Scheme

3.9.1. UART Free-Frame

HF2211 support UART Free-Frame function, If user select to open this function,Module will check the intervals between any two bytes when receiving UART data, If the interval time exceed the setting value, It will think it as the end of one frame, Or it will receive data until greater than internal buffer bytes(Default: 512, the largest 1400 bytes), then transfer to Socket Channel.

Module default UART Free-Frame interval time is 50ms, it will packaged into another frame if received UART data interval time is greater than 50ms. User also can set this interval time to minimum 10ms through Cli command and webpage.

If interval time is set to 10ms and customer MCU cannot send next byte within 10ms, The serial data will be break into two frame.



Figure 39. UART free-frame function

3.9.2. UART Auto-Frame

HF2211 support UART Auto-Frame function, If user select to open this function,setting frame trigger length and auto frame trigger time parameters, Then the product will auto framing the data which received from UART port and transmitting to the network as pre-defined data structure.

Auto-Frame trigger length: The fixed data length that product used to transmitting to the network.

Auto-Frame trigger time: After the trigger time, If UART port received data cann't reach auto-frame trigger length, Then product will transmitting available data to network and bypass the auto-frame trigger length condition.

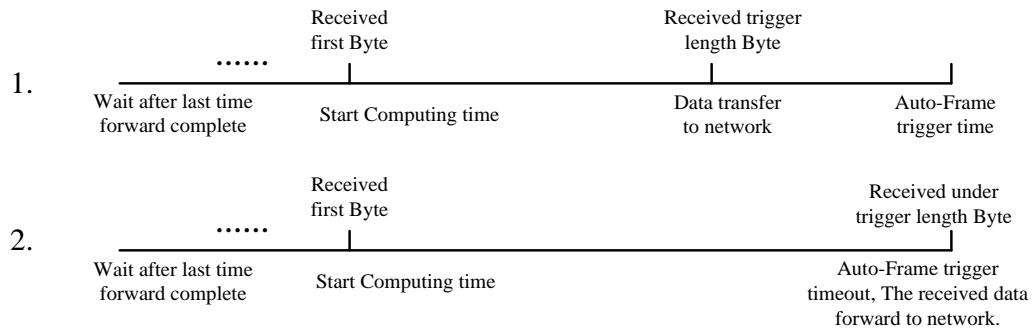


Figure 40. UART Auto-Frame Function

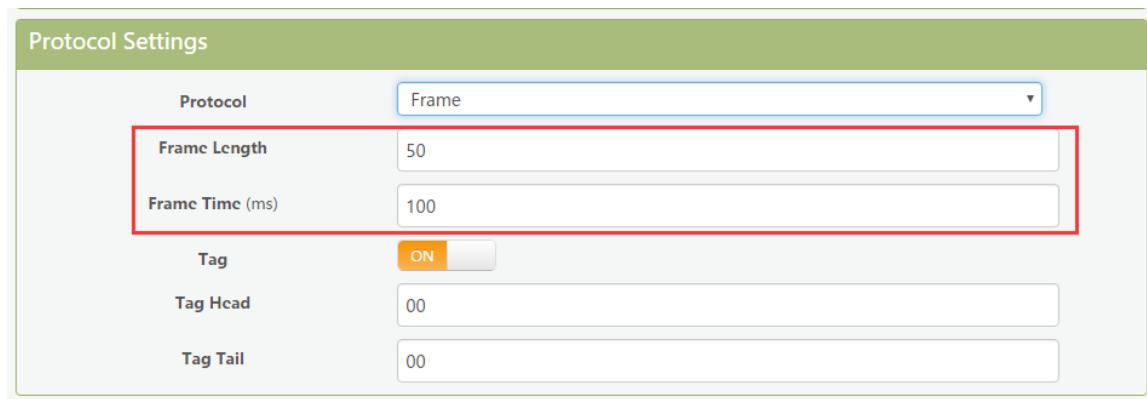


Figure 41. UART Auto-Frame Function

3.9.3. Tag Function

Eport E10 support lable function, If user select to open this function, The UART port will send all suitable one frame data to network.

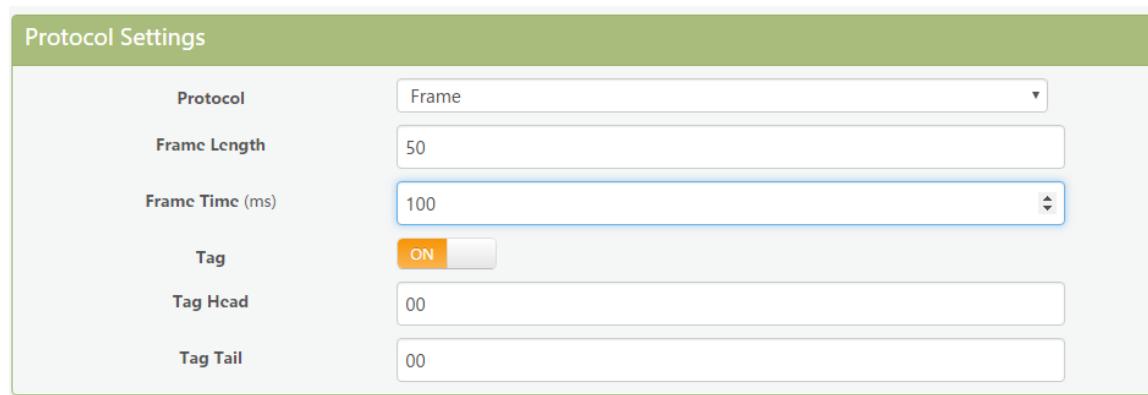


Figure 42. UART Auto-Frame Tag Function

3.10. Modbus Protocol

HF2211 support ModbusRTU to ModbusTCP and ModbusTCP to ModbusRTU. It's very convenient to connect with Modbus device. Modbus protocol setting as below:

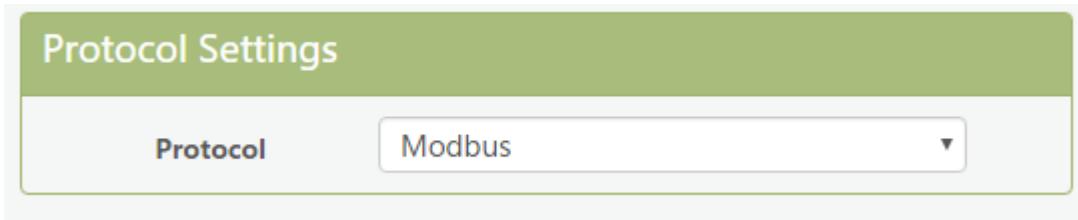


Figure 43. UART Modbus Function

3.11. Cli Command

Cli command is used for setting module configure parameters. Detailed command function and setting is in next chapter, Cli command can be set through UART port or Telnet function (Appendix C), The waiting time of below picture means use timeout time. If it exceed default 300s when no Cli command is input, it will exit Cli command mode. When the HF2211 receive continuous UART data of “+++”, it will enter into Cli command. (The device working in transparent transmission mode by default) May also set the device working in Cli command mode by default or disable this function .

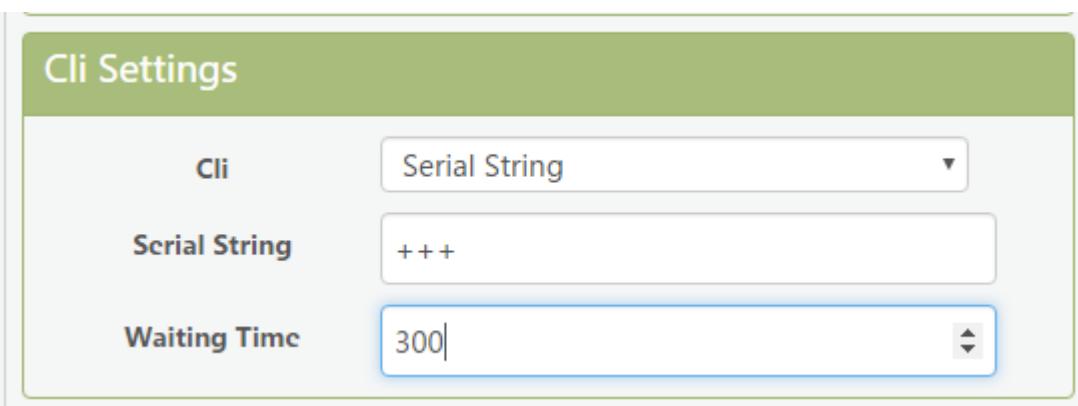


Figure 44. Cli Command Setting

3.12. UART Flow Control and RS485 Function

HF2211 support software and hardware UART flow control. If use hardware follow control, must use RS232 interface. If use software follow control, then It allowed the device output UART data after receive single UART 0x11 data(Default: value can be modified). It will stop output UART data after receive single UART 0x13 data(Default: value can be modified).

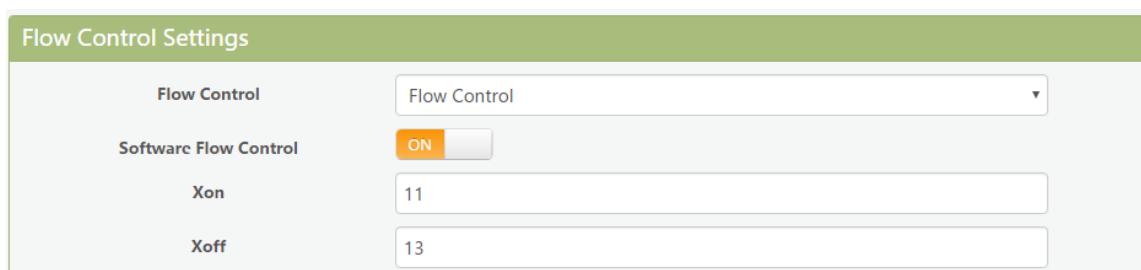


Figure 45. UART Flow Control

If set to “Half Duplex”, the product enable RS485 interface. **The flow control by default is set as “Disable”, it need to use RS485, set it to “Half Duplex” as the following picture.**

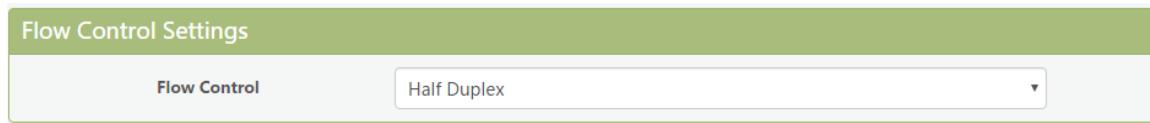


Figure 46. UART Half Duplex Function

3.13. Firmware Upgrade

HF2211 support OTA(over the air) firmware upgrade. User can use webpage to upgrade its firmware, whether external or internal webpage(192.168.0.101/hide). Internal webpage can be used for upgrade external webpage). Please check below example. IP address is assigned by router.



Figure 47. External web page

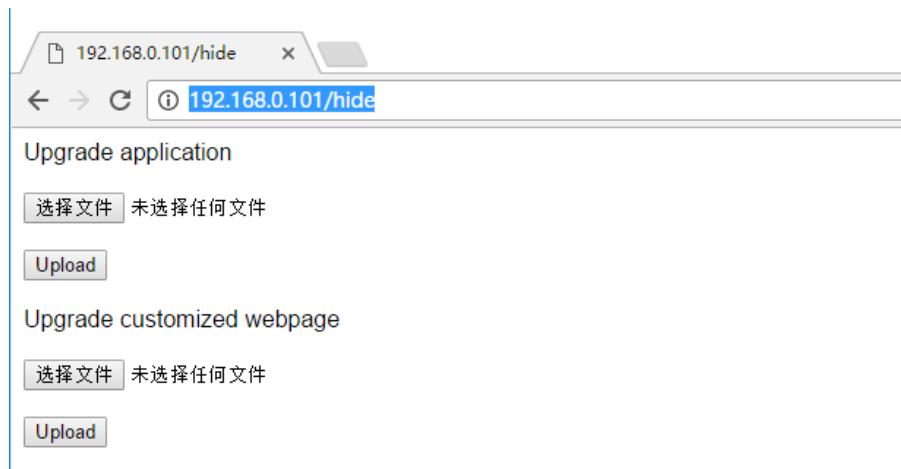


Figure 48. Internal web page

3.14. Web Page Function

Web page function can be enabled or disabled.



Figure 49. Web Page Function Setting

3.15. Auto-IP Function

Connect device Ethernet with PC, the device will use default auto IP. The PC may use this IP to config the device or transfer data(PC will need about 15 seconds to use default 169.254.xxx.xxx IP, then this communication can be created). As the following example, 169.254.173.207(If occur IP conflict, it will use other ip instead)



Figure 50. AUTO-IP Connection

3.16. NTP Function

Support NTP function(default is disabled). Support set NTP server, port, time zone information, more detailed usage see application document of “UART Fast Config”.(112.124.43.15 is High-Flying test NTP server)

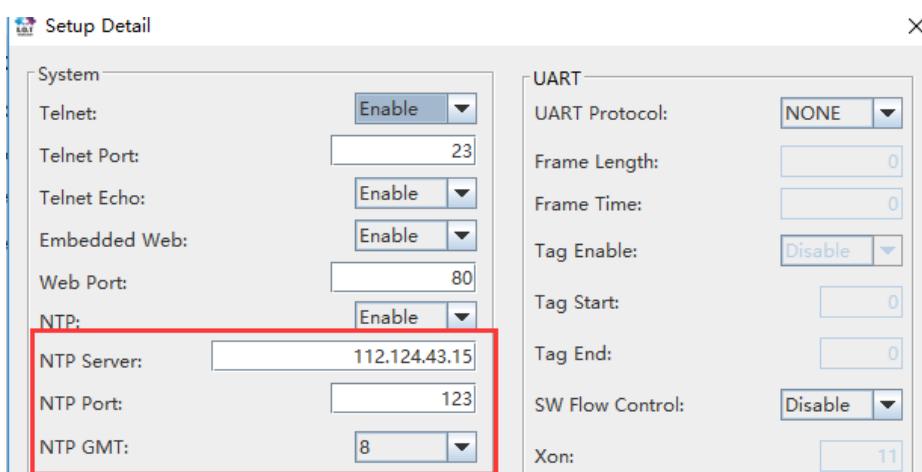


Figure 51. IOTService Tools NTP Setting

```
EPORT>SYS NTP
Enable
Server:112.124.43.15
Port:123
GMT:8
EPORT>Show

====System State====
Product ID:HF5111B
Software Version:V1.07c
Config Protected:OFF
System time:2017-1-23 13:48:38 Mon
up time: 0-day 2:44:32
Total Free Memory: 32880
MAX Block size:31164
```

Figure 52. Cli Command NTP Setting and Query

3.17. Heartbeat Function

Support heartbeat function, can set the heartbeat time and content(heartbeat time is the same as keepalive setting), if the product does not receive data from TCP server within heartbeat time, it will send heartbeat to server. The heartbeat function can only be enabled when socket is set as TCP client.

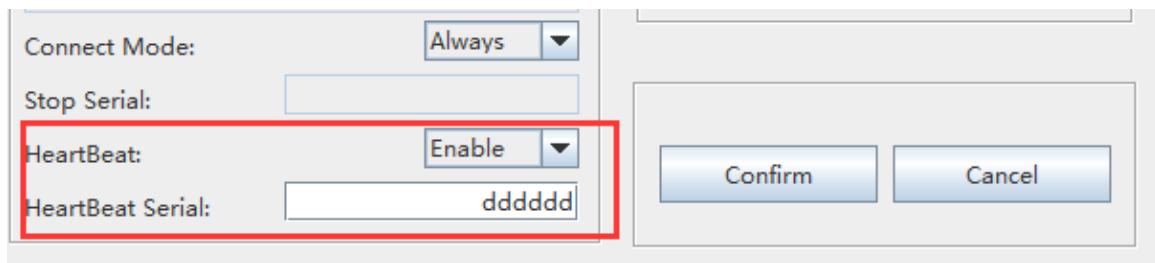


Figure 53. Heartbeat Function

3.18. UART Fast Config

Product support Cli command to config its parameters, but also support special HEX format UART data for fast config, see application manual for detailed usage.

3.19. Other Function

The HF2211 device parameters can be exported and loaded into other equipment..

Others

change the device other settings



Figure 54. Other Function

4. CLI COMMAND NOTES

4.1. Working Mode

The device will enter into default transparent transmission mode after powered on. User can switch to Cli command mode through special UART data. Module default UART parameters are as below:

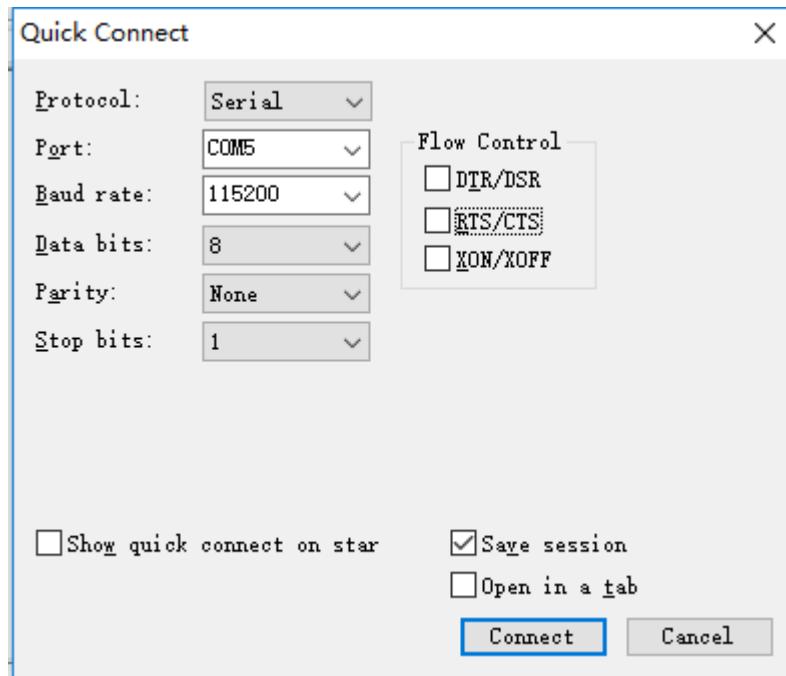


Figure 55. HF2211 Default: UART Parameters

In Command mode, User can use UART port to set module through Cli command.

Notes:

We recommend to use SecureCRT for UART debug tools.

4.1.1. Switch Transparent Transmission Mode to Cli Command Mode

Steps:

- Input “+++” via UART tools, the device will output “EPORT>” after received“+++”. Then the device already enters into Cli command mode.

Notes:

“+++” should be in one frame. Other data is not allowed before or after “+++”

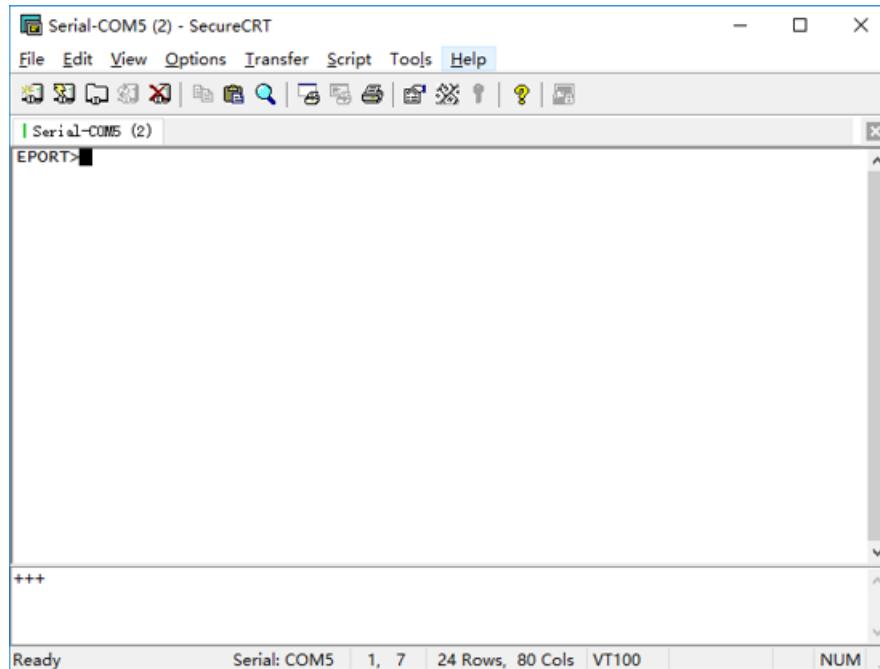


Figure 56. Switch Transparent Transmission Mode to Cli Command Mode

<Notes>:

In Cli command mode, users can set or query parameters. Cli command details see next chapter

4.2. Cli Command Overview

Cli command can be input through terminal (SecureCRT or other UART tools) or by user device MCU programming. As below picture, we use SecureCRT tool. Press “Tab” key, it will list current available Cli command or directory. If intput first character and then press “Tab” key, it will show the Cli command fit with the first character.

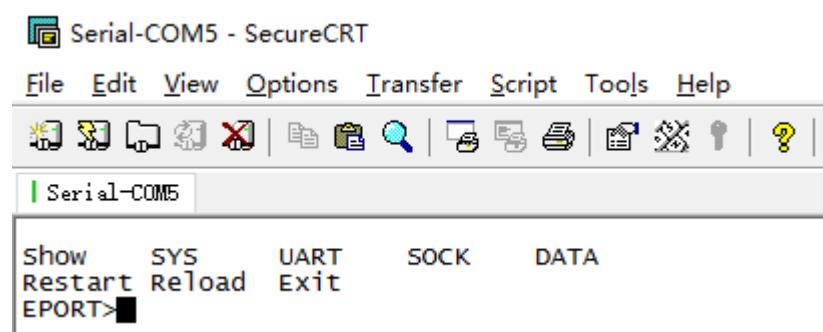


Figure 57. Cli Command Root Directory

Version		
	Auth	user
		password
		quit
		Show
	Network	Enable
	DHCP	Disable
		ip address
		gateway
		DNS
		HostName
		Quit
SYS	Telnet	Enable
		port number
		echo
		Disable
	Web	Enable
		port number
		Disable
		MAC
	JCMD	Enable
		Disable
	NTP	Enable
		NTP Server Address
		NTP Server port
		GMT
		Disable
		Quit

Figure 58. Cli Command SYS Tree

		Show
		Baudrate
		Databits
		Stopbits
		Parity
	Buf	BufSize
		GapTime
		Quit
	FlowCtrl	FlowCtrl
		Half-Duplex
		Disable
	SWFlowCtrl	Enable
		Disable
	Cli-Getin	Disable
		Serial-String
		Always
		Cli-WaitTime
	Proto	NONE
		Modbus
		Frame
	Frame	FrameLen
		FrameTime
		Tag
		Quit
		Edit
		Clean
		Quit

Figure 59. Cli Command UART Tree

Show	
	Name
Proto	TCP-SERVER
	TCP-CLIENT
	UDP-SERVER
	UDP-CLIENT
	HTTP
	Telneted
Server	
ServerPort	
LocalPort	
BufSize	
KeepAlive	
Timeout	
HeartBeat	
Security	Disable
	TLS
	AES
	DES
ConnectMode	Always
	Burst
Rout	uart
	log
	netp
Show	
Name	
Proto	TCP-SERVER
	TCP-CLIENT
	UDP-SERVER
	UDP-CLIENT
	HTTP
	Telneted
Server	
ServerPort	
LocalPort	
BufSize	
KeepAlive	
Timeout	
HeartBeat	
Security	Disable
	AES
	DES
	TLS
ConnectMode	Always
	Burst
Rout	uart
	log
	netp
Save	
Clean	
Del	
Quit	
Quit	

Figure 60. Cli Command SOCK Tree

DATA	Str
	Hex
	Quit
	FwUpgrade
	Restart
	Reload
	Exit

Figure 61. Cli Other Command

4.2.1. Cli Command Format

Cli command is in ASCII format. The usage is similar to Linux terminal. Command format as following:

- Format Notes
 - <>: Cli command name or directory.
 - []: Cli command parameters.
- Command Message

<CMD> [para-2 para-3 para-4...]<CR>

 - <CMD>: Main directory or command name;
 - [para-n] : command parameters. If have multiple directory, it can also can be the son directory. As below example;

EPORT>SYS Auth	User	Passwrod	quit
----------------	------	----------	------

- <CR>: Command Terminator, “Enter” key, HEX data: 0x0a or 0xd

<Notes>

If the input command not existed, UART will output again “EPORT>” to allow next command input.
The Cli command is case sensitive.

EPORT>sys
EPORT>SYS
EPORT/SYS>

If need enter into son directory, press “space” key between the directories.

EPORT>SYS Auth
EPORT/SYS/Auth>

If need to display all the directory or commands in the current directory, press “Tab” key to query.

EPORT/SYS>	Auth	Network	Telnet	web	Ipv6
	MAC	JCMD		quit	

If need to display current command parameter, press Tab key to query.

EPORT/SYS/Network>DHCP	Enable	Disable
------------------------	--------	---------

4.2.1.1. Show Command

- Function: Show all system information, including the system running status, Network status, UART status and socket status.
- Format:
 - ◆ Query

Show [SYS/UART/SOCK]

■ Parameter:

- Show all information if no parameters. Parameter can be one of the following:
- ◆ SYS: System running status
 - ◆ UART: UART status
 - ◆ SOCK: Socket status

```
EPORT>Show
====System State====
Product ID:E-10
Software Version:V1.04
Up Time: 0-Day 0:21:39
Total Free Memory: 48400
MAX Block Size:46816

====NETWORK====
MAC:ACCF23FF4771
Ip Address:192.168.0.106
GateWay:192.168.0.1

====UART Status===
Config:115200,8,1,NONE,NONE
State:In CLI
Recv Bytes:26   Recv Frames:24
Send Bytes:0    Send Frames:0
Failed Bytes:0  Failed Frames:0

====SOCK Status===
SOCK Name:netp
State:Server Created
Client IP:
Recv Bytes:0    Recv Frames:0
Send Bytes:0    Send Frames:0
Failed Bytes:0  Failed Frames:0
```

4.2.1.2. SYS Directory

- Function: Display/Set all system related information
- Format:
- ◆ Tab Query

EPORT/SYS>	Version	Auth	Network	Telnet	web
NTP	MAC	JCMD	QUIT		

4.2.1.3. SYS/Auth Directory

- Function: Display/Set web or Telnet Cli command login directory. (see appendix for detail)
- Format:
- ◆ Tab Query

EPORT/SYS/Auth>	User	Password	QUIT
---------------------------	-------------	-----------------	-------------

4.2.1.4. SYS/Auth/User Command

- Function: Display/Set web or Telnet Cli command login user name. (function see appendix)
- Format:
- ◆ Query

<User>

- ◆ Set

<User> [value]

- Parameter:
- Setting is valid immediately.
- ◆ User: Login user name. Default: **admin**

- ◆ value: set value. Length range 1~29 characters

4.2.1.5. SYS/Auth/Password Command

- Function: Display/Set web or Telnet Cli command login password(function see appendix)
 - Format:
 - ◆ Query
- <Password>**
- ◆ Set
- <Password> [value]**
- Parameter:
 - Setting is valid immediately
 - ◆ Password: Login password. Default: **admin**
 - ◆ value: set value. Length range 1~29 characters

4.2.1.6. SYS/Network Directory

- Function: Display/Set related network information.
- Format:
 - ◆ Tab Query

EPORT/SYS/Network>	Show	DHCP	DNS	HostName	Quit

4.2.1.7. SYS/Network>Show Command

- Function: Display network related information
- Format:
 - ◆ Query

<Show>

4.2.1.8. SYS/Network/DHCP Command

- Function: Display/Set DHCP Client function
 - Format:
 - ◆ Query
- <DHCP>**
- ◆ Set
- <DHCP> [Enable/Disable]**
- Parameter:
 - Setting is valid after reboot.
 - ◆ Enable: Enable DHCP function. The device will get DHCP IP from router when Ethernet port is connected to router LANN port. Default: **Enable**.
 - ◆ Disable: Disable DHCP function. Allocate device static IP address according to the hit of intputting IP and gateway address.

4.2.1.9. SYS/Network/DNS Command

- Command: Display/Set DNS IP address.
- Format:
 - ◆ Query

<DNS>

- ◆ Set

<DNS> [IP]**■ Parameter:**

When DHCP function is Disabled, this setting is valid. Setting is valid after reboot.

- ◆ IP Address: DNS server address. Default: **10.10.100.254**.

4.2.1.10. SYS/Network/Mode Command

- Command: Display/Set working mode.
- Format:
 - ◆ Query

<Mode>

- ◆ Set

<Mode> [Router/Bridge]

- Parameter:
 - Setting is valid after reboot.
 - ◆ Router: Router mode, Default value.
 - ◆ Bridge: Bridge mode.

4.2.1.11. SYS/Network/Hostname Instruction

- Function: Display/Set Hostname.
- Format:
 - ◆ Query

<Hostname>

- ◆ Set

<Hostname> [name]

- Parameter:
 - Hostname is the name which show in router DHCP client list. Setting is valid immediately.
 - ◆ Name Address: Hostname, length range: 1~30 characters. Default: **HF2211**.

4.2.1.12. SYS/Telnet Instruction

- Function: Display/Set Telnet function.
- Format:
 - ◆ Query

<Telnet>

- ◆ Set

<Telnet> [Enable/Disable]

- Parameter:
 - See appendix for detailed Telnet function usage. Telnet is used for remote send Cli command or transmit data, Setting is valid after reboot.
 - ◆ Enable: Enable Telnet function. Default: **Enable**.
 - Input Port Number: Telnet Port Number. Default: **23**
 - Input Echo Mode: Enable/Disable Cli command echo function. Default: **Enable**

- ◆ Disable: Disable Telnet function.

4.2.1.13. SYS/Web Instruction

- Function: Display/Set Web config function.
- Format:
 - ◆ Query

<Web>

- ◆ Set

<Web> [Enable/Disable]

- Parameter:

Webpage is used for config module working parameters. Setting is valid after reboot.

 - ◆ Enable: Enable Web config function. Default: **Enable**.
 - Input Port Number: Web Port Number. Default: **80**
 - ◆ Disable: Disable Web config function

4.2.1.14. SYS/MAC Instruction

- Function: Display/Set MAC address.
- Format:
 - ◆ Query

<MAC>

- ◆ Set

<MAC> [8888 value]

- Parameter:

Global unique MAC Address. It is not allowed to modify it.

 - ◆ value: MAC address value.

4.2.1.15. SYS/JCMD Instruction

- Function: Display/Set Jason command function.
- Format:
 - ◆ Query

<JCMD>

- ◆ Set

<JCMD> [Enable/Disable]

- Parameter:

Jason command is used for config module. IOTManage software use this mechanism. If disable JCMD function, IOTManage is no longer valid. Setting is valid after reboot.

 - ◆ Enable: Enable JCMD function. Default: **Enable**.
 - ◆ Disable: Disable JCMD function.

4.2.1.16. SYS/NTP Instruction

- Function: Display/Set NTP function.
- Format:
 - ◆ Query

<NTP>

- ◆ Set

<NTP> [Enable/Disable]

- Parameter:

NTP is used for product to get and output real time. See uart fast config application manual to fast query. Setting is valid immediately.

 - ◆ Enable: Enable NTP Function.
 - NTP Server Address: NTP Server address, domain name or IP address
 - NTP Server Port: port number, Default:123, Range:0~127
 - GMT: Time zone, default is 0, Range:-12~12.
 - ◆ Disable: Disable NTP Function, Default value.

4.2.1.17. UART Directory

- Function: Display/Set UART information directory.
- Format:
 - ◆ Tab key query

EPORT/UART>	Show	Baudrate	Databits	Stopbits	Parity
	Buf	FlowCtrl	SWFlowCtrl	cli-Getin	cli-WaitTime
	Proto	Frame	Edit	Clean	Quit

4.2.1.18. UART>Show Instruction

- Function: Display UART information function.
- Format:
 - ◆ Query

<Show>

4.2.1.19. UART/Baudrate Instruction

- Function: Display/Set UART baud rate function.
- Format:
 - ◆ Query
- Parameter:

Setting is valid immediately.

 - ◆ Value: Default: **115200**. Can choose 2400, 4800, 9600, 38400, 57600, 115200, 230400, 460800

4.2.1.20. UART/Databits Instruction

- Function: Display/Set UART data bits function.
- Format:
 - ◆ Query
- Parameter:

Setting is valid immediately.

- ◆ Value: Default: **8bits**. Can choose 8.

4.2.1.21. UART/Stopbits Instruction

- Function: Display/Set UART stop bits function.

- Format:

- ◆ Query

<Stopbits>

- ◆ Set

<Stopbits> [value]

- Parameter:

Setting is valid immediately.

- ◆ Value: Default: **1bits**. Can choose 1, 1.5, 2.

4.2.1.22. UART/Parity Instruction

- Function: Display/Set UART parity function.

- Format:

- ◆ Query

<Parity>

- ◆ Set

<Parity> [value]

- Parameter:

Setting is valid immediately.

- ◆ Value: Default: **None**. Can choose NONE, EVEN, ODD.

4.2.1.23. UART/Buf Directory

- Function: Display/Set UART Buffer directory.

- Format:

- ◆ Tab key query

EPORT/UART/Buf>
Bufsize GapTime Quit

4.2.1.24. UART/Buf/Bufsize Instruction

- Function: Display/Set UART buffer size function.

- Format:

- ◆ Query

<Bufsize>

- ◆ Set

<Bufsize> [value]

- Parameter:

Buffer is used for cache UART received data. If the received data of one frame is larger than buffer size. The data frame will be break into two packet send to network. Setting is valid after reboot.

- ◆ Value: Default: **512**. Length range: 32~1400 bytes.

4.2.1.25. UART/Buf/GapTime Instruction

- Function: Display/Set UART free frame gap time.

- Format:

- ◆ Query

<GapTime>

- ◆ Set

<GapTime> [value]

- Parameter:

GapTime is used for setting UART free frame time gap. If the received data gap time is more than setting value, the data packet will be broken into two frame.

- ◆ Value: Default: **50ms**. Length Range: 10~1000ms.

4.2.1.26. UART/Buf/FlowCtrl Command

- Function: Display/Set UART flow control function.

- Format:

- ◆ Query

<FlowCtrl>

- ◆ Set

<FlowCtrl> [Enable/Disable]

- Parameter:

Flow control includes software flow control and hardware flow control. Software flow control priority is higher than hardware. If enable software flow control, the hardware flow control pin(CTS/RTS) will be useless. Software flow control use special UART data for control. Hardware flow control use CTS/RTS pin control. Setting is valid immediately.

- ◆ Flow Control: Flow control function.
 - ◆ Half-Duplex: Enable RS485 half-duplex function, UART0_RTS is used for RS485 chip control function.
 - ◆ Disable: Flow control function. Default: **Disable**.

4.2.1.27. UART/Buf/SWFlowCtrl Command

- Function: Display/Set UART software flow control function.

- Format:

- ◆ Query

<SWFlowCtrl>

- ◆ Set

<SWFlowCtrl> [Enable/Disable]

- Parameter:

Enable software flow control function. The device UART can output data after UART received Xon single-byte enable data. When UART received Xoff single-byte disable data. It will disable the device UART output data.

- ◆ Enable: Enable software flow control function, When in enable status, it allow UART data output when bootup by default.
 - Xon: Enable UART output data. Default: **0x11**.
 - Xoff: Disable UART output data. Default: **0x13**.

- ◆ Disable: disable software flow control function. Default: **Disable**.

4.2.1.28. UART/Cli-Getin Command

- Function: Display/Set Cli command function
- Format:
 - ◆ Query

<Cli-Getin>

- ◆ Set

<Cli-Getin> [Serial-String/Always/Disable]

- Parameter:
 - Set Cli command parameters. Setting is valid immediately.
 - ◆ Serial-String: Enable specific data to enter into Cli command mode.
 - [Input Serail String]: Default: **+++**, Range1~10 bytes. Also can input hex format data. The HEX data are separated by Spaces, Like **【30 31 32 33 34】**, When it received string data “01234”, then It can enter into Cli command.
 - ◆ Always: Always work in Cli command mode when device power on.
 - ◆ Disable: Disable Cli command mode. UART and Telnet both can't use Cli Command.

4.2.1.29. UART/Cli-WaitTime Command

- Function: Display/Set Cli command wait time
 - ◆ Format

<Cli-WaitTime>

- ◆ Set

<Cli-WaitTime> [timeout]

- Parameter:
 - Set Cli command mode timeout exit time. If there is no Cli command sent for the waitfime, It will exit Cli command mode to transparent transmission, Setting is valid immediately.
 - ◆ timeout: Default: **300s**, Range 0: Disable WaitTime function, 1~300s.

4.2.1.30. UART/Proto command

- Function: Display/Set UART protocol function
- Format:
 - ◆ Query

<Proto>

- ◆ Set

<Proto> [NONE/Modbus/Frame]

- Parameter:
 - Setting is valid immediately.
 - ◆ NONE: Default: **None**, transparent transmission, the received UART data will be directly sent to network.
 - ◆ Modbus: Modbus RTU to Modbus TCP.

- ◆ Frame: Enable auto-frame function. Relevant parameters are set in Frame command.

4.2.1.31. UART/Frame Directory

- Function: Display/Set UART frame directory.
- Format:
 - ◆ Tab key query

EPORT/UART/Frame>					
FrameLen	FrameTime	Tag	quit		

4.2.1.32. UART/Frame/FrameLen Command

- Function: Display/Set UART auto-frame frame length
- Format:
 - ◆ Query
- <FrameLen>**
 - ◆ Set
- <FrameLen> [value]**
- Parameter:

Set UART auto-frame length, Setting is valid immediately.

 - ◆ value: Default: **8**, Range: 8~1400.

4.2.1.33. UART/Frame/FrameTime Command

- Function: Display/Set UART auto-frame time
- Format:
 - ◆ Query
- <FrameTime>**
 - ◆ Set
- <FrameTime> [value]**
- Parameter:

Set UART auto-frame time, Setting is valid immediately.

 - ◆ value: Default: **100ms**, Range: 100~10000.

4.2.1.34. UART/Frame/Tag Command

- Function: Display/Set UART auto-frame Tag
- Format:
 - ◆ Query
- <Tag>**
 - ◆ Set
- <Tag> [Enable/Disable]**
- Parameter:

Set UART auto-frame tag. Only transmit data from tag head to tag tail. Filter the other datas. Setting is valid immediately.

 - ◆ Enable: Enable auto-frame tag function.
 - TagHead: LabelHead. Default: **0x55**, Single byte data.
 - TagTail: LabelTail. Default: **0xAA**, Single byte data.

- ◆ Disable: Default: Value.

4.2.1.35. UART/Edit Command

- Function: Set UART parameter
- Format:
 - ◆ Set

<Edit> [baudrate databits stopbits parity]

- Parameter:
 - Set all UART communication parameter including baud rate, data bit, stop bit and parity.

4.2.1.36. UART/Clean Command

- Function: Clear UART transmit-receive data information
- Format:
 - ◆ Set

<Clean>

- Parameter:
 - Clear the UART data count(Data packet/Frame/Error packet and so on) shown in webpage.

4.2.1.37. SOCK Directory

- Function: Display/Set Socket channel directory.
- Format:
 - ◆ Tab key query

EPORT/SOCK>	Show	New	netp	UDP	Quit
-------------	------	-----	------	-----	------

Netp and UDP are created socket channel. Itsupport maximum 5 Sockets.

4.2.1.38. SOCK>Show Command

- Function: Display Socket information function.
- Format:
 - ◆ Query

<Show>

4.2.1.39. SOCK/New Command

- Function: Set new Socket information
- Format:
 - ◆ Set

<New> [name]

- Parameter:
 - There is a default socket created(netp). It support max 5 socket channel. Every channel can be set as TCP/UDP/HTTP and so on. Setting is valid immediately.
 - ◆ Name: Socket name. Range 1~19 characters.
 - Input Sock Proto: Choose one communication method of the following.
 - TCP-SERVER: TCP Server Mode. It support max 5 TCP Client connection.

- TCP-CLIENT: TCP Client Mode. It is used for connecting server.
- UDP-SERVER: UDP Server Mode. Special function. Product will record the last received UDP package source IP and Port information. The received UART data will be send to this IP and port, not the setting Destination .
- UDP-CLIENT: UDP Client Mode.
- HTTP: HTTP Protocol transmission. The received UART data will transform to HTTP format and it will remove the HTTP header information and only output the HTTP data to UART.
- TELNETD: Telnetd Mode. Use Telnet to config the UART Console equipment.
- TLS: **Function is reserved. We will update it soon.**

TCP Server Mode:

- Input Local Port[0]: Set local port, Range 1~65535, 0 is random port. For TCP Server and UDP application, set it to a fixed 1~65535(TCP port 80 is used for its webpage). For TCP Client application, usually set it to 0.
- Input Buffer size[512]: Set Buffer size. Default: 512 bytes, Range:1~1400.
- Input KeepAlive[60]: Set TCP keepalive, Heartbeat time, Defalut 60s, Range: >=0.
- Input Timeout[300]: Set TCP timeout, If exceed setted time and don't received any network data package, It will break TCP connection. If working in TCP client mode, it will reconnect immediately. If it work in TCP server mode, the TCP client need to create the connction. Set this value to 0 is to close the function. The function is used for TCP to restore abnormal connection. Recommend to enable. Default: 300s, Range 0~600.
- Input Sock Security[Disable]: Security options, Used for data special encryption. Default: disable no encryption.
 - Disable: No encryption
 - TLS: TLS1.2 encryptioin, only support in TCP client mode.
 - AES: AES encryption, TCP/UDP all support this.
 - DES3: DES3 encryption, TCP/UDP all support this.
 - ◆ Input key: AES or DES3 key. For AES encryptiont, the key is fixed 16 bytes length, the IV value is the same as key. For DES3 encryption, the key is fixed 24 bytes length, the IV value the first 8 Bytes of key. The key can be ASCII or Hex format data. Hex format data need to use "space" character as separator, ex, "01 02 03..."
- Input Rout[uart]: Set the Socket channel output, Can choose UART and other created Socket or use as Log print using.

TCP Client Mode (Only list out difference)

- Input Server Address: Set server IPv4 address or domain name.
- Input Server Port: Set server port
- Input Local Port[0]: Same as above
- Input Buffer size[512]: Same as above
- Input KeepAlive[60]: Same as above

- Input Timeout[300]: Same as above.
- Input Sock Security[Disable]: Same as above
- Set HeartBeat[Disable]: Set Heartbeat function, default is Disable
- Input HeartBeat Serial[F0FE6B1C3D35]: Set Heartbeat content, default is MAC address
- Input Connect Mode[Always]: Set TCP Client connection mode
 - Always: TCP persistent connection. If TCP break, it will reconnect immediately.
 - Burst: It will establish connection once UART received data. If set stop function, It will disconnect after network received stop data.
 - ◆ Input Stop Serial: Set Burst Mode Stop bits. It can be ASCII or Hex format data, Hex format data need use space as separator , 1~10 bytes.
- Input Rout[uart]: Same as above

UDP Server/ UDP Client

HTTP Mode

- Input HTTP type[POST]: HTTP request type. Default: POST. Can choose POST or GET.
- Input HTTP path[/]: HTTP request path, Need start by "/". The longest byte is 63 bytes.
- Input HTTP version[1.0]: HTTP Protocol Version. Default: 1.0, Can choose 1.0 or 1.1
- Input HTTP parameters: Add HTTP head information, end by "Enter" key.If want to end the input, direct input "Enter" key. All HTTP header data length should be less than 250 bytes.

4.2.1.40. SOCK/netp directory

- Function: Display/Set Socket netp channel directory.
- Format:
 - ◆ Tab key query

EPORT/SOCK/netp>					
	Name	Proto	Server	ServerPort	Security
LocalPort	BufSize	KeepAlive	Timeout	Save	Clean
HeartBeat	ConnectMode	Rout			
Del	Quit				
,	,				

Every created Socket channel can be modified through name. The above command function is the same as New Socket command description

4.2.1.41. SOCK/netp/clean Command

- Function: Clear netp channel data packets information
- Format:
 - ◆ Set
- Parameter:
 - <Clean>

The network data packets information can be checked from webpage. The command will reset the data count.

4.2.1.42. DATA Directory

- Function: Display/Set Cli command mode communication
- Format:
 - ◆ Tab Query

EPORT/DATA-Str>	
Hex	Quit

Default: data sent in ASCII format. Also can change to send by HEX, The command is used for Cli command mode to transfer data.

4.2.1.43. Restart Command

- Function: Restart instruction.
- Format:
 - ◆ Set

<Restart>

4.2.1.44. Reload Instruction

- Function: Restore Factory setting instruction.
- Format:
 - ◆ Set

Reload [SYS/UART/SOCK]

- Parameter:

Reload to factory setting, if add the following parameters, it will only restore corresponding parameters. Parameter can including one of the below three:

 - ◆ SYS: Restore system setting relevant paramter
 - ◆ UART: Restore UART setting relevant paramter
 - ◆ SOCK: Restore Socket relevant paramter

4.2.1.45. WIFI Catalog

- Function: Display/Set WIFI function
- Format:
 - ◆ Tab query

EPORT>WIFI				
EPORT/WIFI>				
Show	Mode	Status	Scan	Quit

4.2.1.46. WIFI>Show Command

- Function: Display WIFI status
- Format:
 - ◆ Tab query

```
EPORT/WIFI>show
====WIFI Status====
Mode:AP
AP SSID:DDDD
Connected

STA SSID:Sam401
Disconnected
```

4.2.1.47. WIFI/Mode Command

- Function: Display/Set WIFI work mode.

- Format:

- ◆ Query

<Mode>

- ◆ Set

<Mode> [AP/STA/APSTA]

- Parameter:

Set WIFI work mode. Valid after restart.

- ◆ AP mode: Default, AP mode

- Input AP SSID: Input the name of AP, 1~31 characters
 - Input AP Key: Input the password of AP, no password default, 8~63 characters.

- ◆ STA: STA mode

- Input STA SSID: Input the name of router, 1~31 character
 - Input STA Key: Input the password of router

- ◆ APSTA: (reserved)

4.2.1.48. WIFI/Status Command

- Function: Same as Show command.

4.2.1.49. WIFI/Scan Command

- Function: Serach the AP nearby.

- Format:

- ◆ Query

<Query>

```
EPORT/WIFI>Scan
CH,SSID,BSSID,RSSI
11,Caoyu,78:96:82:A2:C6:A2,10
11,Sam401,D4:EE:07:2D:14:1E,100
11,UPGRADE-AP,20:DC:E6:48:35:9E,39
10,ChinaNet-yRMx,38:E3:C5:A2:87:D5,100
6,xiaoheizi,B0:95:8E:06:CB:16,34
6,Caoyu,AA:25:93:B8:45:E2,5
6,Caoyu,D0:C7:C0:24:6C:40,20
1,TP-LINK_FF03AA,78:A1:06:FF:03:AA,15
```

4.2.1.50. Exit Command

- Function: Exit Cli command mode

- Format:

- ◆ Set

<Exit>

4.2.1.51. Quit Command

- Function: Quit the current and go the father Cli command directory.

- Format:

- ◆ Set

<Quit>

4.2.1.52. FwUpgrade Instruction

- Function: Upgrade product firmware.

- Format:

- ◆ Set

FwUpgrade [url]

- Parameter:

Do upgrade function, if upgrade success, it will feedback “Upgrade OK”, if fail, output “Upgrade FAIL”, reboot to run with new firmware if success

- ◆ url: firmware url resources, Ex: http://192.168.0.101/mfw.bin

APPENDIX A: REFERENCES

A.1. Test Tools

IOTService Configure Software:

<http://gb.hi-flying.com/downloadsfront.do?method=picker&flag=all&id=8c366199-b599-47a4-8d9c-20fa0b68bfcf&fileId=89&v=0.zip>

Overview of Characteristic	Parameters	Documents	Order Information
Data Sheet			
Title	Description	Version	Time
HF5111B User Manual	HF5111B User Manual	1.0	2016.11.16
Eport&HF51 Series Function and Cli Command	Eport&HF51 Series Function and Cli Command	1.0	2016.10.21
Eport&HF51 Series Application Manual	Eport&HF51 Series Application Manual	1.0	2016.08.31
IOTManager Config Tools	IOTManager Config Tools	2.5	2017.01.20

UART、Network Test software:

http://www.hi-flying.com/download_list_dc/&downloadcategoryId=14&isMode=false&comp_stats=comp-FrontDownloadsCategory_show01-1376450727769.html

A.2. Quick Start Manual

See our product application on website:

http://www.hi-flying.com/products_detail/productId=95.html

APPENDIX B:TELNET COMMUNICATION FUNCTION

B.1. Telnet Use Scene:

- a) Remote management device
- b) Remote management uart equipment

B.2. Telnet Features:


- a) Telnet support echo mode,
- b) Telnet only support one Client port.
- c) Telnet port number is 23
- d) Telnet connected with TCP, If Client port don't transmit data in 300s, It will auto disconnect.

B.3. Telnet Usage:


Telnet function default as ON, If can't connect, Pls use webpage or configuration to check the function is on or off.




- a) Configure Secure CRT module and connect parameter, Equipment need to connect with LAN, Can use equipment LAN IP to access , If need remote to access the equipment, It need router have public IP address as port and mapped to internal website, Then can remote access equipment.

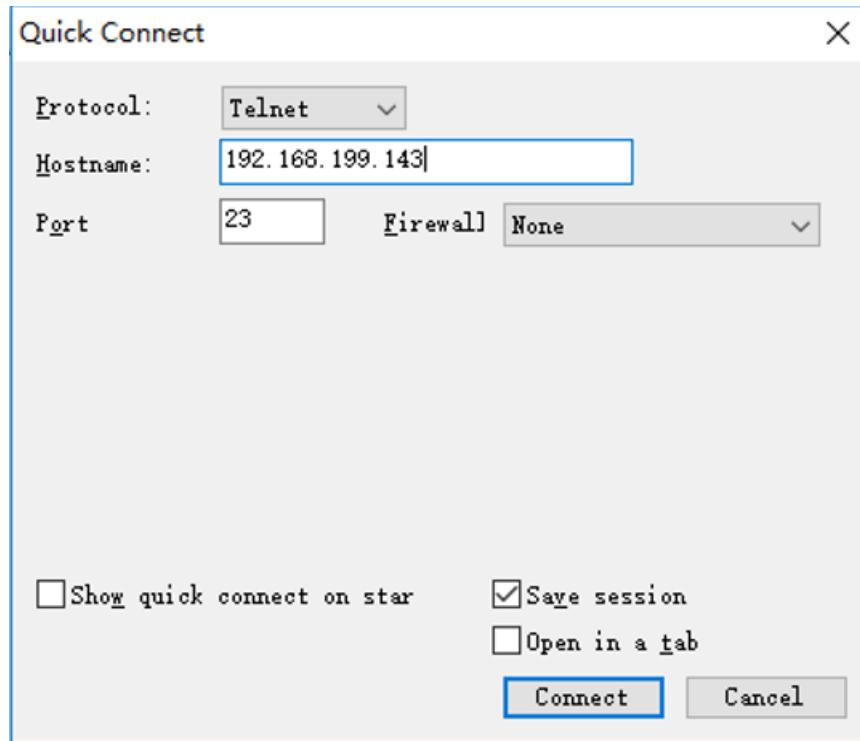

- b) Use webpage account and password login in module, Then interface will show "EPORT>" .

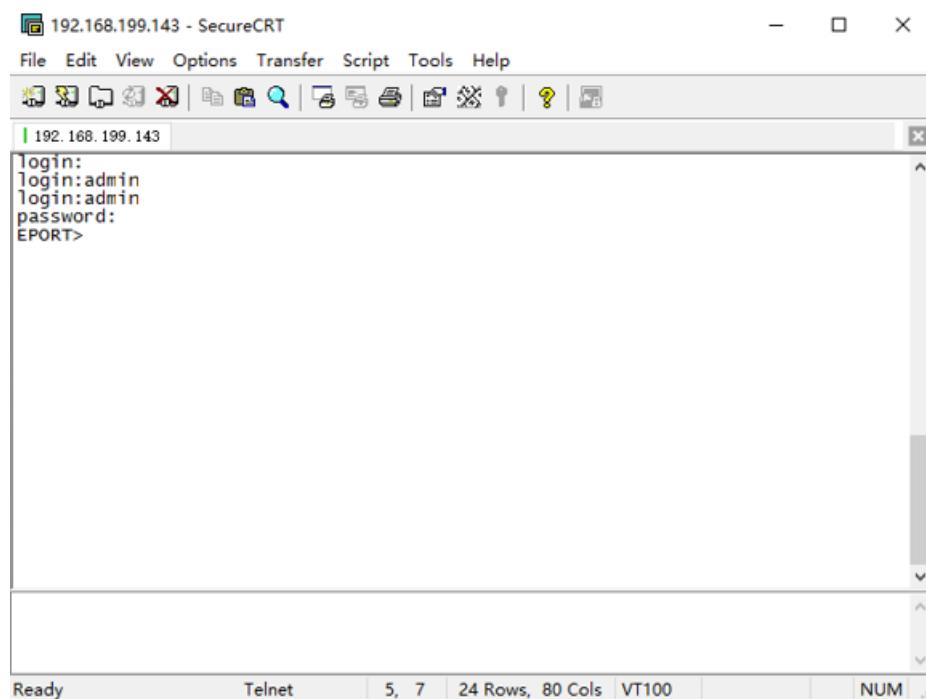


- c) Later use are same as UART cli command, And can realise Telnet data with UART data transparent transmission application.,

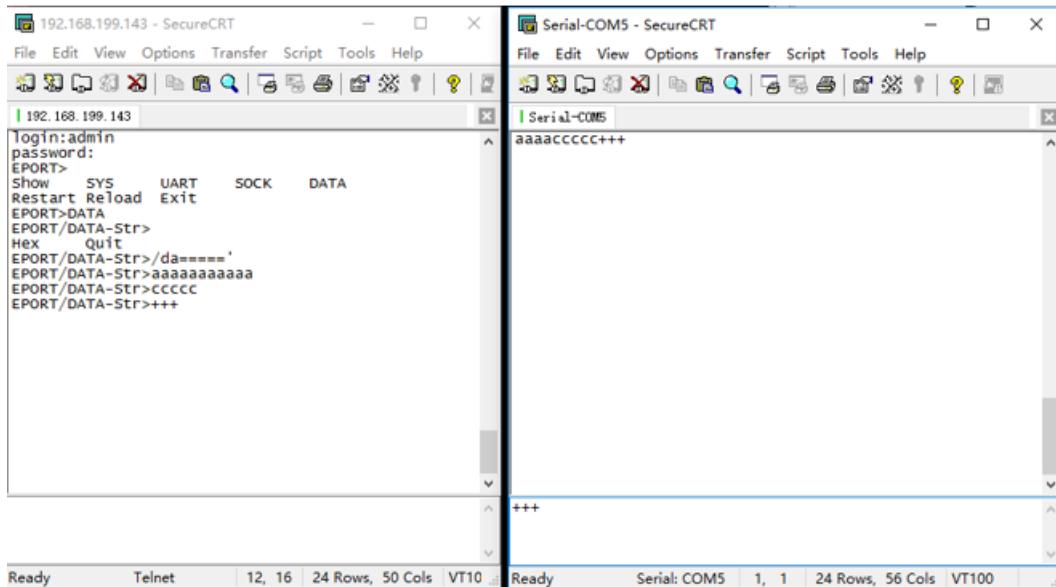

Telnet Software implementation principle:

Step 1 Establish TCP connection with module


Step 2 Module send “login”, Client port send user name(need end with Enter key, Tools can type Ctrl+Enter)

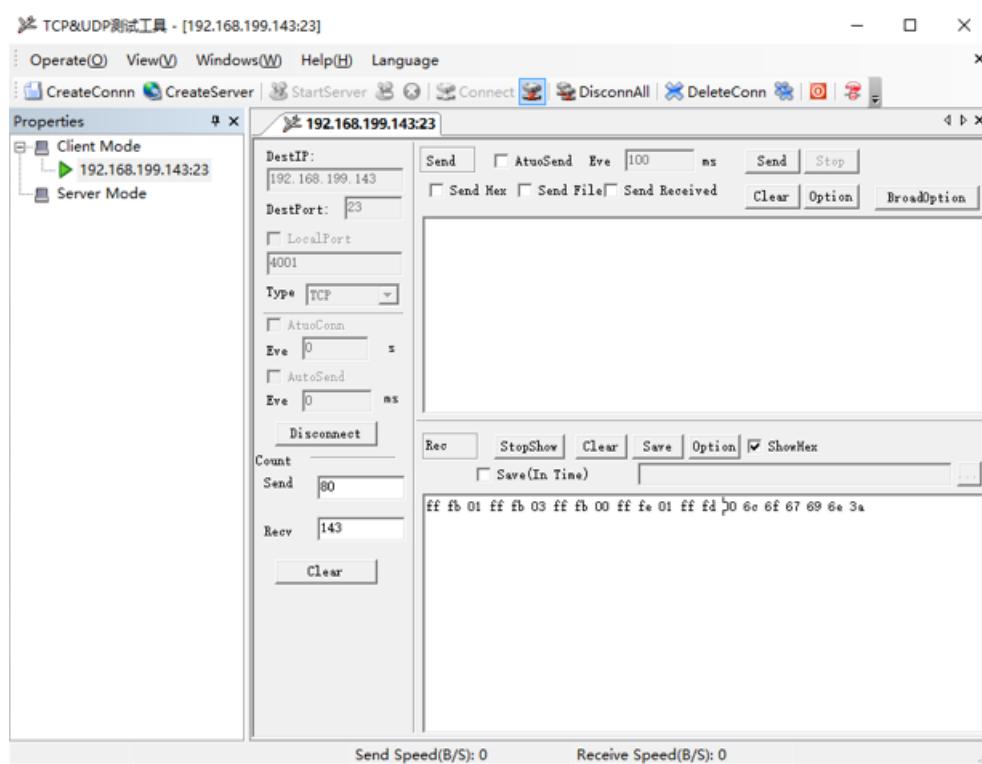

Step 3 Module send 0xFF 0xFB 0x01 Close telnet input display.

Step 4 Module send password, Client port send login password

Step 5 Module send 0xFF 0xFC 0x01 Open telnet input display

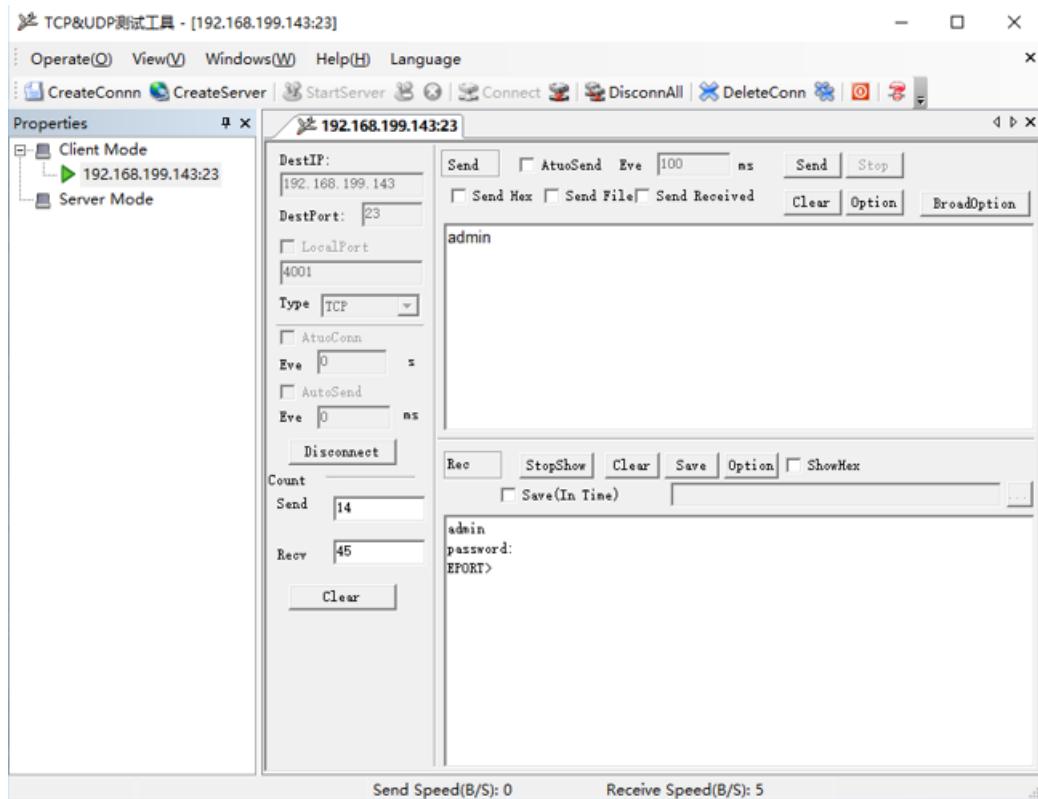

Step 6 It can send and receive Cli command After Enter into Cli command mode.

APPENDIX C: CONTACT INFORMATION

Address: Room 1002, Building 1, No.3000, Longdong Avenue, Pudong New Area, Shanghai, China, 201203

Web: www.iotworkshop.com or www.hi-flying.com

Contact:

Sales: sales@iotworkshop.com

Support: support@iotworkshop.com

Service: service@iotworkshop.com

Business: business@iotworkshop.com

For more information about IOTworkshop modules, applications, and solutions, please visit our web site www.iotworkshop.com

<END OF DOCUMENT>