

RS232 Control Commands For the 4x4 and 8x8 HDMI Matrix

RS232 cable with straight-through connection (USB-RS232 can be used directly to control)

Communication protocol:

Baud rate: 9600

Data bit: 8

Stop bit: 1

Check bit: None

Commands	Explanation	Function description
YXZ.	Y=1,2,3,4..... Z=1,2,3,4.....	Switch Input Y to Output Z Eg. " 1X2. " means switch Input 1 to output 2
SaveY.	Y=1,2,3,4.....	Save current status to scene Y Eg. " Save2. " means saving current status to Scene 2
RecallY.	Y=1,2,3,4.....	Recall the saved scene Y Eg. " Recall2. " means recall the saved Scene 2
Buzzeron.	Beep sound	Buzzer on
Buzzeroff.		Buzzer off

Note:

- Every command ends with a period "." and it can't be missing.
- The letter can be capital or small letter.