

HF2421

4G Serial Server Device User Manual

V 1.1



Overview of Characteristic

- ◇ Two RS232/RS485/RS422 interface to 4G/3G
- ◇ Two Ethernet(LANN) to 4G/3G
- ◇ 802.11bgn Wi-Fi to 4G/3G
- ◇ MIPS MCU with 4MB Flash and 8MB SRAM. Run on eCos
- ◇ Support TCP/IP/Telnet /Modbus TCP Protocol
- ◇ Support RS232/RS422/RS485 to Ethernet/Wi-Fi Conversion, Serial Speed Upto 460800 bps

- ◇ **Support STA/AP/AP+STA Mode**
- ◇ **Support Router or Bridge Network Working Mode.**
- ◇ **Support 10/100M Ethernet Auto-Negotiation**
- ◇ **Support Easy Configuration Through a Web Interface or PC IOTService Tool**
- ◇ **Support Security Protocol Such As SSL/AES/DES3**
- ◇ **Support Web OTA Wirelss Upgrade**
- ◇ **Wide DC Input 5~36VDC or 9~50VDC**
- ◇ **Size: 95 x 65 x 25 mm (L x W x H)**
- ◇ **FCC/CE/RoHS Certificated**

TABLE OF CONTENTS TABLE OF CONTENTS

TABLE OF CONTENTS TABLE OF CONTENTS	3
LIST OF FIGURES.....	6
LIST OF TABLES	8
HISTORY.....	8
1. PRODUCT OVERVIEW	9
1.1. General Description	9
1.2. Device Features.....	9
1.3. Device Parameters	10
1.4. Key Application	12
2. HARDWARE INTRODUCTION	13
2.1. Pins Definition	14
2.2. RS232 Interface	16
2.3. RS485 Interface	16
2.4. RS422 Interface	16
2.5. RJ45 Interface.....	17
2.6. Mechanical Size.....	17
2.7. Rail Mounting.....	18
2.8. Item Number	19
3. FUNCTIONAL DESCRIPTION	19
3.1. Basic Network Protocol.....	19
3.2. Wireless Network	20
3.2.1. AP Network	20
3.2.2. IOTService Software	21
3.2.6. Webpage Configuration.....	22
3.3. Ethernet Interface Function	22
3.3.1. Ethernet Port with Wi-Fi	23
3.4. Working Mode.....	24
3.4.1. Transparent Transmission Mode.....	24
3.4.2. TCP Server.....	24
3.4.3. HTTP Mode	25
3.4.4. Telnetd Mode	27
3.5. AES/DES3/TLS Data Encryption	29
3.6. Keepalive.....	29
3.7. Timeout	30
3.8. Router Setup.....	30
3.9. UART Frame Scheme.....	32
3.9.1. UART Free-Frame.....	32
3.9.2. UART Auto-Frame.....	33

3.9.3. Tag Function	34
3.10. Modbus Protocol	34
3.11. Cli Command	35
3.12. UART Flow Control and RS485 Function	35
3.13. Firmware Upgrade.....	36
3.14. Web Page Function.....	36
3.15. Cable Direct Connection	37
3.16. NTP Function.....	37
3.17. Heartbeat Function	38
3.18. UART Fast Config.....	38
3.19. Other Function.....	38
4. CLI COMMAND NOTES	40
4.1. Working Mode.....	40
4.1.1. Switch Transparent Transmission Mode to Cli Command Mode	40
4.2. Cli Command Overview	41
4.2.1. Cli Command Format	44
4.2.1.1. Show Command	44
4.2.1.2. SYS Directory	45
4.2.1.3. SYS/Auth Directory	45
4.2.1.4. SYS/Auth/User Command.....	45
4.2.1.5. SYS/Auth/Password Command	46
4.2.1.6. SYS/Network Directory.....	46
4.2.1.7. SYS/Network/Show Command	46
4.2.1.8. SYS/Network/DHCP Command	46
4.2.1.9. SYS/Network/DNS Command.....	46
4.2.1.10. SYS/Network/Mode Command	47
4.2.1.11. SYS/Network/Hostname Instruction	47
4.2.1.12. SYS/Telnet Instruction.....	47
4.2.1.13. SYS/Web Instruction	48
4.2.1.14. SYS/MAC Instruction.....	48
4.2.1.15. SYS/JCMD Instruction.....	48
4.2.1.16. SYS/NTP Instruction	48
4.2.1.17. UART Directory	49
4.2.1.18. UART/Show Instruction.....	49
4.2.1.19. UART/Baudrate Instruction	49
4.2.1.20. UART/Databits Instruction.....	49
4.2.1.21. UART/Stopbits Instruction	50
4.2.1.22. UART/Parity Instruction.....	50
4.2.1.23. UART/Buf Directory	50
4.2.1.24. UART/Buf/Bufsize Instruction.....	50
4.2.1.25. UART/Buf/GapTime Instruction.....	51
4.2.1.26. UART/Buf/FlowCtrl Command	51
4.2.1.27. UART/Buf/SWFlowCtrl Command.....	51
4.2.1.28. UART/Cli-Getin Command	52

4.2.1.29. UART/Cli-WaitTime Command	52
4.2.1.30. UART/Proto command	52
4.2.1.31. UART/Frame Directory	53
4.2.1.32. UART/Frame/FrameLen Command	53
4.2.1.33. UART/Frame/FrameTime Command	53
4.2.1.34. UART/Frame/Tag Command	53
4.2.1.35. UART/Edit Command	54
4.2.1.36. UART/Clean Command	54
4.2.1.37. SOCK Directory	54
4.2.1.38. SOCK/Show Command	54
4.2.1.39. SOCK/New Command	54
4.2.1.40. SOCK/netp directory	56
4.2.1.41. SOCK/netp/clean Command	56
4.2.1.42. DATA Directory	57
4.2.1.43. Restart Command	57
4.2.1.44. Reload Instruction	57
4.2.1.45. WIFI Catalog	57
4.2.1.46. WIFI/Show Command	57
4.2.1.47. WIFI/Mode Command	58
4.2.1.48. WIFI/Status Command	58
4.2.1.49. WIFI/Scan Command	58
4.2.1.50. Exit Command	59
4.2.1.51. Quit Command	59
4.2.1.52. FwUpgrade Instruction	59
APPENDIX A: REFERENCES	60
A.1. Test Tools	60
APPENDIX B: TELNET COMMUNICATION FUNCTION	61
B.1. Telnet Use Scene:	61
B.2. Telnet Features:	61
B.3. Telnet Usage:	61
APPENDIX C: CONTACT INFORMATION	65

LIST OF FIGURES

Figure 1. HF2421 Appearance	13
Figure 2. HF2421 Interface.....	14
Figure 3. HF2421 Side View.....	14
Figure 4. RS232 Pin Defination(Male/Needle Type).....	16
Figure 5. RS232 Pin Interface	16
Figure 6. HF2421 RS422 Connection.....	17
Figure 7. RJ45 Pin Defination.....	17
Figure 8. HF2421 Mechanical Dimension.....	18
Figure 9. HF2421 Rail	18
Figure 10. HF2421 Product Definition	19
Figure 11. HF2421 Software Protocol Structure	20
Figure 12. General AP Network.....	21
Figure 13. Configure Wi-Fi Parameter	21
Figure 14. Product Webpage.....	22
Figure 15. Ethernet Interface Function	23
Figure 16. Transparent data transmission example.....	24
Figure 17. TCP Server data transmission example	25
Figure 18. Multi Socket data transmission example	25
Figure 19. Webpage set up multi Socket channel	25
Figure 20. IOT Manager Software Configure.....	26
Figure 21. Web Page Configure	26
Figure 22. HTTP transmit example.....	27
Figure 23. IOTService Software Configure Protocol.....	28
Figure 24. Web page configure protocol.....	28
Figure 25. Telnet details example.....	29
Figure 26. IOTService Software Configure Encryption	29
Figure 27. Web Page Configure Encryption	29
Figure 28. Web Page Config Keepalive.....	30
Figure 29. Web Page Configure Timeout	30
Figure 30. Route function setup example	31
Figure 31. Route Function Data Flow Example	31
Figure 32. netp2 to uart2	32
Figure 33. netp1 to uart1	32
Figure 34. UART free-frame function.....	33
Figure 35. UART Auto-Frame Function	33
Figure 36. UART Auto-Frame Function	34
Figure 37. UART Auto-Frame Tag Function.....	34
Figure 38. UART Modbus Function	34
Figure 39. Cli Command Setting.....	35
Figure 40. UART Flow Control.....	35
Figure 41. UART Half Duplex Function	35
Figure 42. External web page.....	36
Figure 43. Internal web page	36

Figure 44. Web Page Function Setting.....	36
Figure 45. Cable Direct Connection.....	37
Figure 46. IOTService Tools NTP Setting	37
Figure 47. Cli Command NTP Setting and Query.....	38
Figure 48. Heartbeat Function.....	38
Figure 49. Other Function.....	39
Figure 50. HF2421 Default: UART Parameters	40
Figure 51. Switch Transparent Transmission Mode to Cli Command Mode.....	41
Figure 52. Cli Command Root Directory.....	41
Figure 53. Cli Command SYS Tree	42
Figure 54. Cli Command UART Tree.....	42
Figure 55. Cli Command SOCK Tree	43
Figure 56. Cli Other Command.....	44

LIST OF TABLES

Table 1. HF2421 Technical Specifications	10
Table 2. HF2421 Supportable Network Type	12
Table 3. HF2421 Interface Definition	14
Table 4. RJ45 Interface	17

HISTORY

Ed. V1.0 07-28-2017 First Version

1. PRODUCT OVERVIEW

1.1. General Description

The 4G serial server device HF2421 provides protocol conversion among RS232/RS485/RS422 interface, Ethernet/Wi-Fi and 3G/4G, which can meet the solutions for serial/network transmission of industrial products. The HF2421 integrates 4G/3G, Wi-Fi, Ethernet, high-speed serial port, RS232/RS485/RS422 interfaces, and it is based on Ecos operation system and contains webpage, TCP/IP stack which is convenient to achieve remote data collection and check. Hardware interface meets international standard, while it supports air discharge ($\pm 15\text{KV}$) and contact discharge ($\pm 8\text{KV}$) for ESD.

The HF2421 adopts highly integrated hardware and software platform, it has been optimized for all kinds of applications in the industrial control, smart grid, personal medical application and remote control that have lower data rates, and transmit or receive data on an infrequent basis.

1.2. Device Features

- Support 4G/3G/GPRS, FDD-LTE, TDD-LTE, WCDMA, TD-SCDMA, GSM900/1800, GNSS location
- Support Dual RS232/RS485/RS422 to 4G/3G
- Support Dual Ethernet to 4G/3G
- Support APN/VPN
- Support TCP/IP/Telnet/Modbus TCP
- Support Webpage and IOTService Configure
- Support Security Protocol Such As SSL/AES/DES3
- Support Web Wireless Upgrade
- Wide 5~36VDC Power Supply
- Size: 178mm x 95mm x 26mm

1.3. Device Parameters

Table 1. HF2421 Technical Specifications

Item	Parameters
System Information	
Processor/Frequency	MIPS/320MHz
Operating System	Linux
Ethernet Port	
Port Number	2 RJ45
Interface Standard	10/100 Base-T Auto-Negotiation
Protection	Anti-reverse Power Static: 8KV Contact Discharge, 15KV Air Discharge Surge: Difference-mode 4KV, Common-mode 6KV
Transformer	Integrated
Network Protocol	IP, TCP, UDP, DHCP, DNS, HTTP Server/Client, ARP, BOOTP, AutoIP, ICMP, Web socket, Telnet, FTP, TFTP, uPNP, NTP, SNMP, Modbus TCP
Security Protocol	SSL v3 AES 128Bit DES3
Wi-Fi Interface(D Type Supported)	
Standard	802.11 b/g/n
Frequency	2.412GHz-2.484GHz
Network Mode	AP
Security	WEP/WPAPSK/WPA2PSK
Encryption	WEP64/WEP128/TKIP/ AES
Tx Power	802.11b: +20dBm(Max.) 802.11g: +18dBm(Max.) 802.11n: +15dBm(Max.)
Rx Sensitive	802.11b: -89dBm 802.11g: -81dBm 802.11n: -71dBm
Antenna	3dBi Stick Antenna
3G/4G Interface	
Transmit Power	Class 4(33dBm±2dB) for GSM900 Class 1(30dBm±2dB) for DCS1800 Class E2(27dBm±3dB) for GSM900 8-PSK Class E2(26dBm±3dB) for DCS1800 8-PSK Class 3(24dBm+3/-1dB) for CDMA BC0 Class 3(24dBm+1/-3dB) for WCDMA Class 2(24dBm+1/-3dB) for TD-SCDMA Class 3(23dBm±2dB) for LTE FDD Class 3(23dBm±2dB) for LTE FDD
LTE	Maximum Support non-CA CAT4 Support 1.4~20MHz RF Bandwidth Downstream Support Multiple Users MIMO FDD: Maximum Upstream Rate 50Mbpsm Maximum Downstream Rate 150Mbps TDD: Maximum Upstream Rate 35Mbpsm Maximum Downstream Rate 130Mbps

WCDMA	3GPP R8 DC-HSPA+ 16-QAM,64-QAM and QPSK Modulation Maximum Upstream 5.76Mbps Maximum Downstream 42Mbps
TD-SCDMA	CCSA Release 3 Maximum Upstream 2.2Mbps Maximum Downstream 4.2Mbps
CMDA	CDMA 1X Advanced Maximum Upstream 1.8Mbps Maximum Downstream 3.1Mbps
GSM/GPRS/EDGE	R99: CSD Transmission Rate: 9.6Kbps/14.4Kbps GPRS: Support GPRS multi-slot class 12 Code Method: CS-1/CS-2/CS-3/CS-4 EDGE: Support EDGE multi-slot class 12 Support up/downstream Code Method: CS1-4, MCS1-9
Serial Port	
Port Number	2
Interface Standard	RS232: DB9 RS485/RS422: 5.08mm connector Support one channel of RS232/RS422/RS485.
Data Bits	7,8
Stop Bit	1,2
Check Bit	None,Even,Odd
Baud Rate	TTL: 300 bps~230400 bps
Flow Control	No Flow control Hardware RTS/CTS、DSR/DTR(RS232) Software Xon/ Xoff flow control
Software	
Web Pages	Http Web Configuration Customization of HTTP Web Pages
Configuration	Web CLI XML import Telnet IOTService PC Software
Firmware Upgrade	Web
Basic Parameter	
Size	178mm x 95mm x 26mm
Operating Temp.	-40 ~ 85°C
Storage Temp.	-45 ~ 105°C, 5 ~ 95% RH (no condensation)
Input Voltage	5~36VDC or 9~50VDC
Working Current	~300mA@9V

Table 2. HF2421 Supportable Network Type

型号 制式	使用国家	4G	3G	GNSS定位	TDD-LTE	FDD-LTE	TD-SCDMA	WCDMA	CDMA2000 1X/EVDO	GSM
HF2421A	加拿大、美国	√	√	√	—	B2/4/12	—	B2/4/5	—	—
HF2421AU	拉丁美洲、 澳大利亚、 台湾、新西 兰	√	√	√	B40	B1/2/3/4/5/7 /8/28	—	B1/2/5/8	—	B2/3/5/8
HF2421C	中国	√	√	√	B38/39/40/4 1	B1/3/8	B34/39	B1/8	—	B3/8
HF2421CD		√	√	×						
HF2421CE		√	√	√	B38/39/40/4 1	B1/3/8	B34/39	B1/8	BC0	B3/8
HF2421CED		√	√	×						
HF2421E	欧洲、韩国 、印度、东 南亚、俄罗 斯、以色列 中东等	√	√	√	B38/40/41	B1/3/5/7/8/2 0	—	B1/5/8	—	B3/8
HF2421J	日本	√	√	√	B41	B1/3/8/18/1 9/26/41	—	B1/6/8/19	—	—
HF2421V	美国	√	√	√	—	B4/13	—	—	—	—
HF2321L	中国	×	√	√	—	—	—	B1/2/5	—	—
HF2321LD		×	√	×						

Character D in the type name means the module supports Wi-Fi function but not GNSS location. Other type supports GNSS location but not Wi-Fi. Nowadays, our company mainstream model is HF2421CD.

1.4. Key Application

The HF2421 device connects serial device to Ethernet networks using the TCP/IP protocol:

- Remote equipment monitoring, remote sensing, remote calculating and public business
- Environment climate collection and monitoring
- Solar energy/charging pile, power source and electrical monitoring
- Video, security and access monitoring
- Earthquake, geological disaster and meteorological monitoring
- Water treatment monitoring
- Vehicle industrial

2. HARDWARE INTRODUCTION

The HF2421 unit is a complete solution for serial port device connecting to network. This powerful device supports a 10/100BASE-T Ethernet connection, a full TCP/IP protocol stack, and multiple encryption method to ensure confidentiality.

Through Ethernet cable or wireless signal connect router with HF2421 serial server for data transfer, which makes the data transformation very simple. HF2421 meet EMC Class B security level, It can pass every countries relevant certification test.



Figure 1. HF2421 Appearance

2.1. Pins Definition



Figure 2. HF2421 Interface

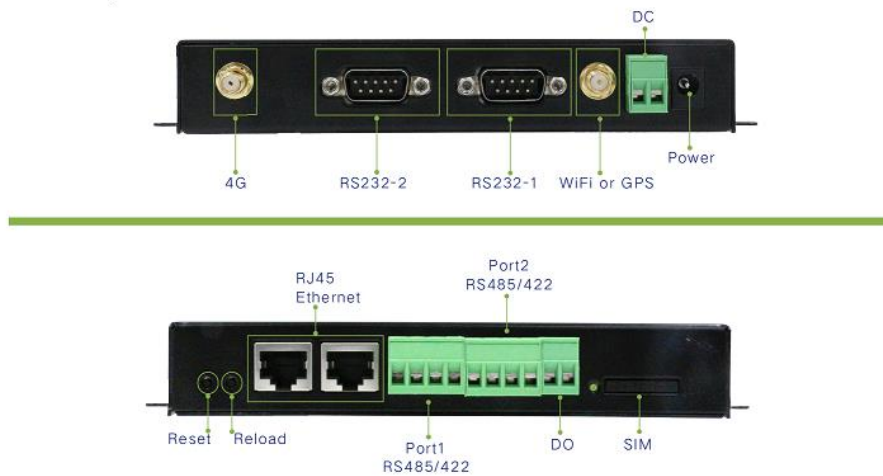


Figure 3. HF2421 Side View

Table 3. HF2421 Interface Definition

Function	Name	Description
External Interface	RJ45 Ethernet	10/100M adaptive Ethernet, working under LANN port for direct connection with PC
	RS232/RS422 /RS485 x 2	Dual RS232/RS485/RS422 serial port
	SIM Card	Standard SIM card slot
	WIFI or GPS	External Wi-Fi or GPS antenna. Suffix with D

Function	Name	Description
	Antenna(SMA)	has Wi-Fi, the others has GPS(Optional)
	DI1~DI4	Digital input, reserved
	DO	Relay digital input,reserved
	4G Antenna (SMA)	External 4G antenna interface
	DC Input	DC Power 5~36V Input
LED Indicator	Power	Internal Power Supply Indicator On: Power is OK Off: Power is NG
	ActiveX	Data transfer Indicator On: Data is transferring. Off: No data transfer
	NETX	Ethernet Connection Indicator On: Ethernet is OK Blink: Data is transferring Off: No connection
	Link	Connection Indicator On: Ethernet connection or Wi-Fi STA connection is OK Off: No Ethernet connection
	Wi-Fi	Wi-Fi Indicator On: Wi-Fi is on. Off: Wi-Fi is off
	DIX	Digital input(reserved)
	Relay	Relay output(reserved)
	4G/SYS	Operator Network Indicator Fast Blink: Connection is OK Slow Blink: Registering
	Button	Reset
Switch	Reload	Restore to factory setting Long press this button for 3seconds and loose it to restore parameters to factory setting. Off: Disable protect.

2.2. RS232 Interface

Device serial port is male(needle), RS232 voltage level(can connect to PC directly), Pin Order is consistent with PC COM port. Use cross Cable connected with PC(2-3 cross, 7-8 cross, 5-5 direct, 7-8 no connection), see the following table for pin definition.



Figure 4. RS232 Pin Definition(Male/Needle Type)

Figure 5. RS232 Pin Interface

Pin Number	Name	Description
2	RXD	Receive Data
3	TXD	Send Data
5	GND	GND
7	RTS	Request to Send
8	CTS	Clear to Send

2.3. RS485 Interface

RS485 use two wire links, A(DATA+), B(DATA-). Connect A(+) to A(+), B(-) to B(-) for communication.

The RS485 interface support maximum 32 485 device, special hardware version can support max 255 device. The cable maximum length is 1200 meters. Need to add 120Ohm terminal resistor for over 300 meters.

2.4. RS422 Interface

RS422 interface use T+/T-/R+/R-, cross connect to device as the following picture.

Name	Description
TX+	Transfer Data+
TX-	Transfer Data-
RX+	Receive Data+
RX-	Receive Data-

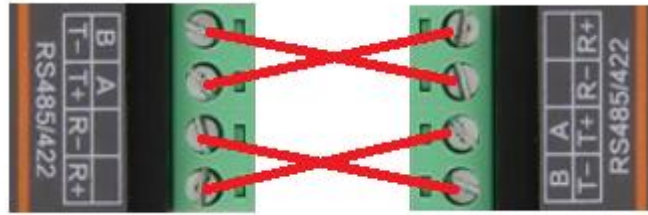


Figure 6. HF2421 RS422 Connection

2.5. RJ45 Interface

Ethernet port is 10M/100M adaptive, support AUTO MDI/MDIX which means it support direct connecting to PC with Ethernet cable.

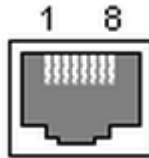


Figure 7. RJ45 Pin Definition

Table 4. RJ45 Interface

Pin Number	Name	Description
1	TX+	Transfer Data+
2	TX-	Transfer Data-
3	RX+	Receive Data+
4	PHY-VCC	Transformer Tap Voltage
5	PHY-VCC	Transformer Tap Voltage
6	RX-	Receive Data-
7	N.C.	None Connect
8	N.C.	None Connect

2.6. Mechanical Size

The dimensions of HF2421 are defined as following picture (mm):

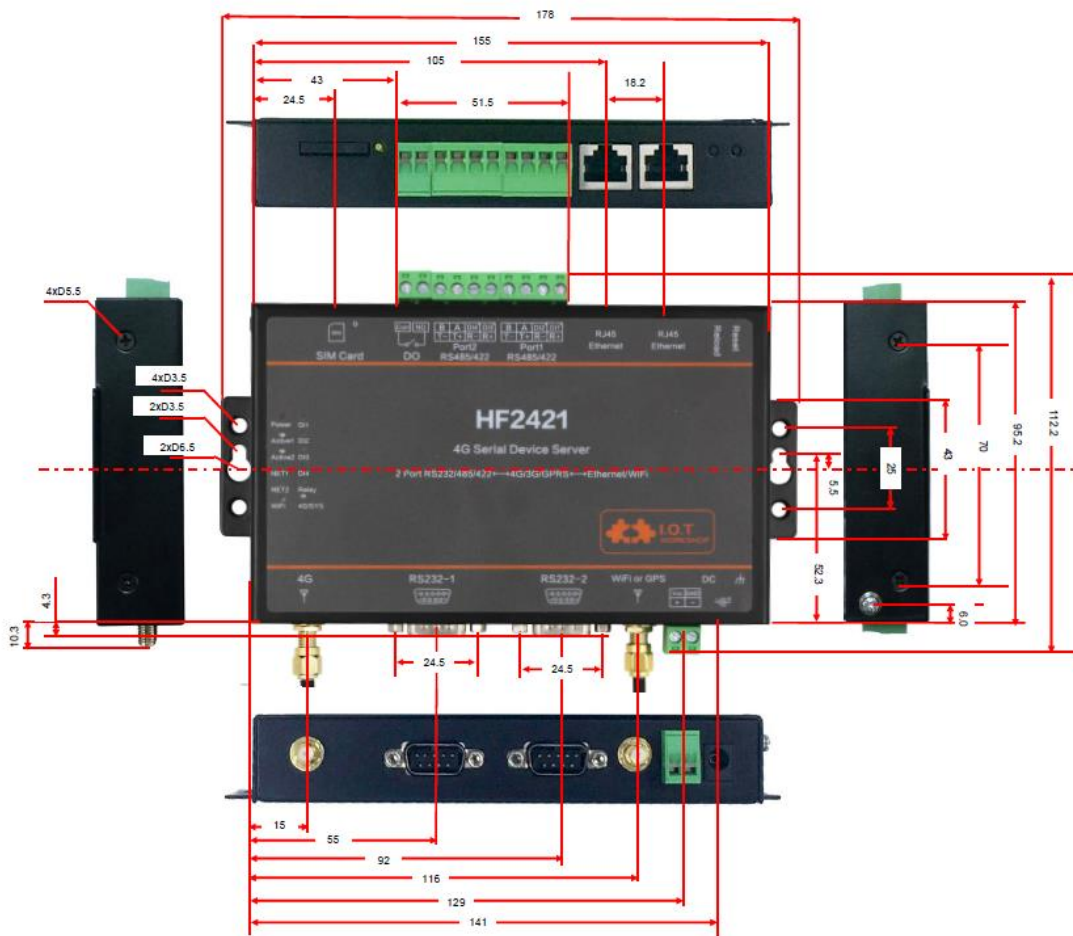


Figure 8. HF2421 Mechanical Dimension

2.7. Rail Mounting

We support to provide rail for mounting as the following picture.

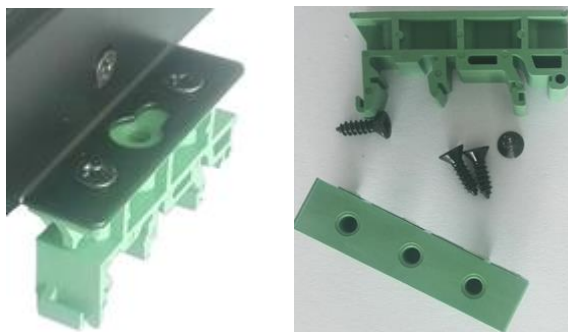


Figure 9. HF2421 Rail

2.8. Item Number

Base on customer detailed requirement, HF2421 provide different configuration version, Details as below:

型号 \ 制式	使用国家	4G	3G	GNSS定位	TDD-LTE	FDD-LTE	TD-SCDMA	WCDMA	CDMA2000 1X/EVDO	GSM
HF2421A	加拿大、美国	√	√	√	—	B2/4/12	—	B2/4/5	—	—
HF2421AU	拉丁美洲、澳大利亚、台湾、新西兰	√	√	√	B40	B1/2/3/4/5/7/8/28	—	B1/2/5/8	—	B2/3/5/8
HF2421C	中国	√	√	√	B38/39/40/41	B1/3/8	B34/39	B1/8	—	B3/8
HF2421CD		√	√	×						
HF2421CE		√	√	√	B38/39/40/41	B1/3/8	B34/39	B1/8	BC0	B3/8
HF2421CED		√	√	×						
HF2421E	欧洲、韩国、印度、东南亚、俄罗斯、以色列、中东等	√	√	√	B38/40/41	B1/3/5/7/8/20	—	B1/5/8	—	B3/8
HF2421J	日本	√	√	√	B41	B1/3/8/18/19/26/41	—	B1/6/8/19	—	—
HF2421V	美国	√	√	√	—	B4/13	—	—	—	—
HF2321L	中国	×	√	√	—	—	—	B1/2/5	—	—
HF2321LD		×	√	×						

Figure 10. HF2421 Product Definition

3. FUNCTIONAL DESCRIPTION

The HF2421 has the following feature:

- Connect customer's device with PC or server via TCP/UDP/Telnet.
- Contain a HTTP web server allow user to configure through browser with PC or phone.

3.1. Basic Network Protocol

The HF2421 device uses the IP address for network communications. It uses the TCP to assure that no data is lost or duplicated. It uses UDP to assure that data can be fast and effective to Destination address.

Supported protocols include:

- ARP, UDP, TCP, ICMP, DHCP, Telnet, DHCP, HTTP Server/Client Web socket
- Telnet command configuration, Web server configuration
- Security Protocol: TLS, AES, DES3 encryption

HF2421			
Application	Protocols	Security	Configuration

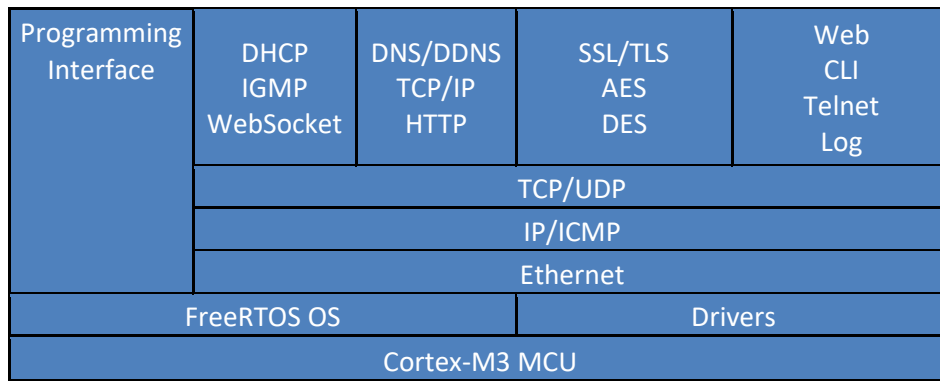


Figure 11. HF2421 Software Protocol Structure

3.2. Wireless Network

Wi-Fi supported product works under AP mode as default.

AP: Wireless access point which is the central joint. Usually, wireless router is a AP, other STA devices can connect with AP to join the network.

STA: Wireless station which is terminal of a wireless network. Such as laptop and pad etc.

3.2.1. AP Network

HF2421 can construct a wireless network as AP. All the STA devices will consider the AP as the centre of the wireless network. The mutual communication can be transponded by AP. If 4G network connects well, PLC device will send data to public server, shown as follow:



Figure 12. General AP Network

3.2.2. IOTService Software

Open the IOTService after connect to the AP hotspot generated by HF2421 or connect to Product Ethernet port to PC, then configure the parameter.

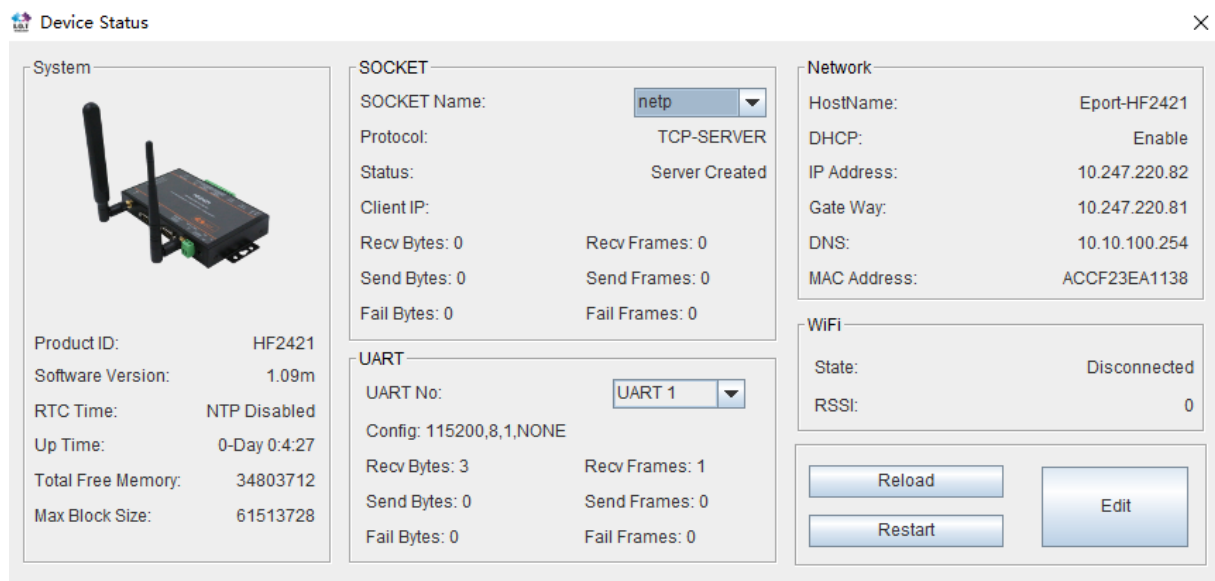


Figure 13. Configure Wi-Fi Parameter

3.2.6. Webpage Configuration

Use PC to connect with HF2421 through its AP hotspot or Ethernet connection. Input the default IP(10.10.100.254, default username and password: admin/admin) to login the webpage to configure the parameter.

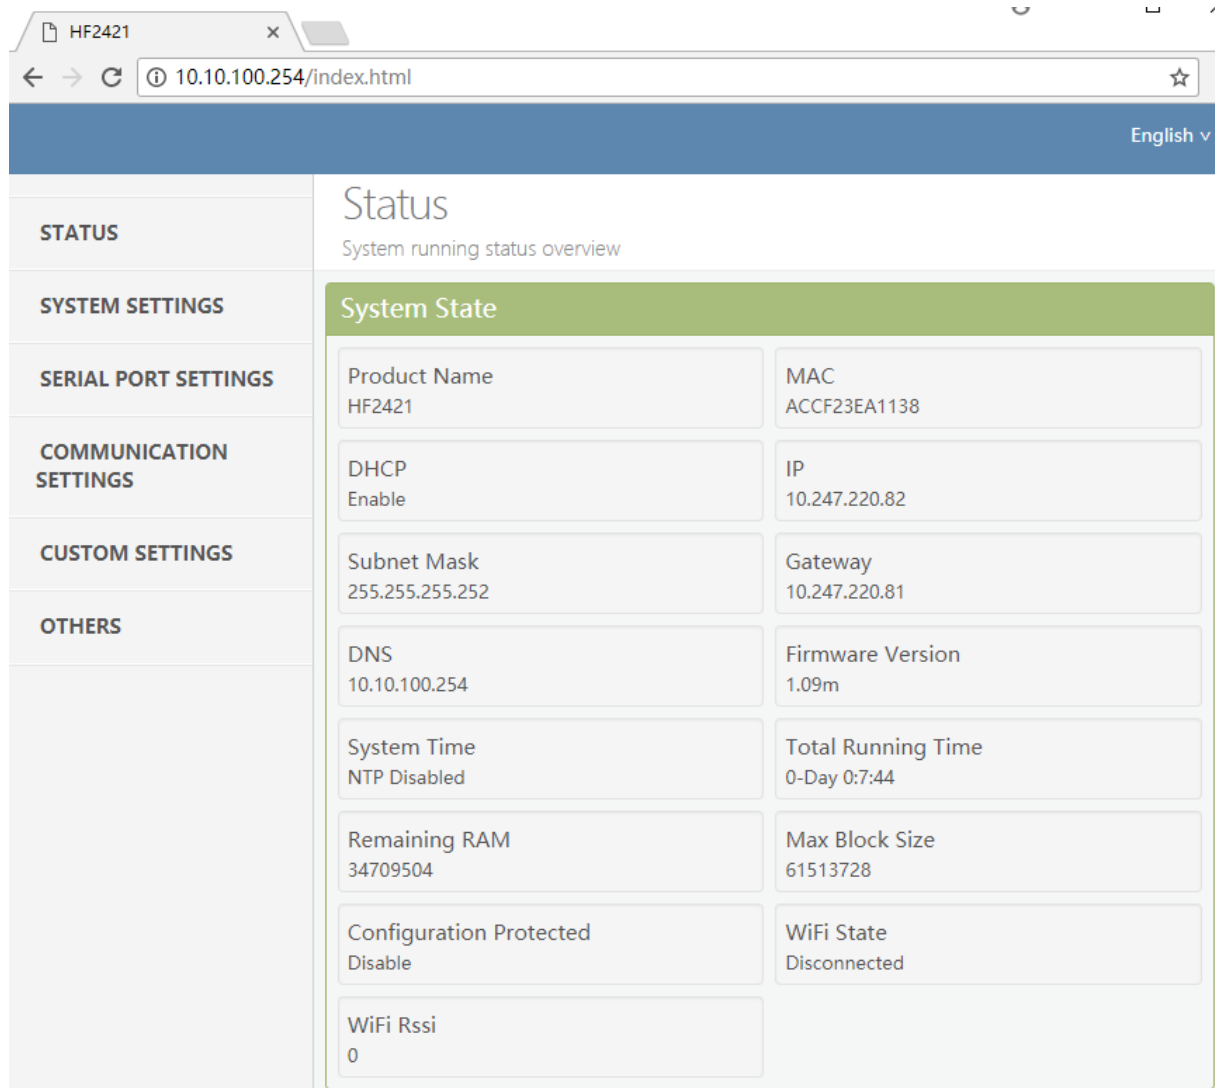


Figure 14. Product Webpage

3.3. Ethernet Interface Function

HF2421 provides with two Ethernet interface(LANN port to assign IP address). By Ethernet interface, user device can easily connect to the public network.

Note: Device will cost some time to assign IP address to Ethernet device. For example, PC directly connect device, it can automatically configure static IP to speed up. On PC side, command ipconfig can be used to search IP address itself.

```

C:\Users\Sam>ipconfig

Windows IP 配置

以太网适配器 以太网:

    连接特定的 DNS 后缀 . . . . . :
    本地链接 IPv6 地址. . . . . : fe80::b873:7689:f33e:5775%2
    IPv4 地址 . . . . . : 10.10.100.100
    子网掩码 . . . . . : 255.255.255.0
    默认网关. . . . . : 10.10.100.254
    
```

3.3.1. Ethernet Port with Wi-Fi

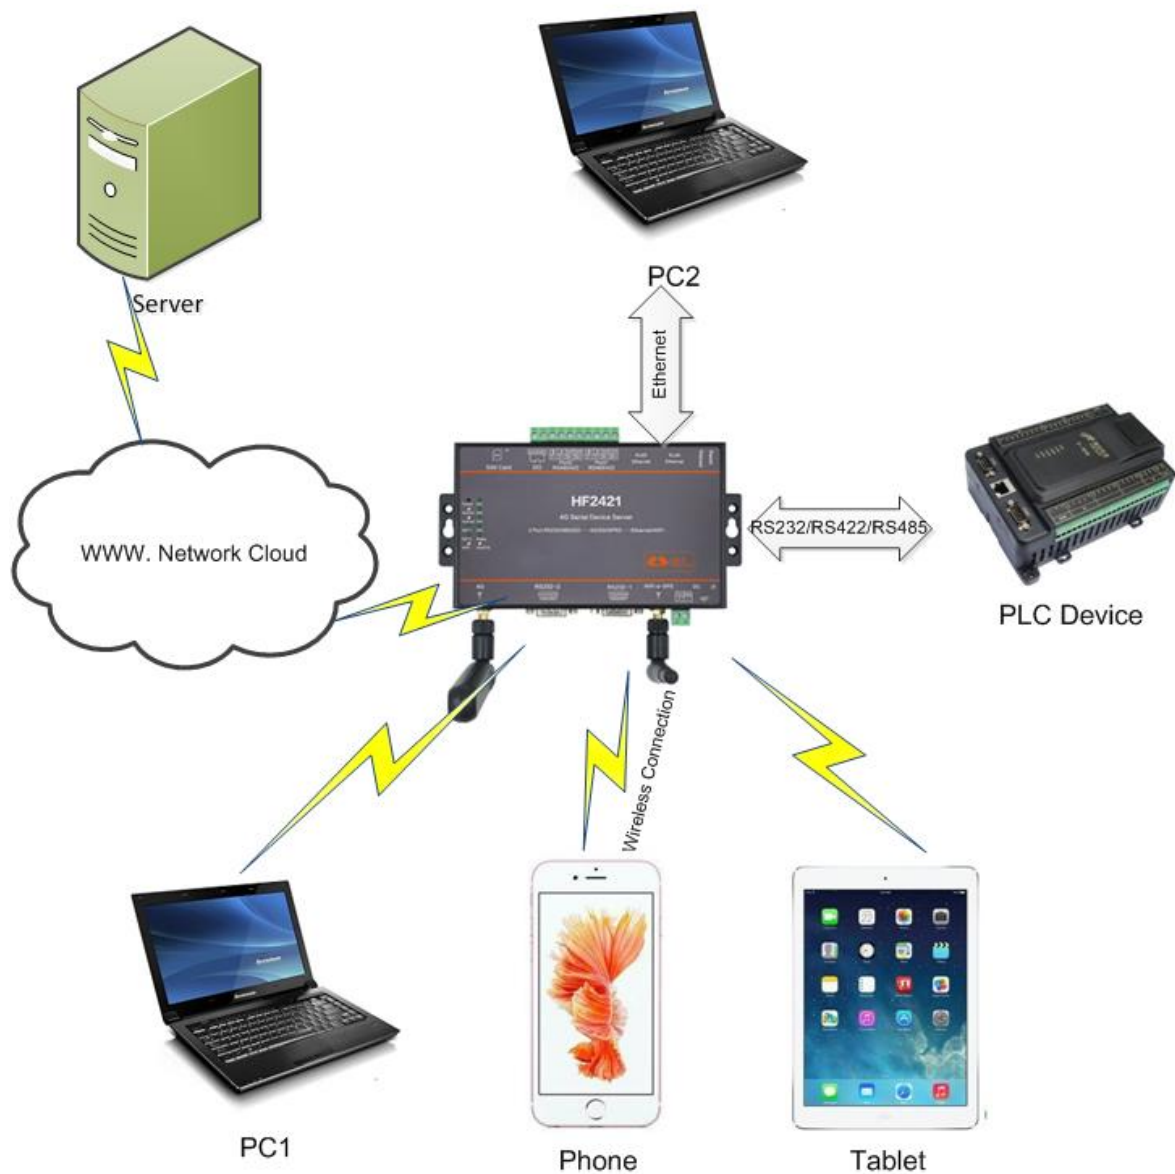


Figure 15. Ethernet Interface Function

HF2421 generates a central network. Each devices' IP address is working under the same segment with HF2421(default as 10.10.100.XXX, can be modified). Devices can communicate mutually, and the devices above can visit public resource normally. Device is equivalent to Wi-Fi/Ethernet/Serial 4G Router.

3.4. Working Mode

3.4.1. Transparent Transmission Mode

The HF2421 Device support transparent transmission mode of serial interface, In this mode, User only need to set some necessary parameter(network communication parameter). After power on, the device can auto connect to default socket setting(TCP/UDP). Use web page or PC IOTService software to set commucation parameter.

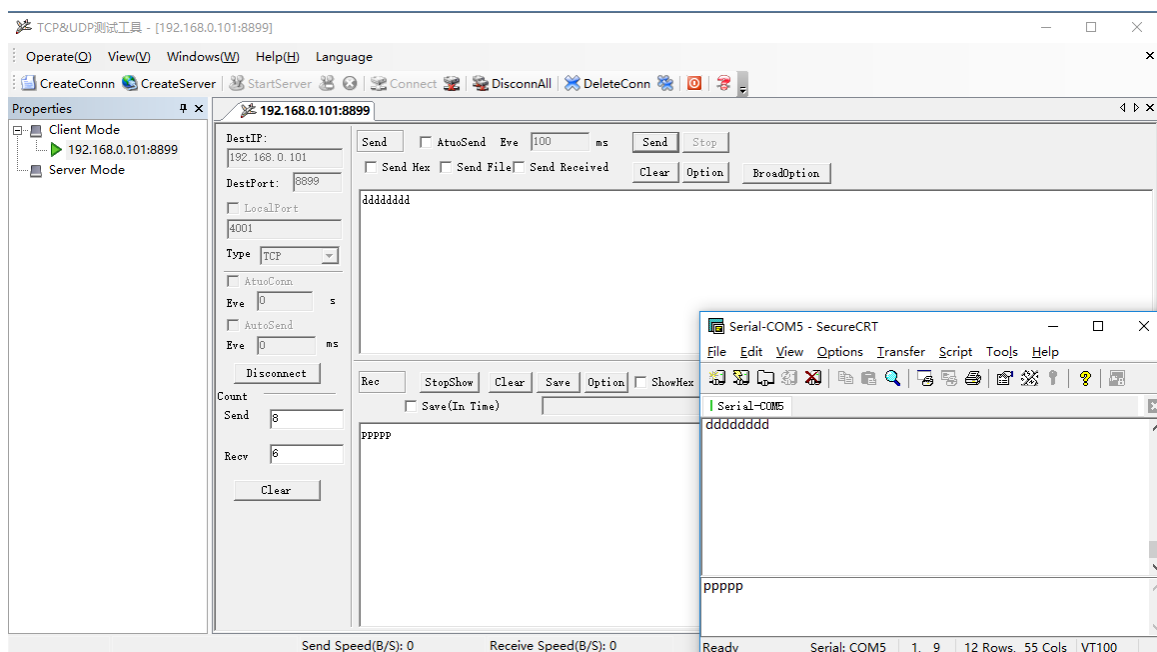


Figure 16. Transparent data transmission example

3.4.2. TCP Server

Transparent transmission mode support TCP Server、TCP Client、UDP Server、UDP Client communication application, UDP Server is special function, Details see following Cli instruction. There is a default tcp server socket created. The Socket can be modified to work at one of the above working mode. When Socket works as TCP server, It will support multiple TCP connection(max 5 TCP client). Multiple TCP connection will work in below structure:

Upload data flow: All the different TCP connection or the Client's data will be continuously transmitter to UART.

Download data flow: All data received from UART will be copied and broadcast to every TCP client.

Detailed multiple TCP connection structure drawing as below:

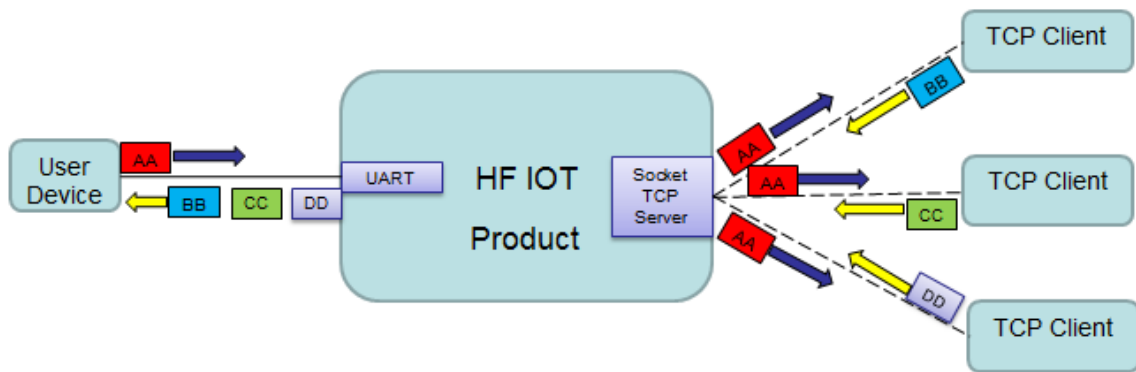


Figure 17. TCP Server data transmission example

The device support max 5 Socket channel, each socket can work individual at TCP/UDP, Multi Socket simultaneous communication of data stream is as following.

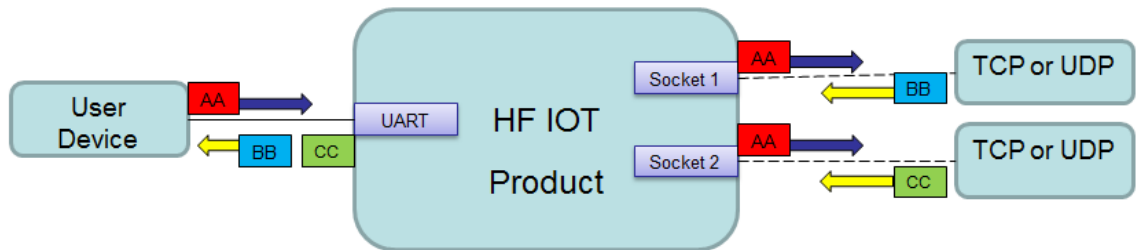


Figure 18. Multi Socket data transmission example

Multi Socket can be created through software configure or webpage configure. The below set up 3 socket channel.

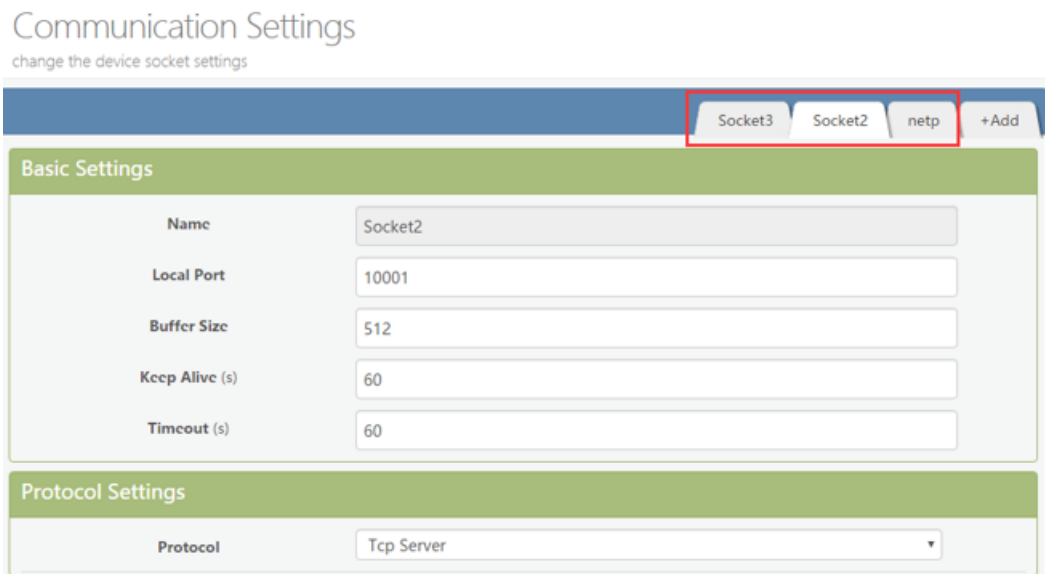


Figure 19. Webpage set up multi Socket channel

3.4.3. HTTP Mode

HF2421 device support sending data in HTTP format to HTTP server(Set product working mode by IOTService software or webpage). When device socket works in HTTP mode, All received UART data

will automatically transform to HTTP format(add HTTP header) and transmit to HTTP server. For the received HTTP data from HTTP server, will automatically remove HTTP header and only output the data packet to UART.

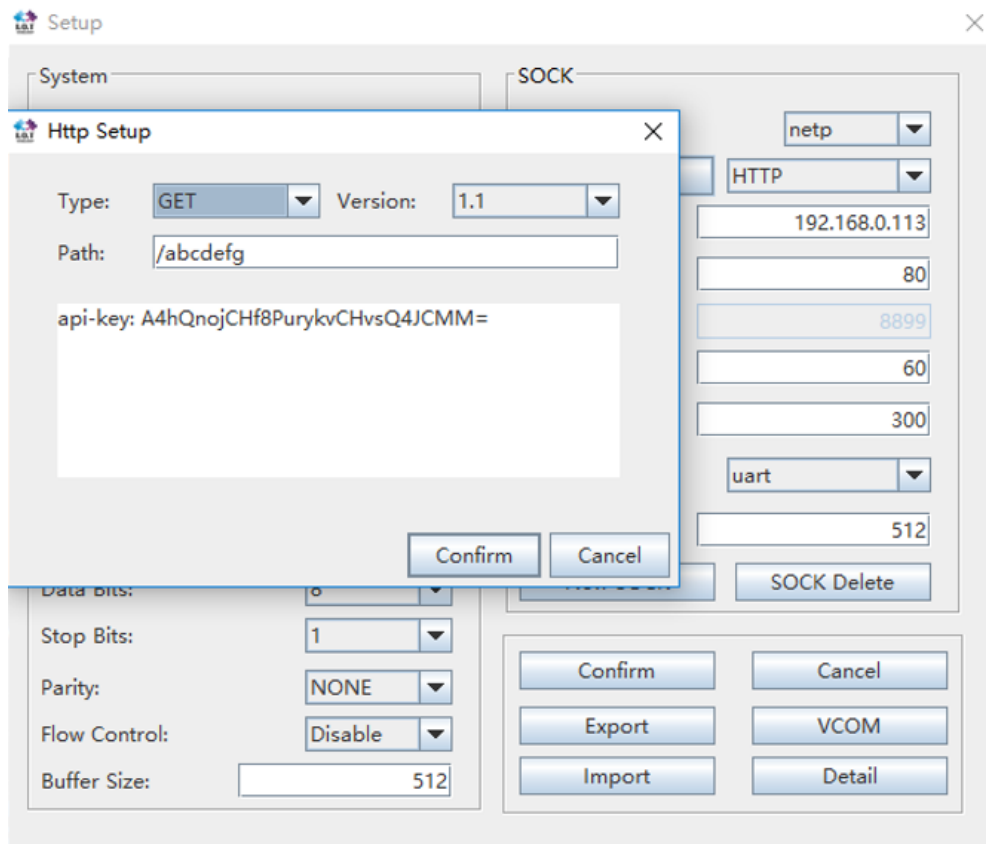


Figure 20. IOT Manager Software Configure

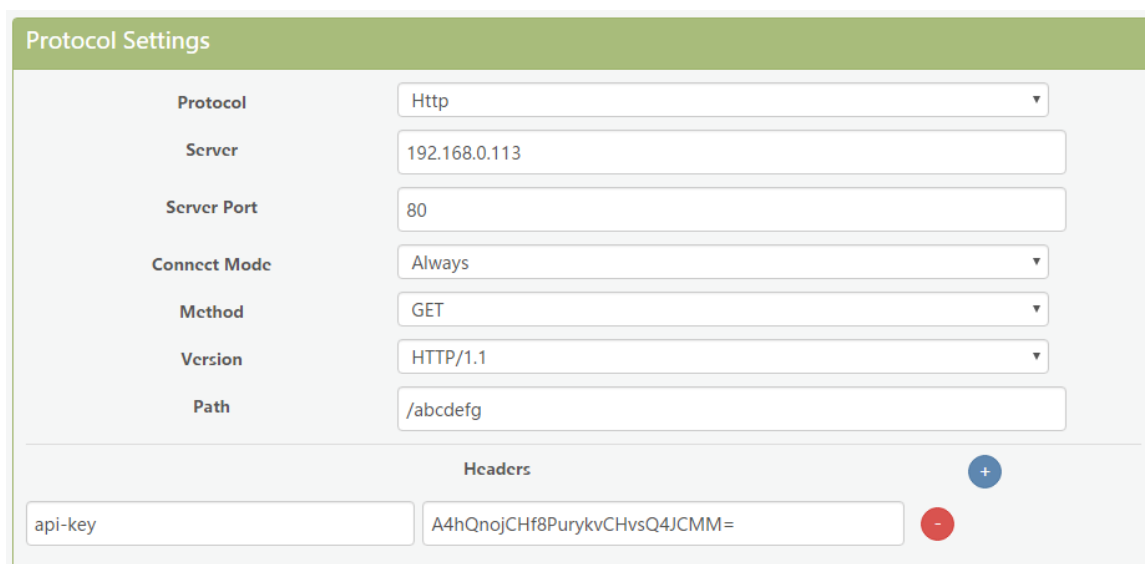


Figure 21. Web Page Configure

HF2421 UART received“pppp”data, send below data to HTTP Server.

GET /abcdefg HTTP/1.1

api-key: A4hQnojCHf8PurykvCHvsQ4JCMM=

pppp

HTTP Server send below data, HF2421 serial output“abcde”

GET /abcdefg HTTP/1.1

api-key: A4hQnojCHf8PurykvCHvsQ4JCMM=

abcde

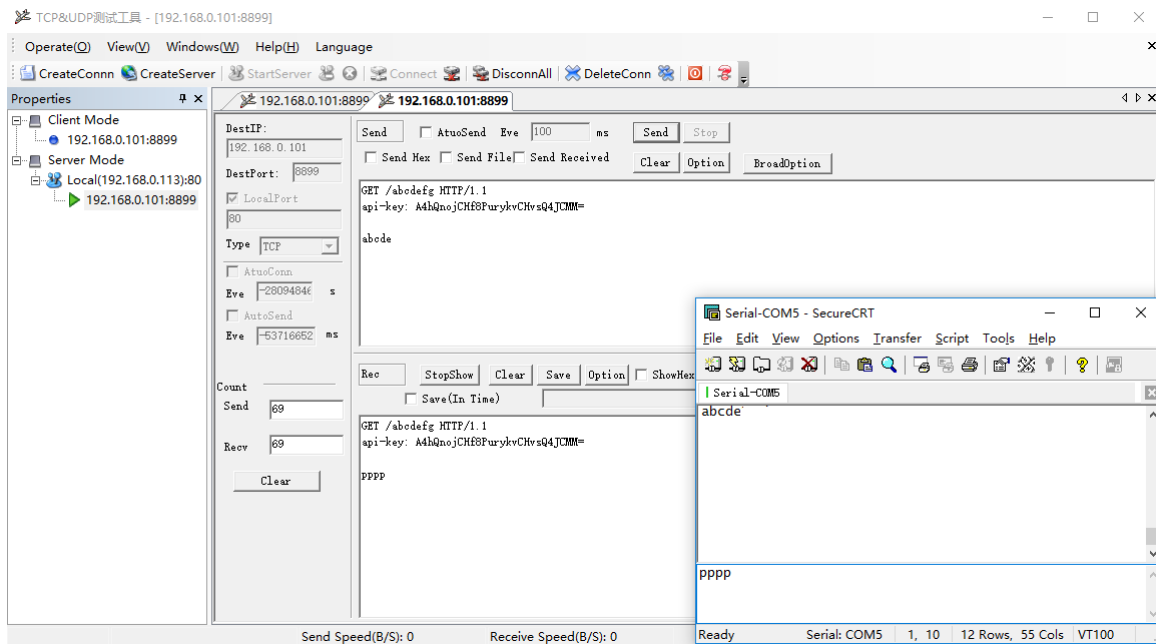


Figure 22. HTTP transmit example

3.4.4. Telnetd Mode

When device work in Telnetd mode, UART port can connect to user device console port(some gateway and switch device may have this console port to set parameters of its working mode). May use HF2421 to config user device via Telnetd mode.

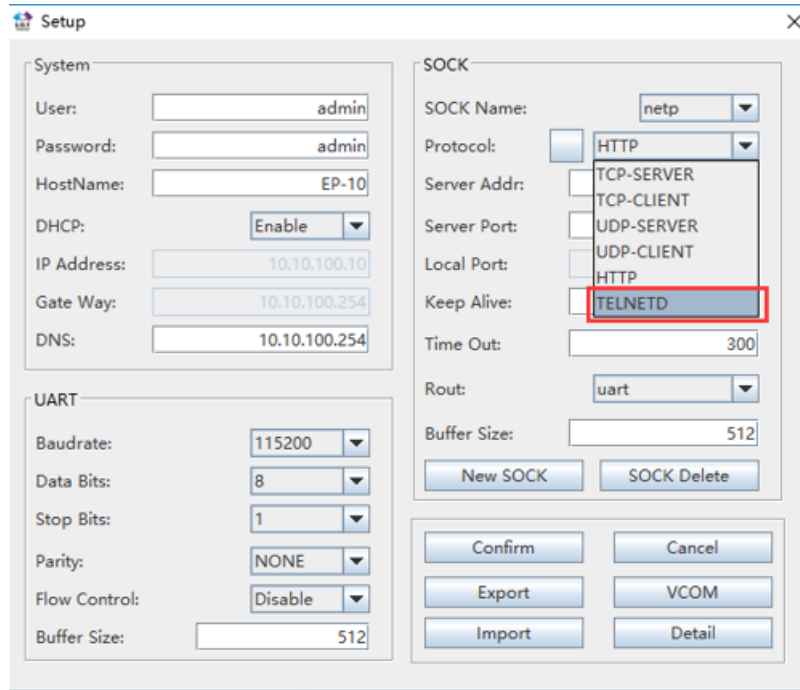


Figure 23. IOTService Software Configure Protocol

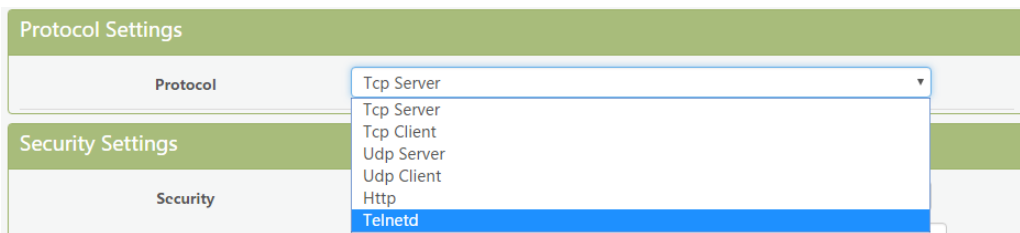


Figure 24. Web page configure protocol

Connect device UART to user device console port(The example use NC916) and create Telnet connection. Then It can directly configure user device.

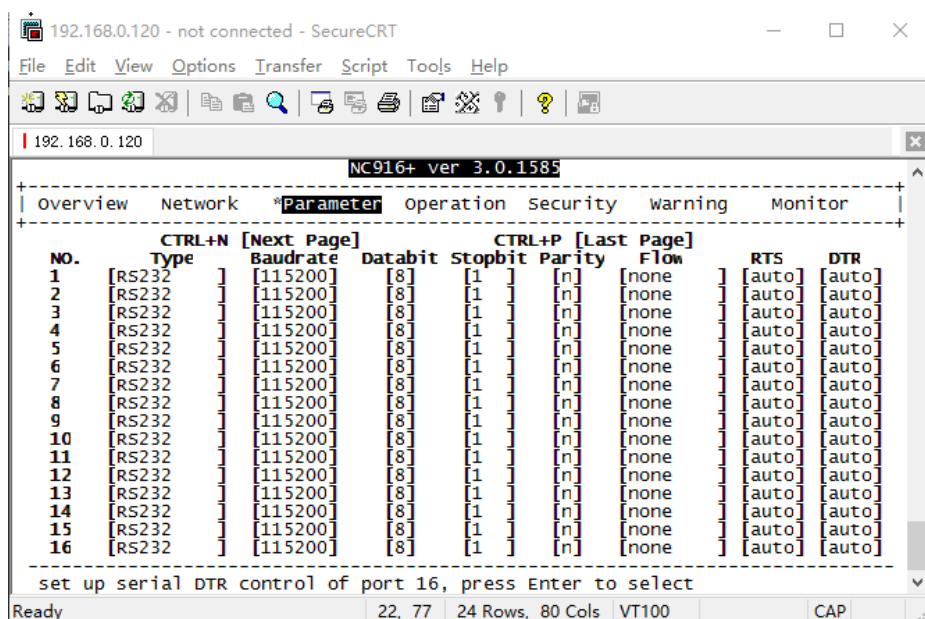


Figure 25. Telnet details example

3.5. AES/DES3/TLS Data Encryption

To improve device security and ensure the data won't be cracked and illegal used, The HF2421 device can do encryption to UART data before transmit to network.

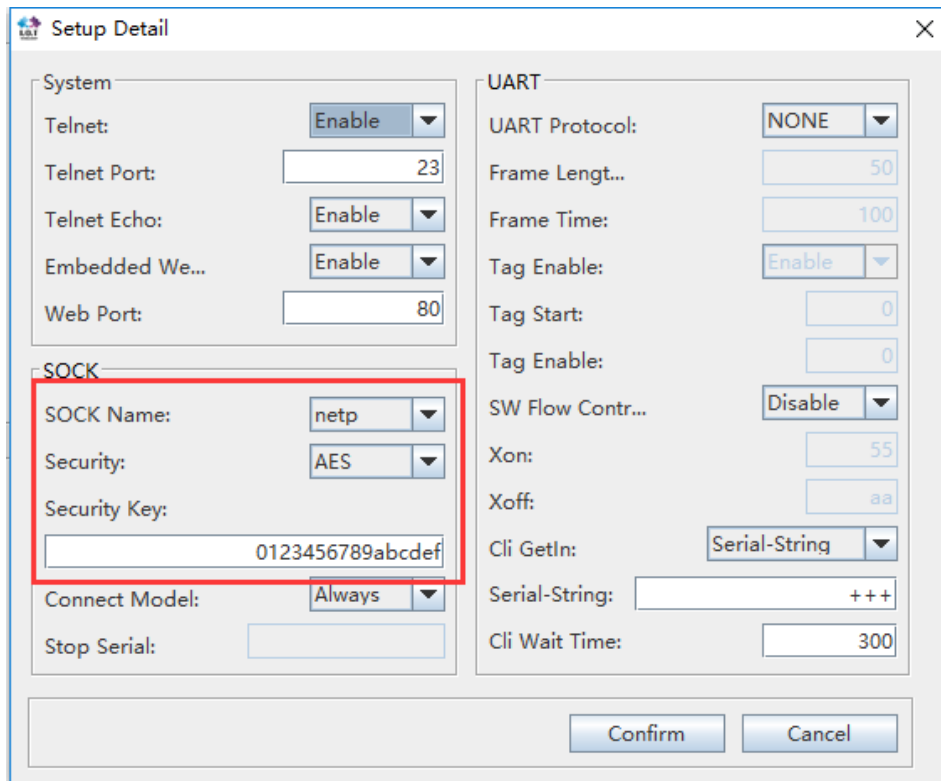


Figure 26. IOTService Software Configure Encryption

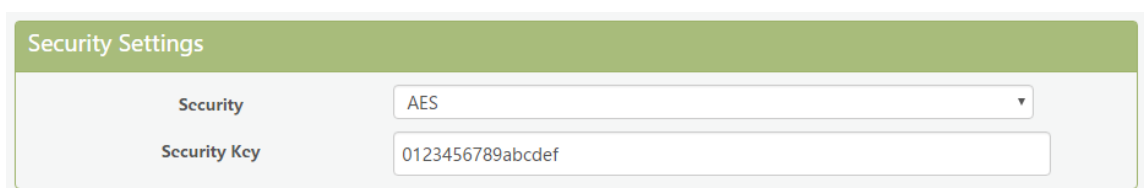



Figure 27. Web Page Configure Encryption

3.6. Keepalive

When TCP connection between device and server became abnormal. The device will check the abnormal status and reconnect to server (when the device working in TCP Client Mode), When the device working in TCP Server, It will break the TCP client and wait for next connection.

Communication Settings

change the device socket settings

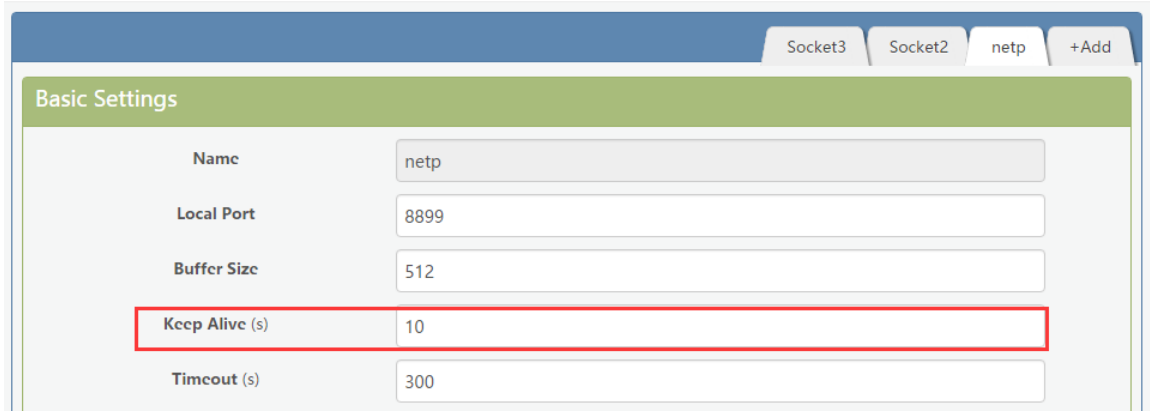


Basic Settings	
Name	netp
Local Port	8899
Buffer Size	512
Keep Alive (s)	10
Timeout (s)	300

Figure 28. Web Page Config Keepalive

3.7. Timeout

The device will break the TCP connection after some time (default is 300 seconds and it can be modified) if there is no data packet received from Destination TCP target. It will reconnect to server (When device works in TCP Client mode). When device working in TCP Server, It will disconnect with TCP Client. This mechanism can effectively restore TCP abnormal connection. If set it to "0", this function will be close.

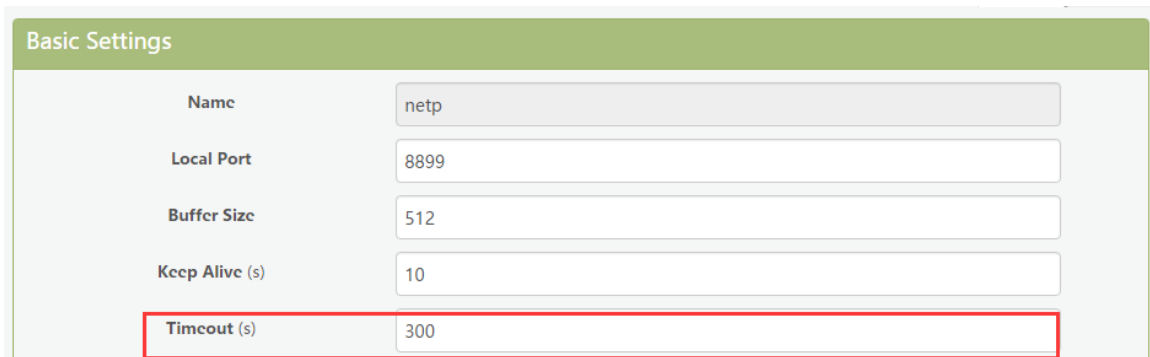

Basic Settings	
Name	netp
Local Port	8899
Buffer Size	512
Keep Alive (s)	10
Timeout (s)	300

Figure 29. Web Page Configure Timeout

3.8. Router Setup

The data received from Socket channel can be set to another socket channel. (Default: socket Destination channel is UART, It also can be other Socket channel, Or take the Socket as log print usage)

The below example shows the default netp Socket channel route setting to Socket1, Socket1 configure as TCP Server mode and route setting to UART. So the netp Socket channel received UART data will output to Socket1, and Socket1 channel will output to serial output.

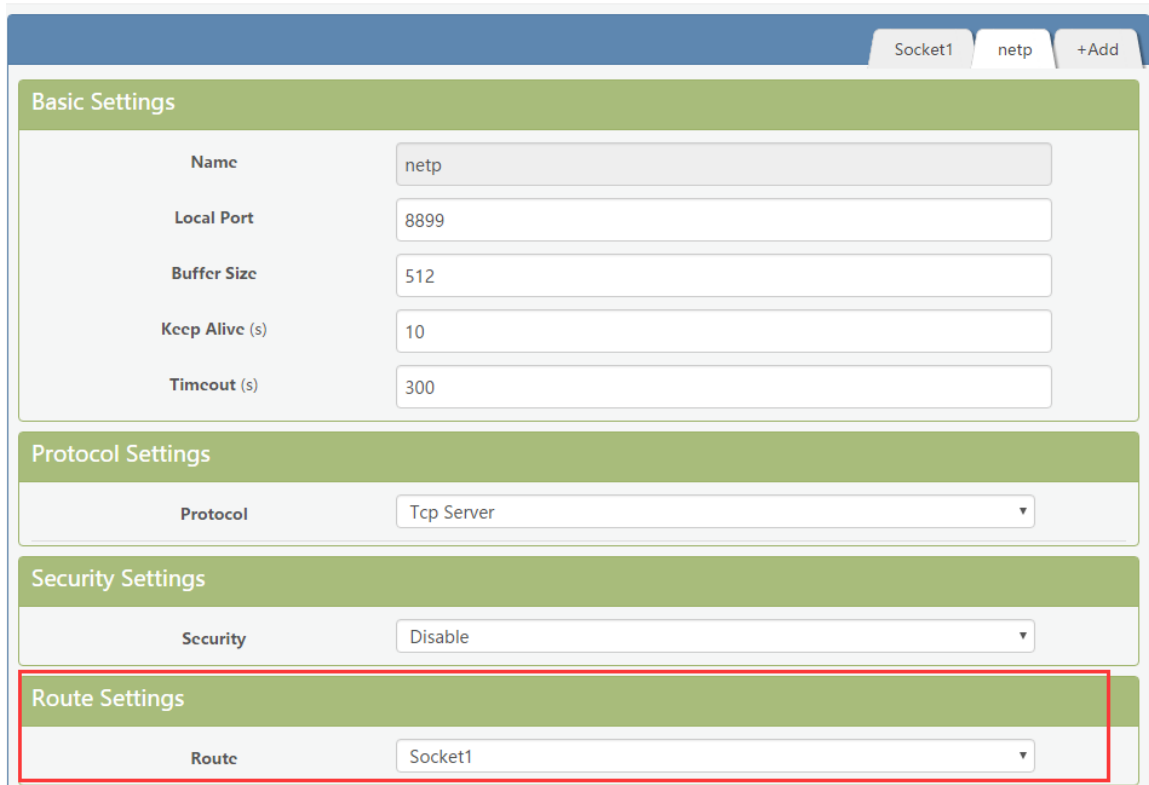


Figure 30. Route function setup example

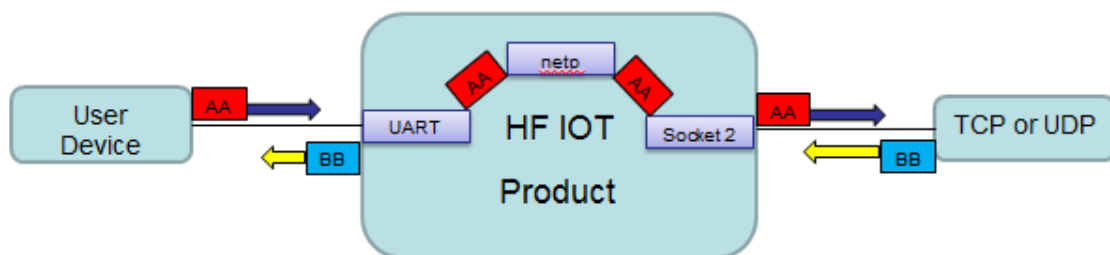


Figure 31. Route Function Data Flow Example

Through router function, it can individually configure data to either serial port. As a result two serial ports can be used individually.

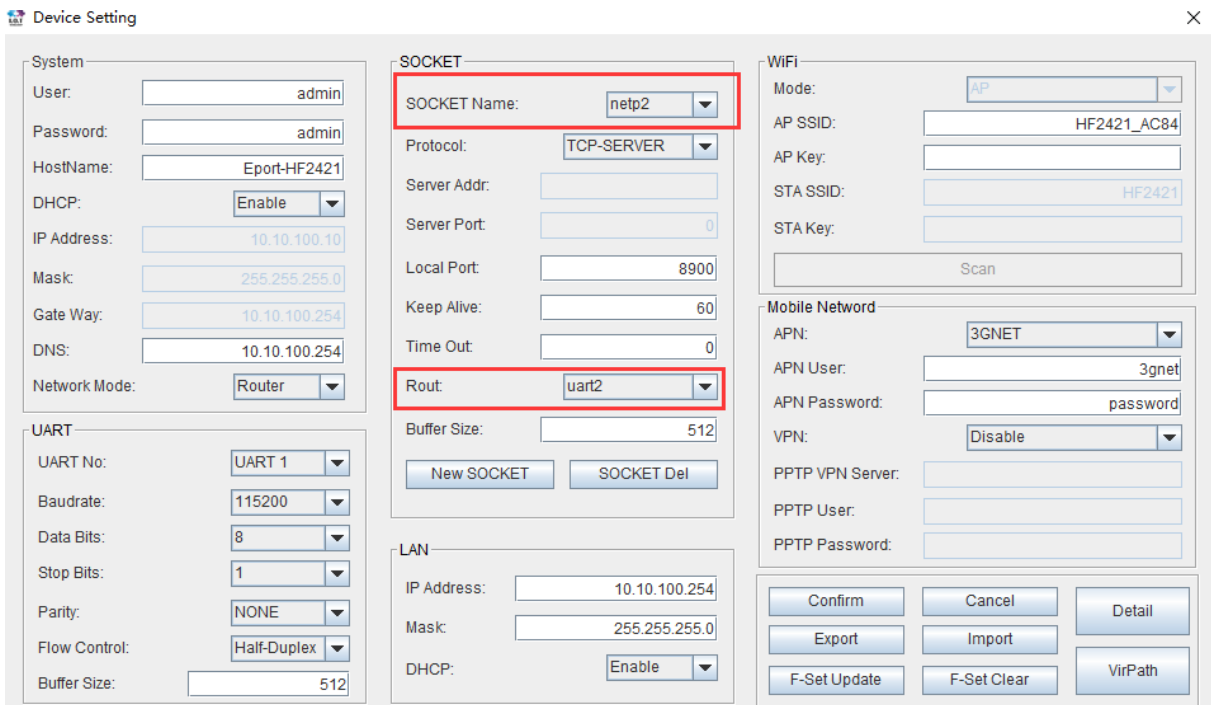


Figure 32. netp2 to uart2

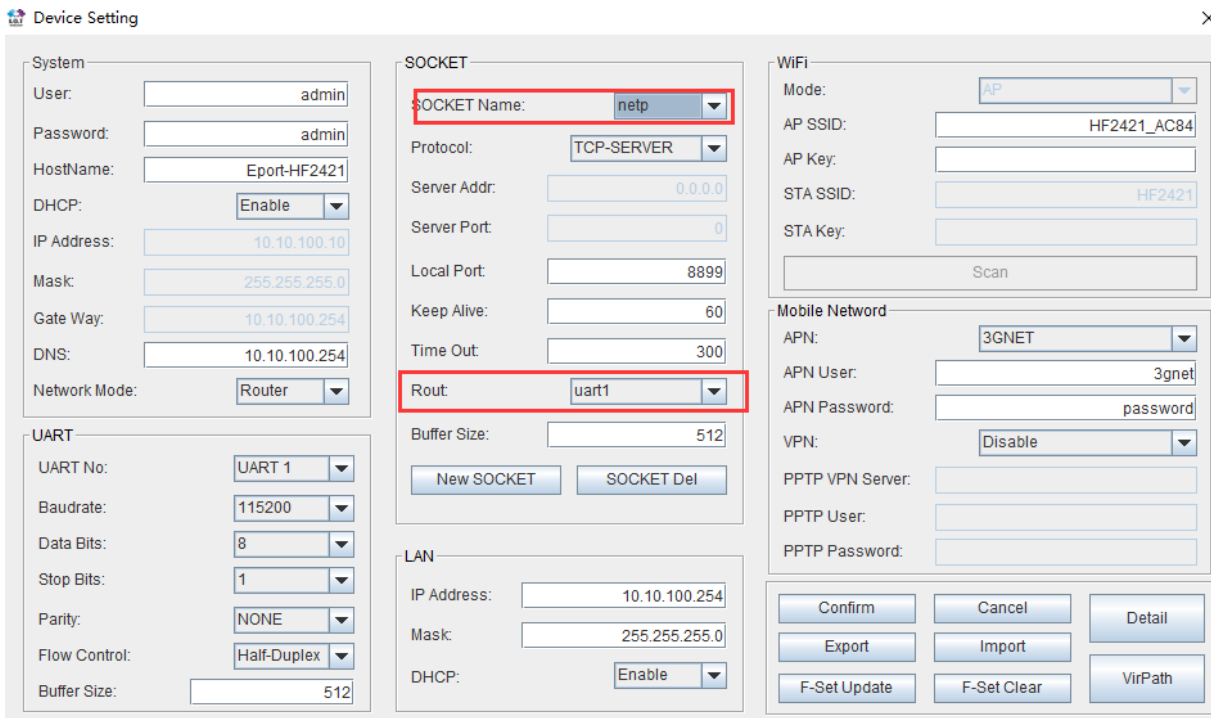


Figure 33. netp1 to uart1

3.9. UART Frame Scheme

3.9.1. UART Free-Frame

HF2421 support UART Free-Frame function, If user select to open this function,Module will check the intervals between any two bytes when receiving UART data, If the interval time exceed the setting value, It will think it as the end of one frame, Or it will receive data until greater than internal buffer bytes(Default: 512, the largest 1400 bytes), then transfer to Socket Channel.

Module default UART Free-Frame interval time is 50ms, it will packaged into another frame if received UART data interval time is greater than 50ms. User also can set this interval time to minimum 10ms through Cli command and webpage.But there is not a lot of data, delay is about 30~40ms.

If interval time is set to 10ms and customer MCU cannot send next byte within 10ms, The serial data will be break into two frame.

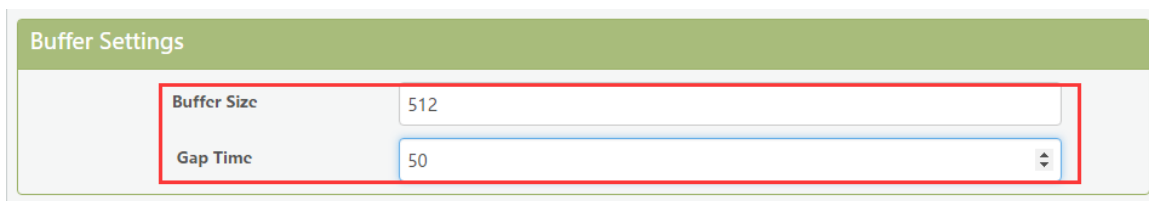


Figure 34. UART free-frame function

3.9.2. UART Auto-Frame

HF2421 support UART Auto-Frame function, If user select to open this function,setting frame trigger length and auto frame trigger time parameters, Then the product will auto framing the data which received from UART port and transmitting to the network as pre-defined data structure.

Auto-Frame trigger length: The fixed data length that product used to transmitting to the network.

Auto-Frame trigger time: After the trigger time, If UART port received data can't reach auto-frame trigger length, Then product will transmitting available data to network and bypass the auto-frame trigger length condition.


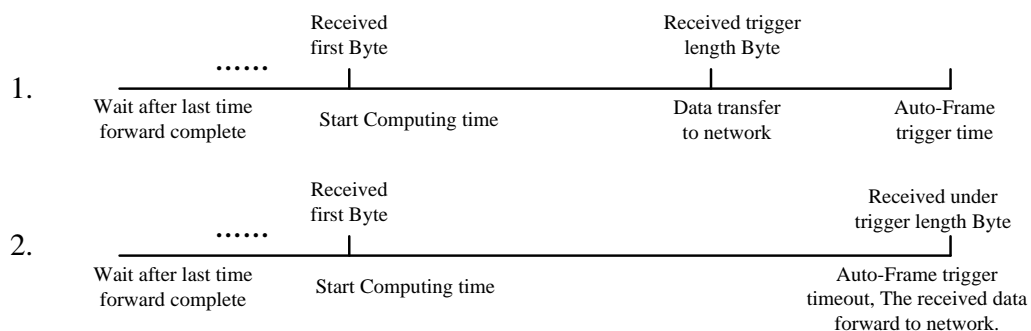


Figure 35. UART Auto-Frame Function

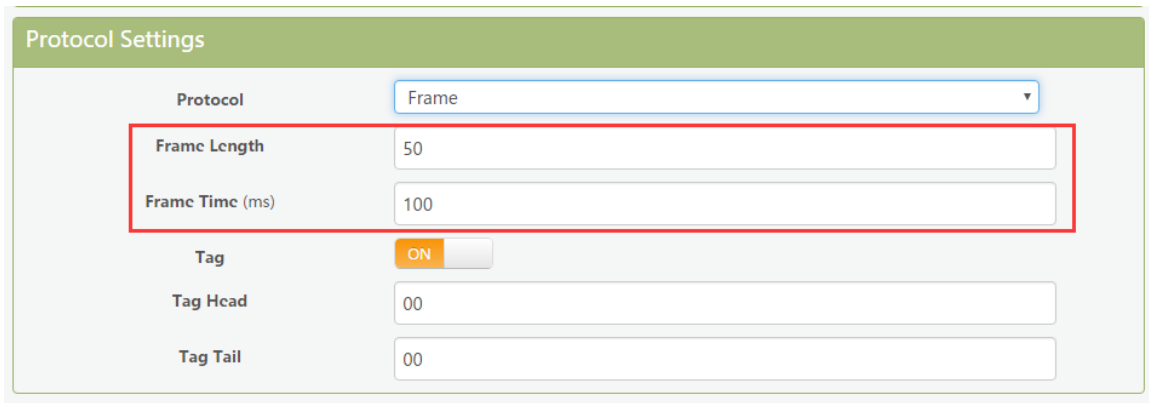


Protocol	Frame
Frame Length	50
Frame Time (ms)	100
Tag	ON
Tag Head	00
Tag Tail	00

Figure 36. UART Auto-Frame Function

3.9.3. Tag Function

Eport E10 support lable function, If user select to open this function, The UART port will send all suitable one frame data to network.

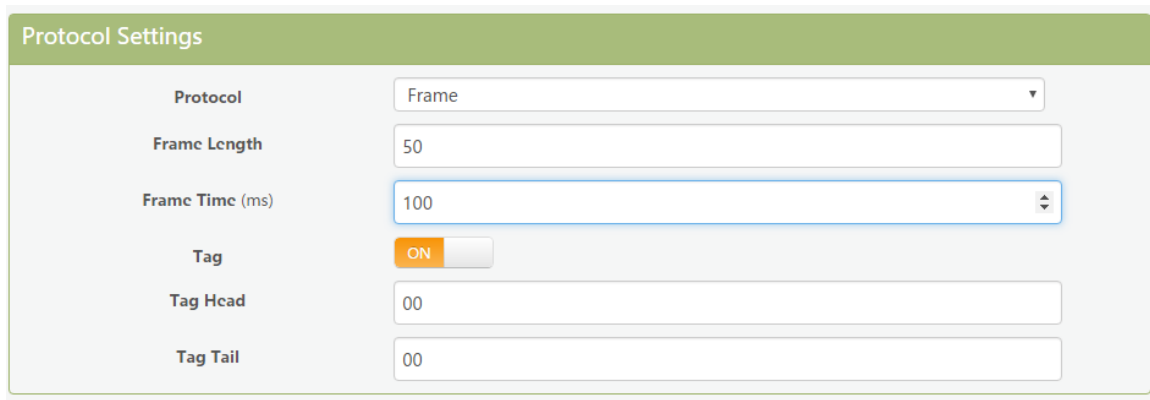


Protocol	Frame
Frame Length	50
Frame Time (ms)	100
Tag	ON
Tag Head	00
Tag Tail	00

Figure 37. UART Auto-Frame Tag Function

3.10. Modbus Protocol

HF2421 support ModbusRTU to ModbusTCP and ModbusTCP to ModbusRTU. It's very convenient to connect with Modbus device. Modbus protocol setting as below:

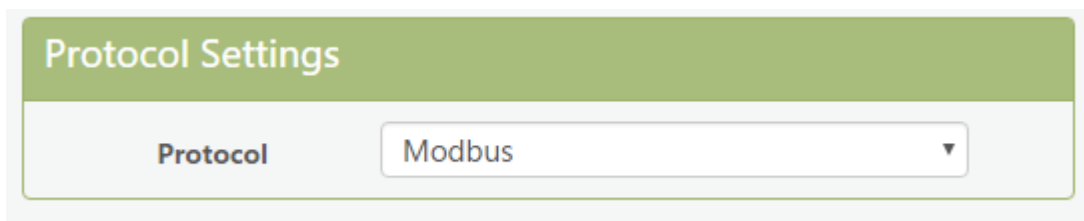

Protocol	Modbus
----------	--------

Figure 38. UART Modbus Function

3.11. Cli Command

Cli command is used for setting module configure parameters. Detailed command function and setting is in next chapter, Cli command can be set through UART port or Telnet function (Appendix C), The waiting time of below picture means use timeout time. If it exceed default 300s when no Cli command is input, it will exit Cli command mode. When the HF2421 receive continuous UART data of “+++”, it will enter into Cli command. (The device working in transparent transmission mode by default) May also set the device working in Cli command mode by default or disable this function .

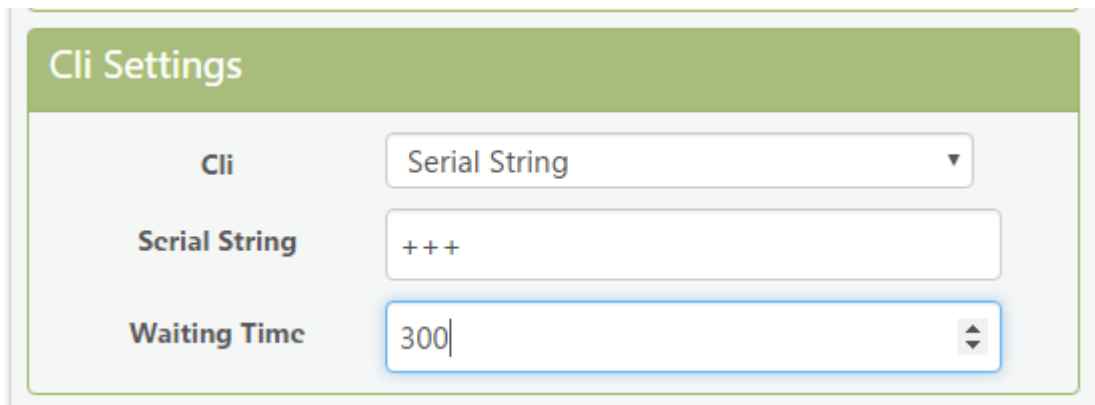


Figure 39. Cli Command Setting

3.12. UART Flow Control and RS485 Function

HF2421 support software and hardware UART flow control. If use hardware flow control, must use RS232 interface. If use software flow control, then It allowed the device output UART data after receive single UART 0x11 data(Default: value can be modified). It will stop output UART data after receive single UART 0x13 data(Default: value can be modified).

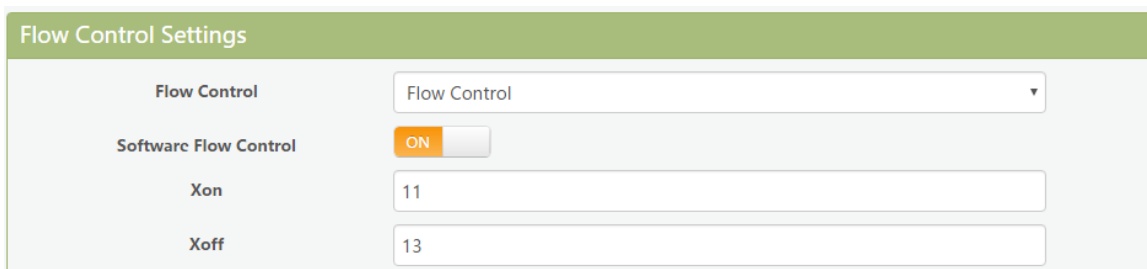


Figure 40. UART Flow Control

If set to “Half Duplex”, the product enable RS485 interface.

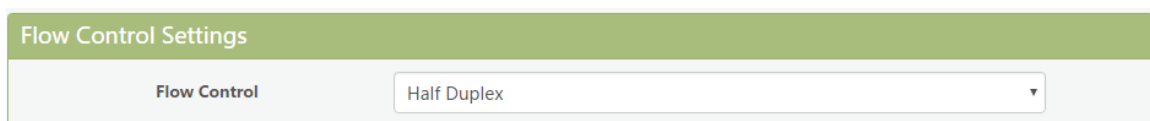


Figure 41. UART Half Duplex Function

3.13. Firmware Upgrade

HF2421 support OTA(over the air) firmware upgrade. User can use webpage to upgrade its firmware, whether external or internal webpage(suffix/hide. Internal webpage can be used for upgrade external webpage). Please check below example. IP address is assigned by router.



Figure 42. External web page

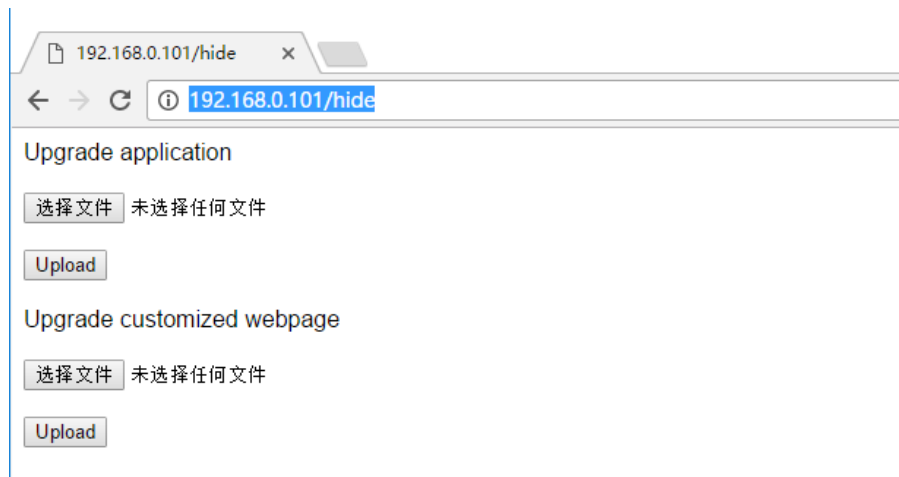


Figure 43. Internal web page

3.14. Web Page Function

Web page function can be enabled or disabled.

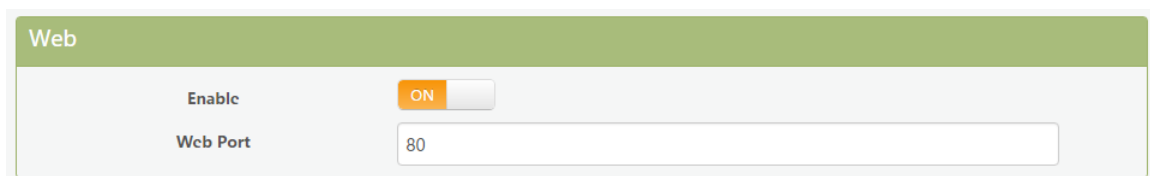


Figure 44. Web Page Function Setting

3.15. Cable Direct Connection

Connect device Ethernet with PC, the device will use default auto IP(10.10.100.254) which is provided for direct access to parameter setting or data transmission(about 20s until PC get the IP)



Figure 45. Cable Direct Connection

3.16. NTP Function

Support NTP function(default is disabled). Support set NTP server, port, time zone information, more detailed usage see application document of "UART Fast Config".(112.124.43.15 is High-Flying test NTP server)

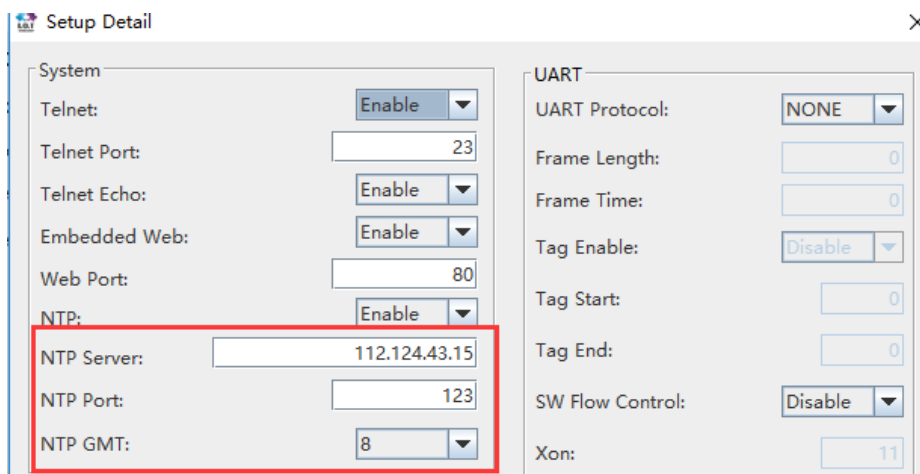


Figure 46. IOTService Tools NTP Setting

```
-----
EPORT>SYS NTP
Enable
Server:112.124.43.15
Port:123
GMT:8
EPORT>Show

===System State===
Product ID:HF5111B
Software Version:V1.07c
Config Protected:OFF
System time:2017-1-23 13:48:38 Mon
Up Time: 0-Day 2:44:32
Total Free Memory: 32880
MAX Block Size:31164
```

Figure 47. Cli Command NTP Setting and Query

3.17. Heartbeat Function

Support heartbeat function, can set the heartbeat time and content(heartbeat time is the same as keepalive setting), if the product does not receive data from TCP server within heartbeat time, it will send heartbeat to server. The heartbeat function can only be enabled when socket is set as TCP client.

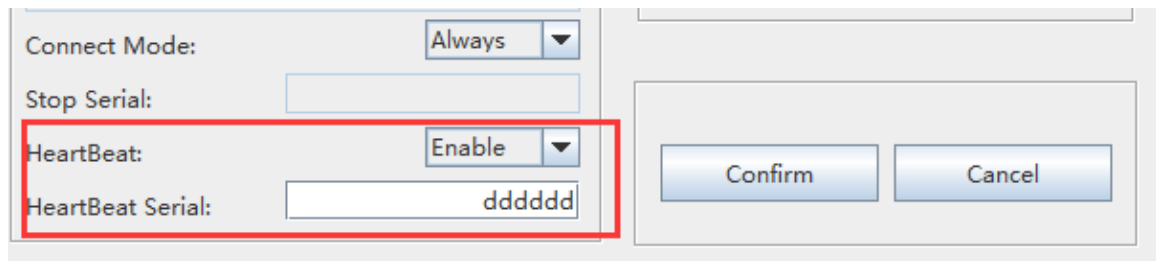


Figure 48. Heartbeat Function

3.18. UART Fast Config


Product support Cli command to config its parameters, but also support special HEX format UART data for fast config, see application manual for detailed usage.

3.19. Other Function

The HF2421 device parameters can be exported and loaded into other equipment..

Others

change the device other settings

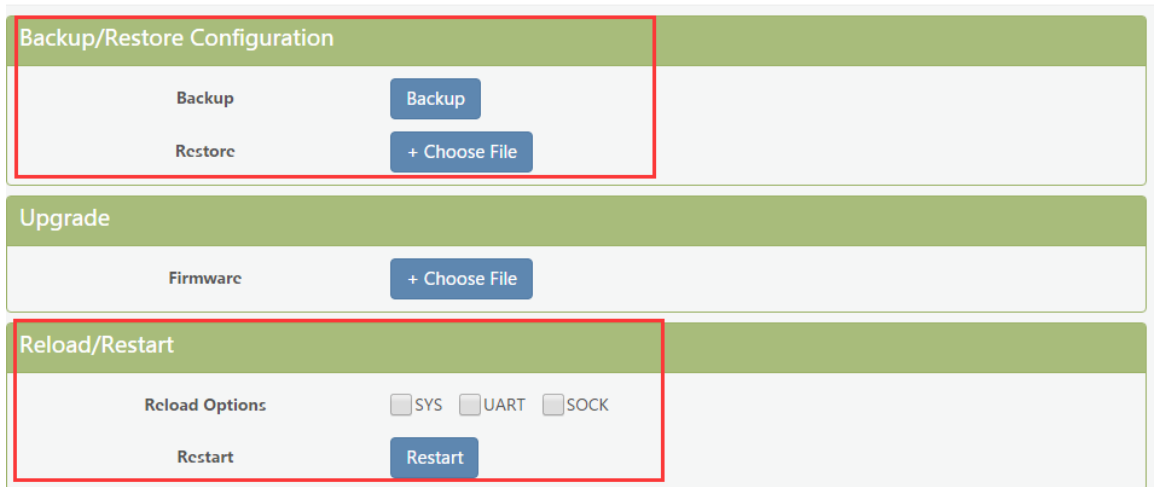

The screenshot displays the 'Others' settings page with three main sections:

- Backup/Restore Configuration:** Contains a 'Backup' button and a '+ Choose File' button for restore.
- Upgrade:** Contains a '+ Choose File' button for firmware.
- Reload/Restart:** Contains 'Reload Options' with checkboxes for SYS, UART, and SOCK, and a 'Restart' button.

Figure 49. Other Function

4. CLI COMMAND NOTES

4.1. Working Mode

The device will enter into default transparent transmission mode after powered on. User can switch to Cli command mode through special UART data. Module default UART parameters are as below:

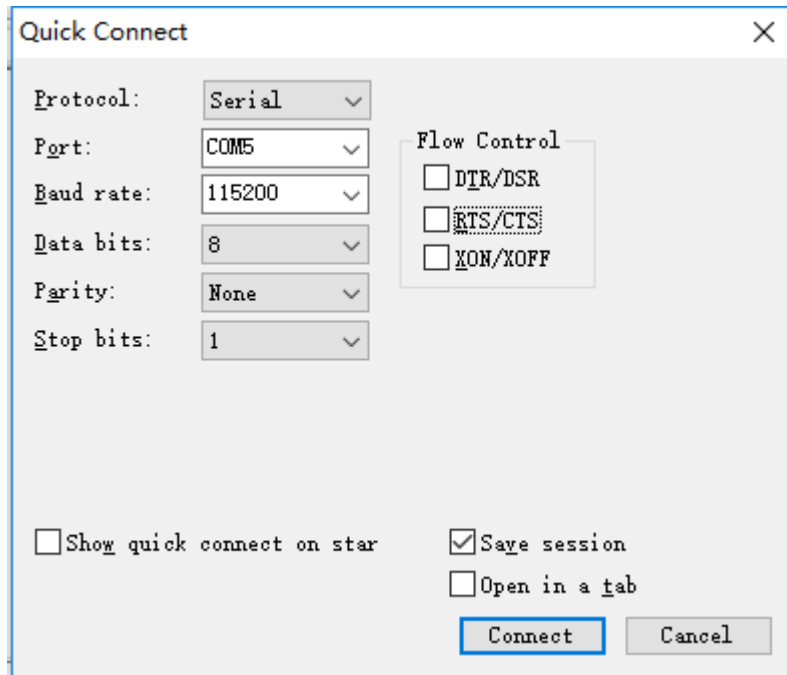


Figure 50. HF2421 Default: UART Parameters

In Command mode, User can use UART port to set module through Cli command.

Notes:

We recommend to use SecureCRT for UART debug tools.

4.1.1. Switch Transparent Transmission Mode to Cli Command Mode

Steps:

- Input “+++” via UART tools, the device will output “EPORT>” after received “+++”. Then the device already enters into Cli command mode.

Notes:

”+++” should be in one frame. Other data is not allowed before or after “+++”

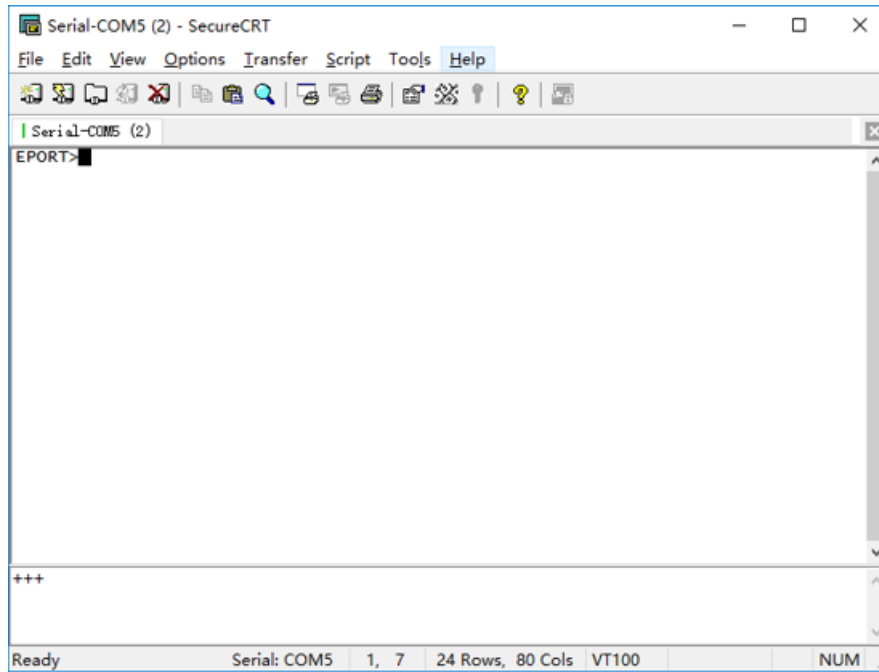


Figure 51. Switch Transparent Transmission Mode to Cli Command Mode

<Notes>:

In Cli command mode, users can set or query parameters. Cli command details see next chapter

4.2. Cli Command Overview

Cli command can be input through terminal (SecureCRT or other UART tools) or by user device MCU programming. As below picture, we use SecureCRT tool. Press “Tab” key, it will list current available Cli command or directory. If input first character and then press “Tab” key, it will show the Cli command fit with the first character.

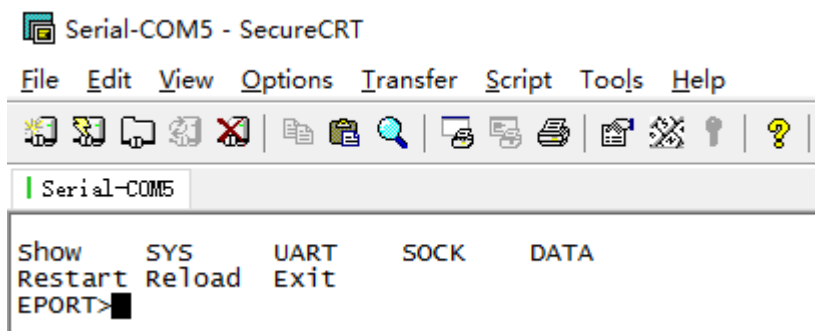


Figure 52. Cli Command Root Directory

SYS	Version		
	Auth	user	
		password	
		quit	
	Network	Show	
		DHCP	Enable
			Disable
		ip address	
		gateway	
		DNS	
		HostName	
	Quit		
	Telnet	Enable	port number
		echo	
	Web	Disable	
		Enable	port number
	MAC		
	JCMD	Enable	
		Disable	
	NTP	Enable	NTP Server Address
			NTP Server port
			GMT
			Disable
Quit			

Figure 53. Cli Command SYS Tree

UART	Show		
	Baudrate		
	Databits		
	Stopbits		
	Parity		
	Buf	BufSize	
		GapTime	
		Quit	
	FlowCtrl	FlowCtrl	
		Half-Duplex	
		Disable	
	SWFlowCtrl	Enable	
		Disable	
	Cli-Getin	Disable	
		Serial-String	
		Always	
	Cli-WaitTime		
	Proto	NONE	
		Modbus	
		Frame	
	Frame	FrameLen	
		FrameTime	
		Tag	
Quit			
Edit			
Clean			
Quit			

Figure 54. Cli Command UART Tree

SOCK	New	Show	
		Proto	Name
			TCP-SERVER
			TCP-CLIENT
			UDP-SERVER
			UDP-CLIENT
			HTTP
		TeIneted	
		Server	
		ServerPort	
		LocalPort	
		BufSize	
		KeepAlive	
		Timeout	
		HeartBeat	
		Security	Disable
			TLS
			AES
		ConnectMode	DES
			Always
	Rout	Burst	
		uart	
		log	
	netp		
	netp	Show	
		Proto	Name
			TCP-SERVER
			TCP-CLIENT
			UDP-SERVER
			UDP-CLIENT
			HTTP
		TeIneted	
		Server	
		ServerPort	
		LocalPort	
BufSize			
KeepAlive			
Timeout			
HeartBeat			
Security		Disable	
		AES	
		DES	
ConnectMode		TLS	
		Always	
Rout		Burst	
		uart	
		log	
netp			
Save			
Clean			
Del			
Quit			
Quit			

Figure 55. Cli Command SOCK Tree

DATA	Str
	Hex
	Quit
FwUpgrade	
Restart	
Reload	
Exit	

Figure 56. Cli Other Command

4.2.1. Cli Command Format

Cli command is in ASCII format. The usage is similar to Linux terminal. Command format as following:

➤ Format Notes

- <>: Cli command name or directory.
- []: Cli command parameters.

➤ Command Message

<CMD> [para-2 para-3 para-4...]<CR>

- <CMD>: Main directory or command name;
- [para-n] : command parameters. If have multiple directory, it can also can be the son directory. As below example;

```
EPORT>SYS Auth
User          Passwrod      Quit
```

- <CR>: Command Terminator, “Enter” key, HEX data: 0x0a or 0x0d

<Notes>

If the input command not existed, UART will output again “EPORT>” to allow next command input. The Cli command is case sensitive.

```
EPORT>sys
EPORT>SYS
EPORT/SYS>
```

If need enter into son directory, press “space” key between the directories.

```
EPORT>SYS Auth
EPORT/SYS/Auth>
```

If need to display all the directory or commands in the current directory, press “Tab” key to query.

```
EPORT/SYS>
Auth      Network Telnet web      Ipv6
MAC       JCMD     Quit
```

If need to display current command parameter, press Tab key to query.

```
EPORT/SYS/Network>DHCP
Enable  Disable
```

4.2.1.1. Show Command

- Function: Show all system information, including the system running status, Network status, UART status and socket status.
- Format:
 - ◆ Query

Show [SYS/UART/SOCK]

- Parameter:
 - Show all information if no parameters. Parameter can be one of the following:
 - ◆ SYS: System running status
 - ◆ UART: UART status
 - ◆ SOCK: Socket status

```

EPORT>Show
===System State===
Product ID:E-10
Software Version:V1.04
Up Time: 0-Day 0:21:39
Total Free Memory: 48400
MAX Block Size:46816
===NETWORK===
MAC:ACCF23FF4771
Ip Address:192.168.0.106
Gateway:192.168.0.1
===UART Status===
Config:115200,8,1,NONE,NONE
State:In CLI
Recv Bytes:26   Recv Frames:24
Send Bytes:0    Send Frames:0
Failed Bytes:0  Failed Frames:0
===SOCK Status===
SOCK Name:netp
State:Server Created
Client IP:
Recv Bytes:0    Recv Frames:0
Send Bytes:0    Send Frames:0
Failed Bytes:0  Failed Frames:0
    
```

4.2.1.2. SYS Directory

- Function: Display/Set all system related information
- Format:
 - ◆ Tab Query

```

EPORT/SYS>
Version Auth   Network Telnet  web
NTP          MAC          JCMD          Quit
    
```

4.2.1.3. SYS/Auth Directory

- Function: Display/Set web or Telnet Cli command login directory. (see appendix for detail)
- Format:
 - ◆ Tab Query

```

EPORT/SYS/Auth>
User          Password      Quit
    
```

4.2.1.4. SYS/Auth/User Command

- Function: Display/Set web or Telnet Cli command login user name. (function see appendix)
- Format:
 - ◆ Query
 - <User>
 - ◆ Set
 - <User> [value]
- Parameter:
 - Setting is valid immediately.
 - ◆ User: Login user name. Default: **admin**

- ◆ value: set value. Length range 1~29 characters

4.2.1.5. SYS/Auth/Password Command

- Function: Display/Set web or Telnet Cli command login password(function see appendix)
- Format:
 - ◆ Query
 - <Password>**
 - ◆ Set
 - <Password> [value]**
- Parameter:
 - Setting is valid immediately
 - ◆ Password: Login password. Default: **admin**
 - ◆ value: set value. Length range 1~29 characters

4.2.1.6. SYS/Network Directory

- Function: Display/Set related network information.
- Format:
 - ◆ Tab Query

EPORT/SYS/Network>				
Show	DHCP	DNS	HostName	Quit

4.2.1.7. SYS/Network/Show Command

- Function: Display network related information
- Format:
 - ◆ Query
 - <Show>**

4.2.1.8. SYS/Network/DHCP Command

- Function: Display/Set DHCP Client function
- Format:
 - ◆ Query
 - <DHCP>**
 - ◆ Set
 - <DHCP> [Enable/Disable]**
- Parameter:
 - Setting is valid after reboot.
 - ◆ Enable: Enable DHCP function. The device will get DHCP IP from router when Ethernet port is connected to router LANN port. Default: **Enable**.
 - ◆ Disable: Disable DHCP function. Allocate device static IP address according to the hit of inputting IP and gateway address.

4.2.1.9. SYS/Network/DNS Command

- Command: Display/Set DNS IP address.
- Format:
 - ◆ Query

<DNS>

- ◆ Set

<DNS> [IP]

- Parameter:
When DHCP function is Disabled, this setting is valid. Setting is valid after reboot.
 - ◆ IP Address: DNS server address. Default: **10.10.100.254**.

4.2.1.10. SYS/Network/Mode Command

- Command: Display/Set working mode.
- Format:
 - ◆ Query

<Mode>

- ◆ Set

<Mode> [Router/Bridge]

- Parameter:
Setting is valid after reboot.
 - ◆ Router: Router mode, Default value.
 - ◆ Bridge: Bridge mode.

4.2.1.11. SYS/Network/Hostname Instruction

- Function: Display/Set Hostname.
- Format:
 - ◆ Query

<Hostname>

- ◆ Set

<Hostname> [name]

- Parameter:
Hostname is the name which show in router DHCP client list. Setting is valid immediately.
 - ◆ Name Address: Hostname, length range: 1~30 characters. Default: **HF2421**.

4.2.1.12. SYS/Telnet Instruction

- Function: Display/Set Telnet function.
- Format:
 - ◆ Query

<Telnet>

- ◆ Set

<Telnet> [Enable/Disable]

- Parameter:
See appendix for detailed Telnet function usage. Telnet is used for remote send Cli command or transmit data, Setting is valid after reboot.
 - ◆ Enable: Enable Telnet function. Default: **Enable**.
 - Input Port Numbver: Telnet Port Number. Default: **23**
 - Input Echo Mode: Enable/Disable Cli command echo function. Default: **Enable**

- ◆ Disable: Disable Telnet function.

4.2.1.13. SYS/Web Instruction

- Function: Display/Set Web config function.
- Format:
 - ◆ Query

<Web>

- ◆ Set

<Web> [Enable/Disable]

- Parameter:
Webpage is used for config module working parameters. Setting is valid after reboot.
 - ◆ Enable: Enable Web config function. Default: **Enable**.
 - Input Port Number: Web Port Number. Default: **80**
 - ◆ Disable: Disable Web config function

4.2.1.14. SYS/MAC Instruction

- Function: Display/Set MAC address.
- Format:
 - ◆ Query

<MAC>

- ◆ Set

<MAC> [8888 value]

- Parameter:
Global unique MAC Address. It is not allowed to modify it.
 - ◆ value: MAC address value.

4.2.1.15. SYS/JCMD Instruction

- Function: Display/Set Jason command function.
- Format:
 - ◆ Query

<JCMD>

- ◆ Set

<JCMD> [Enable/Disable]

- Parameter:
Jason command is used for config module. IOTManage software use this mechanism. If disable JCMD function, IOTManage is no longer valid. Setting is valid after reboot.
 - ◆ Enable: Enable JCMD function. Default: **Enable**.
 - ◆ Disable: Disable JCMD function.

4.2.1.16. SYS/NTP Instruction

- Function: Display/Set NTP function.
- Format:
 - ◆ Query

<NTP>

- ◆ Set

<NTP> [Enable/Disable]

- Parameter:
NTP is used for product to get and output real time. See uart fast config application manual to fast query. Setting is valid immediately.
 - ◆ Enable: Enable NTP Function.
 - NTP Server Address: NTP Server address, domain name or IP address
 - NTP Server Port: port number, Default:123, Range;0~127
 - GMT: Time zone, default is 0, Range:-12~12.
 - ◆ Disable Disable NTP Function, Default value.

4.2.1.17. UART Directory

- Function: Display/Set UART information directory.
- Format:
 - ◆ Tab key query

EPORT/UART>	Baudrate	Databits	Stopbits	Parity
Show	FlowCtrl	SWFlowCtrl	Cli-Getin	Cli-waitTime
Buf	Frame	Edit	Clean	Quit
Proto				

4.2.1.18. UART/Show Instruction

- Function: Display UART information function.
- Format:
 - ◆ Query

<Show>

4.2.1.19. UART/Baudrate Instruction

- Function: Display/Set UART baud rate function.
- Format:
 - ◆ Query

<Baudrate>

- ◆ Set

<Baudrate> [value]

- Parameter:
Setting is valid immediately.
 - ◆ Value: Default: **115200**. Can choose 2400, 4800, 9600, 38400, 57600, 115200, 230400, 460800

4.2.1.20. UART/Databits Instruction

- Function: Display/Set UART data bits function.
- Format:
 - ◆ Query

<Databits>

- ◆ Set

<Databits> [value]

- Parameter:
Setting is valid immediately.

- ◆ Value: Default: **8bits**. Can choose 8.

4.2.1.21. UART/Stopbits Instruction

- Function: Display/Set UART stop bits function.
- Format:
 - ◆ Query
<Stopbits>
 - ◆ Set
<Stopbits> [value]
- Parameter:
 - Setting is valid immediately.
 - ◆ Value: Default: **1bits**. Can choose 1, 1.5, 2.

4.2.1.22. UART/Parity Instruction

- Function: Display/Set UART parity function.
- Format:
 - ◆ Query
<Parity>
 - ◆ Set
<Parity> [value]
- Parameter:
 - Setting is valid immediately.
 - ◆ Value: Default: **None**. Can choose NONE, EVEN, ODD.

4.2.1.23. UART/Buf Directory

- Function: Display/Set UART Buffer directory.
- Format:
 - ◆ Tab key query

```
EPORT/UART/Buf>
BufSize GapTime Quit
```

4.2.1.24. UART/Buf/Bufsize Instruction

- Function: Display/Set UART buffer size function.
- Format:
 - ◆ Query
<Bufsize>
 - ◆ Set
<Bufsize> [value]
- Parameter:
 - Buffer is used for cache UART received data. If the received data of one frame is larger than buffer size. The data frame will be break into two packet send to network. Setting is valid after reboot.
 - ◆ Value: Default: **512**. Length range: 32~1400 bytes.

4.2.1.25. UART/Buf/GapTime Instruction

- Function: Display/Set UART free frame gap time.
- Format:
 - ◆ Query
<GapTime>
 - ◆ Set
<GapTime> [value]
- Parameter:

GapTime is used for setting UART free frame time gap. If the received data gap time is more than setting value, the data packet will be broken into two frame.

 - ◆ Value: Default: **50ms**. Length Range: 10~1000ms.

4.2.1.26. UART/Buf/FlowCtrl Command

- Function: Display/Set UART flow control function.
- Format:
 - ◆ Query
<FlowCtrl>
 - ◆ Set
<FlowCtrl> [Enable/Disable]
- Parameter:

Flow control includes software flow control and hardware flow control. Software flow control priority is higher than hardware. If enable software flow control, the hardware flow control pin(CTS/RTS) will be useless. Software flow control use special UART data for control. Hardware flow control use CTS/RTS pin control. Setting is valid immediately.

 - ◆ Flow Control: Flow control function.
 - ◆ Half-Duplex: Enable RS485 half-duplex function, UART0_RTS is used for RS485 chip control function.
 - ◆ Disable: Flow control function. Default: **Disable**.

4.2.1.27. UART/Buf/SWFlowCtrl Command

- Function: Display/Set UART software flow control function.
- Format:
 - ◆ Query
<SWFlowCtrl>
 - ◆ Set
<SWFlowCtrl> [Enable/Disable]
- Parameter:

Enable software flow control function. The device UART can output data After UART received Xon single-byte enable data. When UART received Xoff single-byte disable data. It will disable the device UART output data.

 - ◆ Enable: Enable software flow control function, When in enable status, it allow UART data output when bootup by default.
 - Xon: Enable UART output data. Default: **0x11**.
 - Xoff: Disable UART output data. Default: **0x13**.

- ◆ Disable: disable software flow control function. Default: **Disable**.

4.2.1.28. UART/Cli-Getin Command

- Function: Display/Set Cli command function
- Format:
 - ◆ Query
 - <Cli-Getin>
 - ◆ Set
 - <Cli-Getin> [Serial-String/Always/Disable]
- Parameter:

Set Cli command parameters. Setting is valid immediately.

 - ◆ Serial-String: Enable specific data to enter into Cli command mode.
 - [Input Serial String]: Default: **+++**, Range 1~10 bytes. Also can input hex format data. The HEX data are separated by Spaces, Like **【30 31 32 33 34】**, When it received string data "01234", then It can enter into Cli command.
 - ◆ Always: Always work in Cli command mode when device power on.
 - ◆ Disable: Disable Cli command mode. UART and Telnet both can't use Cli Command.

4.2.1.29. UART/Cli-WaitTime Command

- Function: Display/Set Cli command wait time
 - ◆ Format
 - <Cli-WaitTime>
 - ◆ Set
 - <Cli-WaitTime> [timeout]
- Parameter:

Set Cli command mode timeout exit time. If there is no Cli command sent for the waittime, It will exit Cli command mode to transparent transmission, Setting is valid immediately.

 - ◆ timeout: Default: **300s**, Range 0: Disable WaitTime function, 1~300s.

4.2.1.30. UART/Proto command

- Function: Display/Set UART protocol function
- Format:
 - ◆ Query
 - <Proto>
 - ◆ Set
 - <Proto> [NONE/Modbus/Frame]
- Parameter:

Setting is valid immediately.

 - ◆ NONE: Default: **None**, transparent transmission, the received UART data will be directly sent to network.
 - ◆ Modbus: Modbus RTU to Modbus TCP.

- ◆ Frame: Enable auto-frame function. Relevant parameters are set in Frame command.

4.2.1.31. UART/Frame Directory

- Function: Display/Set UART frame directory.
- Format:
 - ◆ Tab key query

```

EPORT/UART/Frame>
FrameLen      FrameTime      Tag              quit

```

4.2.1.32. UART/Frame/FrameLen Command

- Function: Display/Set UART auto-frame frame length
- Format:
 - ◆ Query
 - <FrameLen>
 - ◆ Set
 - <FrameLen> [value]
- Parameter:
 - Set UART auto-frame length, Setting is valid immediately.
 - ◆ value: Default: **8**, Range: 8~1400.

4.2.1.33. UART/Frame/FrameTime Command

- Function: Display/Set UART auto-frame time
- Format:
 - ◆ Query
 - <FrameTime>
 - ◆ Set
 - <FrameTime> [value]
- Parameter:
 - Set UART auto-frame time, Setting is valid immediately.
 - ◆ value: Default: **100ms**, Range: 100~10000.

4.2.1.34. UART/Frame/Tag Command

- Function: Display/Set UART auto-frame Tag
- Format:
 - ◆ Query
 - <Tag>
 - ◆ Set
 - <Tag> [Enable/Disable]
- Parameter:
 - Set UART auto-frame tag. Only transmit data from tag head to tag tail. Filter the other datas. Setting is valid immediately.
 - ◆ Enable: Enable auto-frame tag function.
 - TagHead: LabelHead. Default: **0x55**, Single byte data.
 - TagTail: LabelTail. Default: **0xAA**, Single byte data.

- ◆ Disable: Default: Value.

4.2.1.35. UART/Edit Command

- Function: Set UART parameter
- Format:
 - ◆ Set

<Edit> [baudrate databits stopbits parity]

- Parameter:
 - Set all UART communication parameter including baud rate, data bit, stop bit and parity.

4.2.1.36. UART/Clean Command

- Function: Clear UART transmit-receive data information
- Format:
 - ◆ Set

<Clean>

- Parameter:
 - Clear the UART data count(Data packet/Frame/Error packet and so on) shown in webpage.

4.2.1.37. SOCK Directory

- Function: Display/Set Socket channel directory.
- Format:
 - ◆ Tab key query

```
EPORT/SOCK>
Show      New      netp    UDP      quit
```

Netp and UDP are created socket channel. Itsupport maximum 5 Sockets.

4.2.1.38. SOCK/Show Command

- Function: Display Socket information function.
- Format:
 - ◆ Query

<Show>

4.2.1.39. SOCK/New Command

- Function: Set new Socket information
- Format:
 - ◆ Set

<New> [name]

- Parameter:
 - There is a default socket created(netp). It support max 5 socket channel. Every channel can be set as TCP/UDP/HTTP and so on. Setting is valid immediately.
 - ◆ Name: Socket name. Range 1~19 characters.
 - Input Sock Proto: Choose one communication method of the following.
 - TCP-SERVER: TCP Server Mode. It support max 5 TCP Client connection.

- TCP-CLIENT: TCP Client Mode. It is used for connecting server.
- UDP-SERVER: UDP Server Mode. Special function. Product will record the last received UDP package source IP and Port information. The received UART data will be send to this IP and port, not the setting Destination .
- UDP-CLIENT: UDP Client Mode.
- HTTP: HTTP Protocol transmission. The received UART data will transform to HTTP format and it will remove the HTTP header information and only output the HTTP data to UART.
- TELNETD: Telnetd Mode. Use Telnet to config the UART Console equipment.
- TLS: **Function is reserved. We will update it soon.**

TCP Server Mode:

- Input Local Port[0]: Set local port, Range 1~65535, 0 is random port. For TCP Server and UDP application, set it to a fixed 1~65535(TCP port 80 is used for its webpage). For TCP Client application, usually set it to 0.
- Input Buffer size[512]: Set Buffer size. Default: 512 bytes, Range:1~1400.
- Input KeepAlive[60]: Set TCP keepalive, Heartbeat time, Defalut 60s, Range: >=0.
- Input Timeout[300]: Set TCP timeout, If exceed setted time and don't received any network data package, It will break TCP connection. If working in TCP client mode, it will reconnect immediately. If it work in TCP server mode, the TCP client need to create the connction. Set this value to 0 is to close the function. The function is used for TCP to restore abnormal connection. Recommend to enable. Default: 300s, Range 0~600.
- Input Sock Security[Disable]: Security options, Used for data special encryption. Default: disable no encryption.
 - Disable: No encryption
 - TLS: TLS1.2 encryption, only support in TCP client mode.
 - AES: AES encryption, TCP/UDP all support this.
 - DES3: DES3 encryption, TCP/UDP all support this.
 - ◆ Input key: AES or DES3 key. For AES encryption, the key is fixed 16 bytes length, the IV value is the same as key. For DES3 encryption, the key is fixed 24 bytes length, the IV value the first 8 Bytes of key. The key can be ASCII or Hex format data. Hex format data need to use "space" character as separator, ex, "01 02 03..."
- Input Rout[uart]: Set the Socket channel output, Can choose UART and other created Socket or use as Log print using.

TCP Client Mode (Only list out difference)

- Input Server Address: Set server IPv4 address or domain name.
- Input Server Port: Set server port
- Input Local Port[0]: Same as above
- Input Buffer size[512]: Same as above
- Input KeepAlive[60]: Same as above

- Input Timeout[300]: Same as above.
- Input Sock Security[Disable]: Same as above
- Set HeartBeat[Disable]: Set Heartbeat function, default is Disable
- Input HeartBeat Serial[F0FE6B1C3D35]: Set Heartbeat content, default is MAC address
- Input Connect Mode[Always]: Set TCP Client connection mode
 - Always: TCP persistent connection. If TCP break, it will reconnect immediately.
 - Burst: It will establish connection once UART received data. If set stop function, It will disconnect after network received stop data.
 - ◆ Input Stop Serial: Set Burst Mode Stop bits. It can be ASCII or Hex format data, Hex format data need use space as separator , 1~10 bytes.
- Input Rout[uart]: Same as above

UDP Server/ UDP Client

HTTP Mode

- Input HTTP type[POST]: HTTP request type. Default: POST. Can choose POST or GET.
- Input HTTP path[/]: HTTP request path, Need start by"/". The longest byte is 63 bytes.
- Input HTTP version[1.0]: HTTP Protocol Version. Default: 1.0, Can choose 1.0 or 1.1
- Input HTTP parameters: Add HTTP head information, end by "Enter" key.If want to end the input, direct input "Enter" key. All HTTP header data length should be less than 250 bytes.

4.2.1.40. SOCK/netp directory

- Function: Display/Set Socket netp channel directory.
- Format:
 - ◆ Tab key query

```

EPORT/SOCK/netp>
Show      Name      Proto      Server      ServerPort
LocalPort BufSize  KeepAlive  Timeout     Security
HeartBeat ConnectMode Rout        Save        Clean
Del       Quit
    
```

Every created Socket channel can be modified through name. The above command function is the same as New Socket command description

4.2.1.41. SOCK/netp/clean Command

- Function: Clear netp channel data packets information
- Format:
 - ◆ Set
 - <Clean>**
- Parameter:

The network data packets information can be checked from webpage. The command will reset the data count.

4.2.1.42. DATA Directory

- Function: Display/Set Cli command mode communication
- Format:
 - ◆ Tab Query

```
EPORT/DATA-Str>
Hex      Quit
```

Default: data sent in ASCII format. Also can change to send by HEX, The command is used for Cli command mode to transfer data.

4.2.1.43. Restart Command

- Function: Restart instruction.
- Format:
 - ◆ Set

<Restart>

4.2.1.44. Reload Instruction

- Function: Restore Factory setting instruction.
- Format:
 - ◆ Set

Reload [SYS/UART/SOCK]

- Parameter:

Reload to factory setting, if add the following parameters, it will only restore corresponding parameters. Parameter can including one of the below three:

 - ◆ SYS: Restore system setting relevant paramter
 - ◆ UART: Restore UART setting relevant paramter
 - ◆ SOCK: Restore Socket relevant paramter

4.2.1.45. WIFI Catalog

- Function: Display/Set WIFI function
- Format:
 - ◆ Tab query

```
EPORT>WIFI
EPORT/WIFI>
Show      Mode      Status  Scan      Quit
```

4.2.1.46. WIFI/Show Command

- Function: Display WIFI status
- Format:
 - ◆ Tab query

```
EPORT/WIFI>Show
===WIFI Status===
Mode:AP
AP SSID:DDDD
Connected

STA SSID:Sam401
Disconnected
```

4.2.1.47. WIFI/Mode Command

- Function: Display/Set WIFI work mode.
- Format:
 - ◆ Query
 - <Mode>**
 - ◆ Set
 - <Mode> [AP/STA/APSTA]**
- Parameter:

Set WIFI work mode. Valid after restart.

 - ◆ AP mode: Default, AP mode
 - Input AP SSID: Input the name of AP, 1~31 characters
 - Input AP Key: Input the password of AP, no password default, 8~63 characters.
 - ◆ STA: STA mode
 - Input STA SSID: Input the name of router, 1~31 character
 - Input STA Key: Input the password of router
 - ◆ APSTA: (reserved)

4.2.1.48. WIFI/Status Command

- Function: Same as Show command.

4.2.1.49. WIFI/Scan Command

- Function: Search the AP nearby.
- Format:
 - ◆ Query
 - <Query>**

```
EPORT/WIFI>Scan
CH, SSID, BSSID, RSSI
11, Caoyu, 78:96:82:A2:C6:A2, 10
11, Sam401, D4:EE:07:2D:14:1E, 100
11, UPGRADE-AP, 20:DC:E6:48:35:9E, 39
10, ChinaNet-yRMx, 38:E3:C5:A2:87:D5, 100
6, xiaohuizi, B0:95:8E:06:CB:16, 34
6, Caoyu, AA:25:93:B8:45:E2, 5
6, Caoyu, D0:C7:C0:24:6C:40, 20
1, TP-LINK_FF03AA, 78:A1:06:FF:03:AA, 15
```

4.2.1.50. Exit Command

- Function: Exit Cli command mode
 - Format:
 - ◆ Set
- <Exit>**

4.2.1.51. Quit Command

- Function: Quit the current and go the father Cli command directory.
 - Format:
 - ◆ Set
- <Quit>**

4.2.1.52. FwUpgrade Instruction

- Function: Upgrade product firmware.
 - Format:
 - ◆ Set
- FwUpgrade [url]**
- Parameter:
Do upgrade function, if upgrade success, it will feedback "Upgrade OK", if fail, output "Upgrade FAIL", reboot to run with new firmware if success
 - ◆ url: firmware url resources, Ex: http://192.168.0.101/mfw.bin

APPENDIX A: REFERENCES

A.1. Test Tools

IOTService Configure Software:

<http://gb.hi-flying.com/downloadsfront.do?method=picker&flag=all&id=8c366199-b599-47a4-8d9c-20fa0b68bfcf&fileId=89&v=0.zip>

UART、Network Test software:

http://www.hi-flying.com/download_list_dc/&downloadcategoryid=14&isMode=false&comp_stats=comp-FrontDownloadsCategory_show01-1376450727769.html

APPENDIX B: TELNET COMMUNICATION FUNCTION

B.1. Telnet Use Scene:

- a) Remote management device
- b) Remote management uart equipment

B.2. Telnet Features:

- a) Telnet support echo mode,
- b) Telnet only support one Client port.
- c) Telnet port number is 23
- d) Telnet connected with TCP, If Client port don't transmit data in 300s, It will auto disconnect.


B.3. Telnet Usage:

Telnet function default as ON, If can't connect, Pls use webpage or configuration to check the function is on or off.




Telnet	
Enable	<input checked="" type="checkbox"/>
Telnet Port	<input type="text" value="23"/>
Echo	<input checked="" type="checkbox"/>


- a) Configure Secure CRT module and connect parameter, Equipment need to connect with LAN, Can use equipment LAN IP to access , If need remote to access the equipment, It need router have public IP address as port and mapped to internal website, Then can remote access equipment.

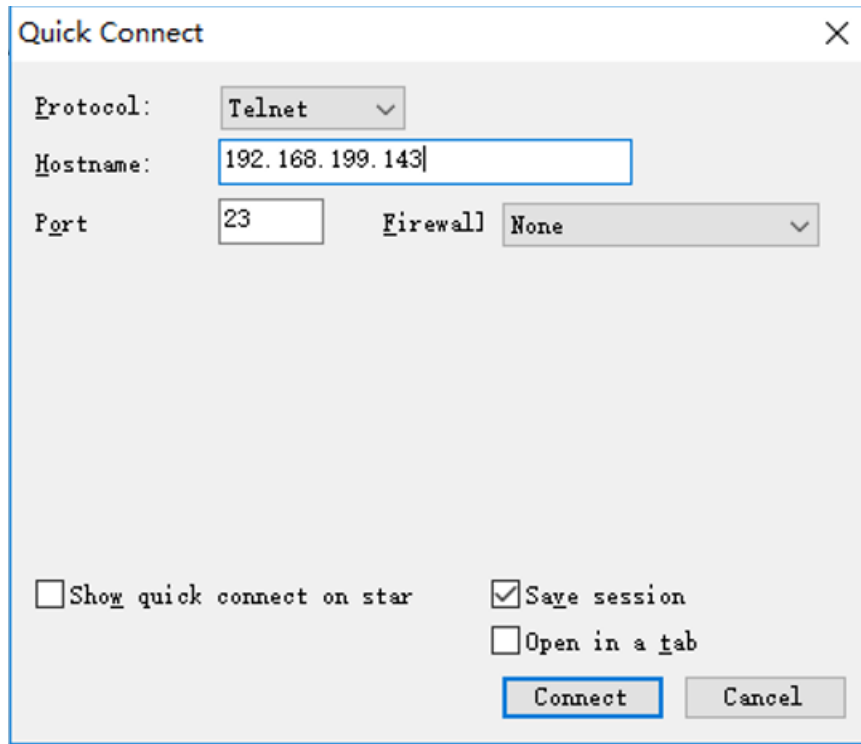

b) Use webpage account and password login in module, Then interface will show “EPORT>” .

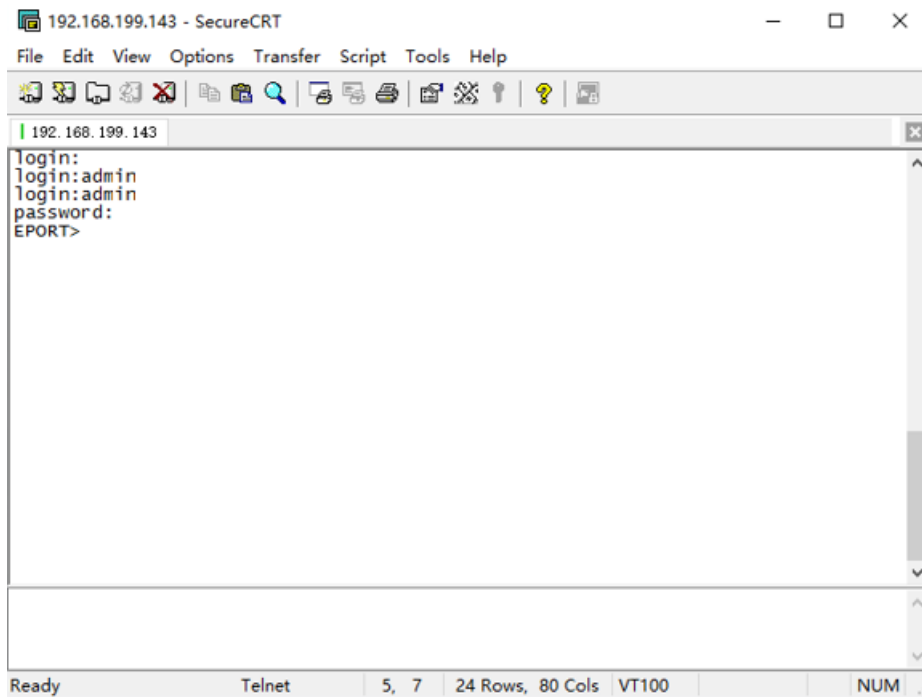


c) Later use are same as UART cli command, And can realise Telnet data with UART data transparent transmission application.,

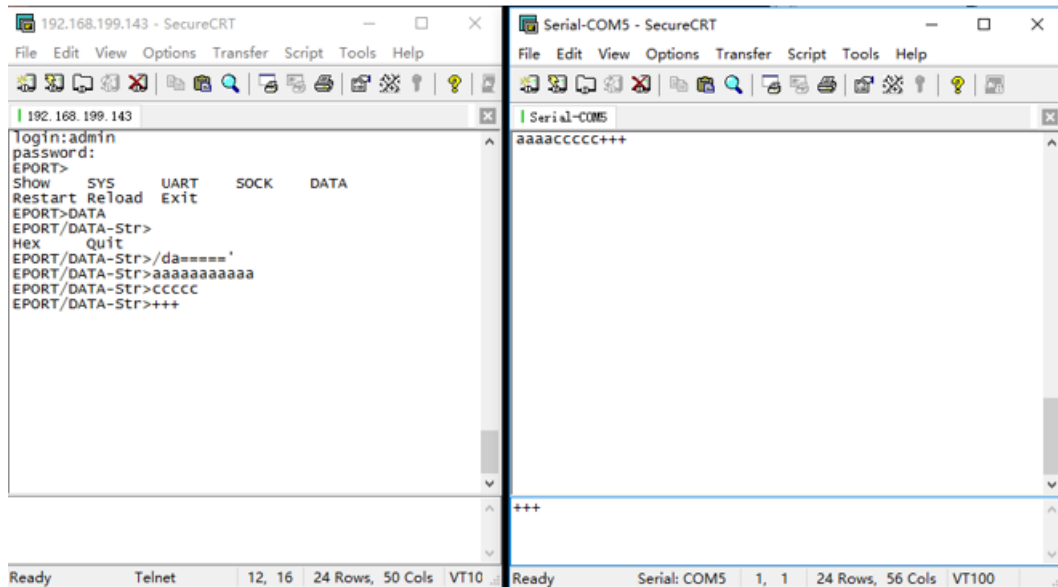

Telnet Software implementation principle:

Step 1 Establish TCP connection with module


Step 2 Module send “login”, Client port send user name(need end with Enter key,Tools can type Ctrl+Enter)

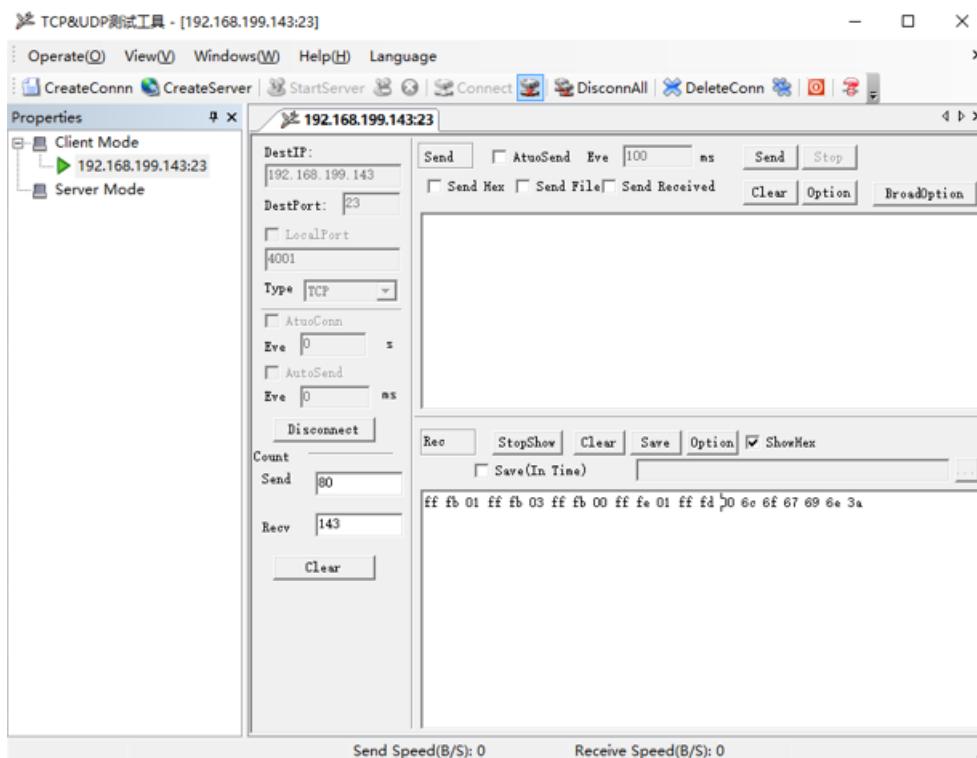

Step 3 Module send 0xFF 0xFB 0x01 Close telnet input display.

Step 4 Module send password, Client port send login password

Step 5 Module send 0xFF 0xFC 0x01 Open telnet input display

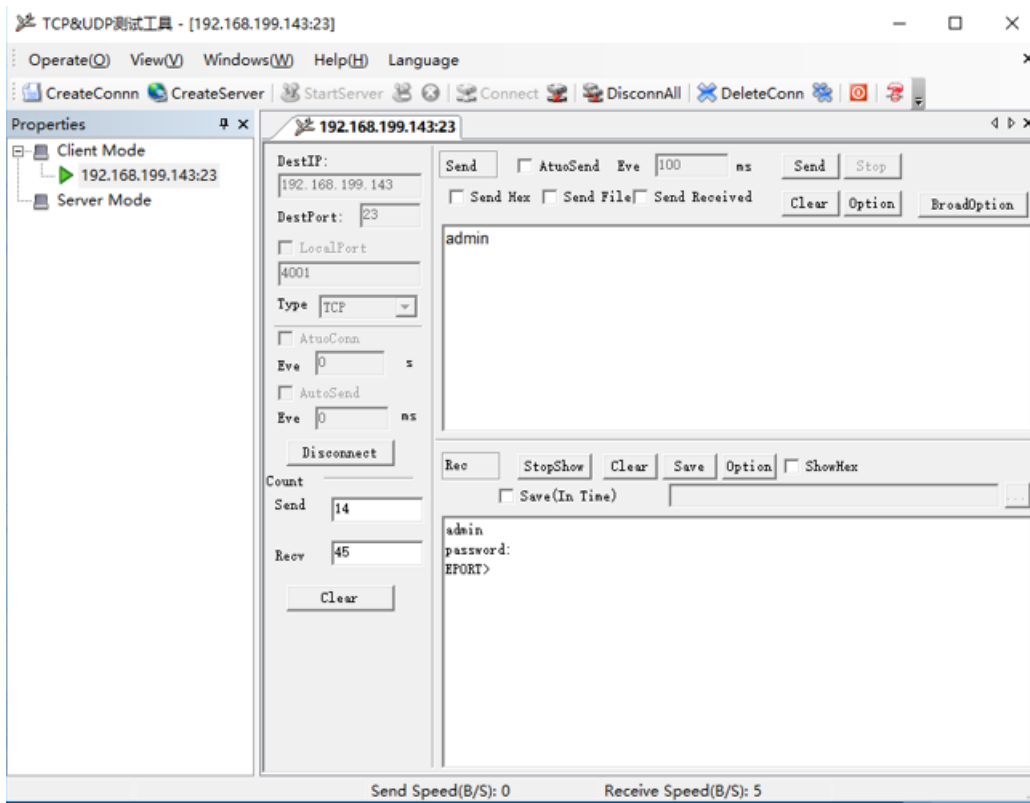

Step 6 It can send and receive Cli command After Enter into Cli command mode.

APPENDIX C: CONTACT INFORMATION

Address: Room 1002,Building 1,No.3000,Longdong Avenue,Pudong New Area,Shanghai,China,201203

Web: www.iotworkshop.com or www.hi-flying.com

Contact:

Sales: sales@iotworkshop.com

Support: support@iotworkshop.com

Service: service@iotworkshop.com

Business: business@iotworkshop.com

For more information about IOTworkshop modules, applications, and solutions, please visit our web site www.iotworkshop.com

<END OF DOCUMENT>